 




MAINE BEACH RUBY Aromatherapy Diffuser User Manual

[Home](#) » [MAINE BEACH](#) » MAINE BEACH RUBY Aromatherapy Diffuser User Manual 

MAINE BEACH RUBY Aromatherapy Diffuser

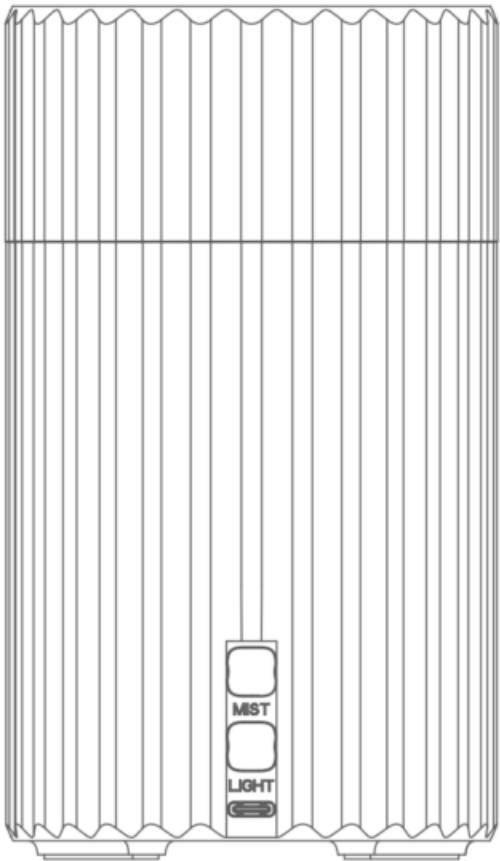 


Contents

- 1 PRODUCT STRUCTURE
- 2 HOW TO USE
- 3 SAFETY INSTRUCTIONS
- 4 PRECAUTIONS
- 5 WARNINGS
- 6 TROUBLESHOOTING
- 7 SPECIFICATIONS
- 8 CARE AND MAINTENANCE
- 9 WARRANTY
- 10 CUSTOMER SUPPORT
- 11 Documents / Resources
 - 11.1 References


PRODUCT STRUCTURE

- A. Reservoir lid
- B. Main body
- C. Mist button
- D. Light button
- E. USB port
- F. Mist outlet
- G. Water reservoir
- H. USB Type-C cable
- I. Air outlet

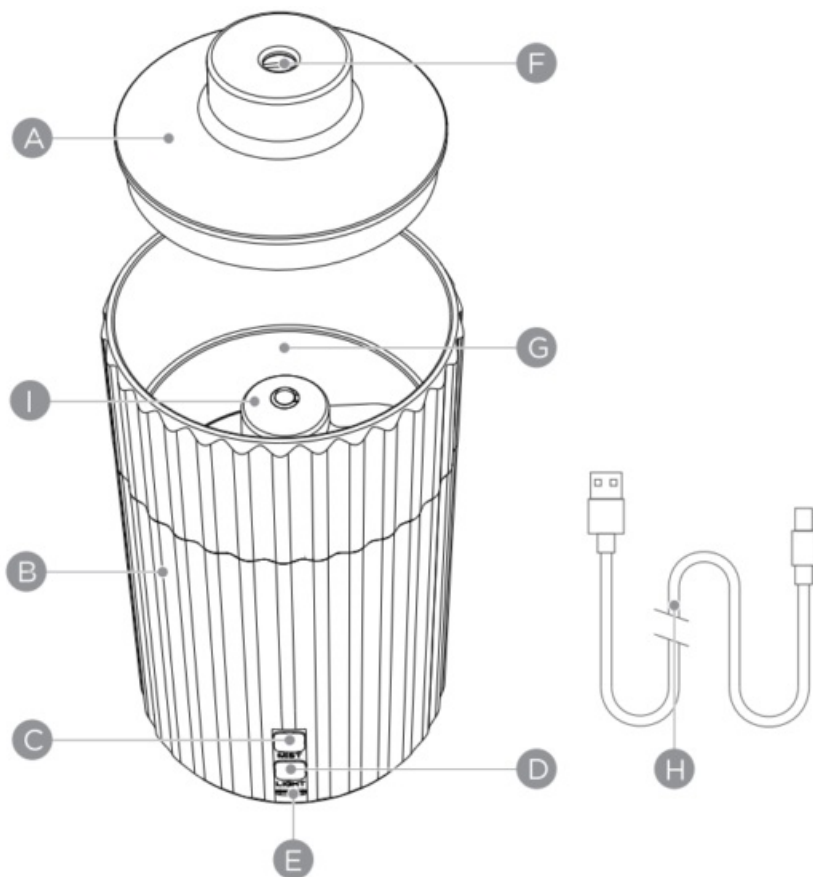


HOW TO USE

 
1. Place the Diffuser on a flat surface. Then remove the lid.

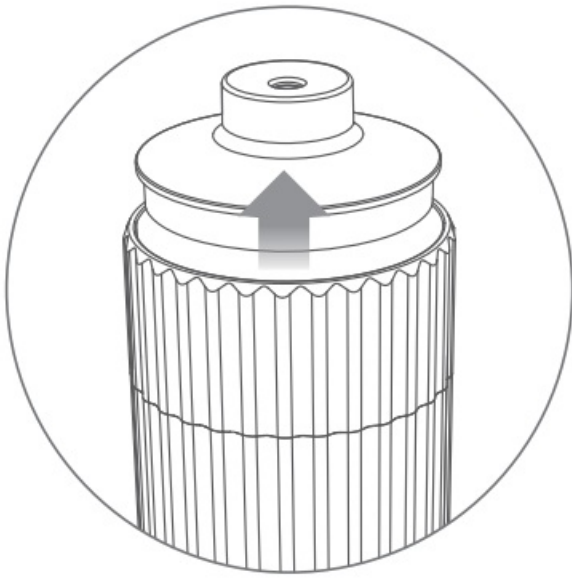

2. Add 100mL of water and 5 to 10 drops of essential oil into the water reservoir. Do not exceed the maximum water level and don't use water above 60°C.

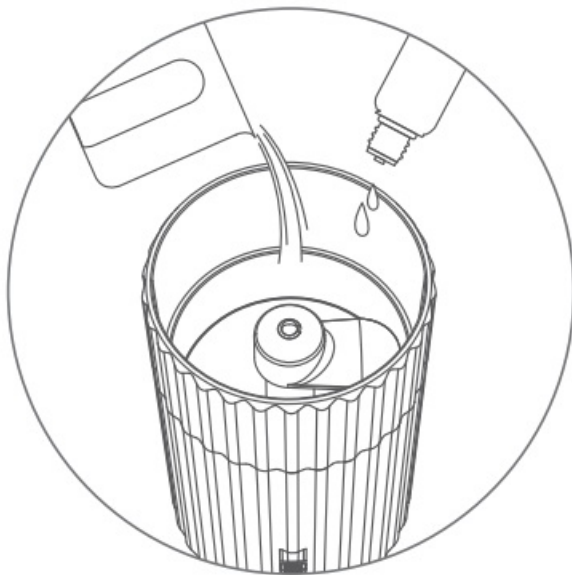


3. Put the lid back on, then connect the Diffuser with the USB Type-C cable to a USB plug to power on.

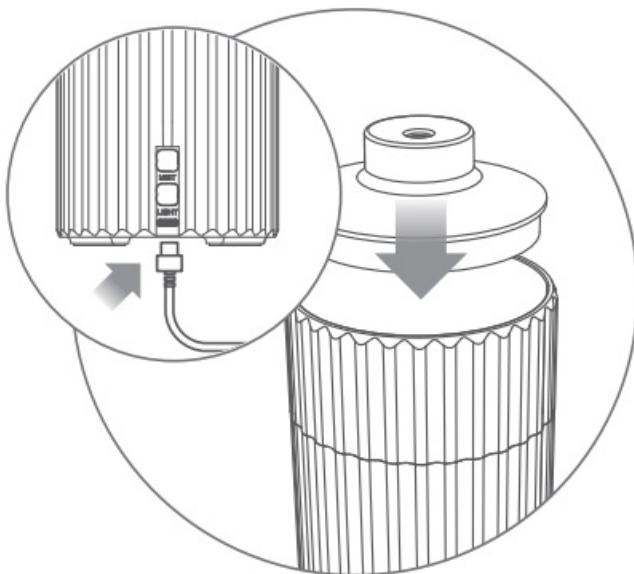

4. MIST BUTTON


- First press turns on the light and the mist to continuous mode.
- Second press turns the Diffuser to intermittent mist mode (30s on and 30s off).
- Third press turns off the light and mist.

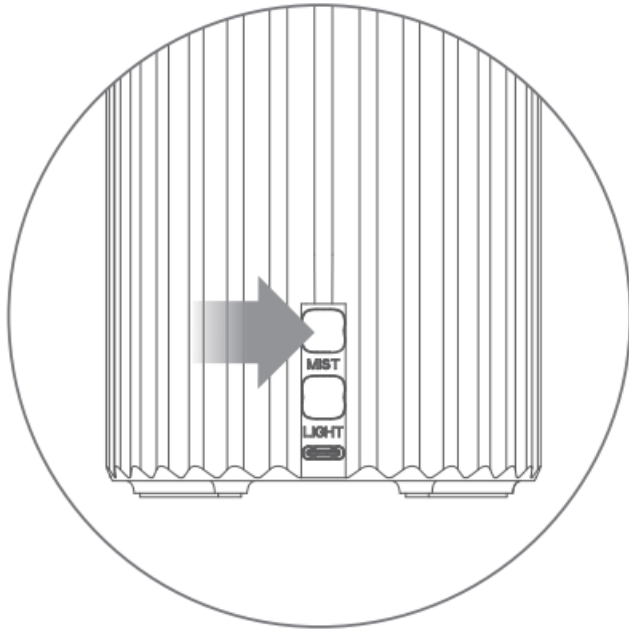

5. LIGHT BUTTON

The light button is only effective when MIST is turned on.

- First press turns the LED light to 50% brightness.
- Second press turns the LED light to 25% brightness.
- Third press turns off the LED light.
- Fourth press turns on the LED light to 100% brightness.

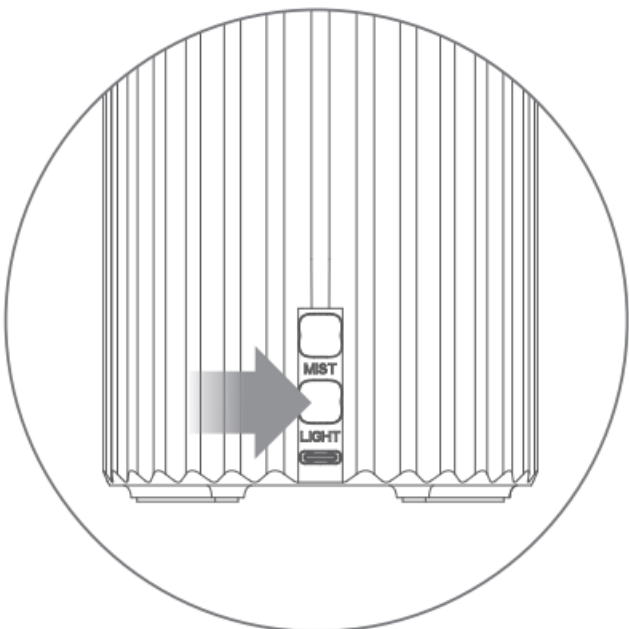

SAFETY INSTRUCTIONS

- Unplug the Diffuser during filling, moving and cleaning.
- The appliance must only be powered at the specified low voltage corresponding to the appliance specification.
- Only use the USB cord supplied with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children should be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

PRECAUTIONS

- The appliance must be placed on a stable, flat surface, where it will not be a hazard to others. Avoid wooden or polished furniture or objects that may be damaged by water.
- Never attempt to disassemble, repair or modify the product as this may void your warranty and create a shock hazard. Contact customer service if repair is required.
- It is strictly forbidden to add other chemical solvent bodies to the product. It is only suitable for tap water and pure water liquid.
- Do not spray the product fog directly on furniture, clothing walls and other objects.
- Do not directly place the product on the wooden floor to avoid damp deformation and damage.
- Never leave water in the reservoir when the appliance is not in use.
- Take care when handling the appliance to avoid breakage. Accidental damage is not covered under the warranty.
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.

WARNINGS

- Keep out of reach of children and pets.
- Do not cut, damage or modify the power cord or put any weight on the power cord. If damaged, contact customer service.
- In case of any abnormal observation, such as odor and/or noise, immediately stop use and disconnect from power.
- Do not touch the water in the reservoir or the ultrasonic disc when the appliance is plugged in.
- Do not add other liquids or chemical solvents to the appliance. Only suitable for tap water.
- Do not cover the mist outlet when the appliance is operating.
- Do not immerse the appliance in water or other liquids.
- Do not allow essential or fragrance oils to come in to direct contact with Diffuser surface or outer casing. Please wipe with a damp cloth immediately if any pure oils are accidentally dropped on to the surface to avoid discoloration/possible corrosion.
- After operating for 4 hours on continuous mode or 8 hours on intermittent mode, the appliance should be rested for at least 60 minutes to avoid damage of atomizing components.
- Do not add water above 60°C into the water reservoir to avoid damaging the product.
- Never leave water in the reservoir when the appliance is not in use.
- Do not permit the area around the appliance to become damp or wet. If dampness occurs, turn the output of the appliance down or use intermittently.

If the appliance is accidentally knocked over during operation, please follow the following procedures:

- Turn off and open the lid immediately.
- Pour out the remaining water from the reservoir and wipe clean.
- In case of water entering the air outlet or the appliance base, shake the appliance softly upright to allow the

water to come out from the drain hole on the base.

- Place the device in a dry place and allow it to completely dry out before using again.

TROUBLESHOOTING

When the product does not work properly, please refer to the following conditions to troubleshoot:

The mist button is on, with low or no mist. The Diffuser has shut off automatically.	Possible cause: Lack of water or not enough water. Solution: Add water into the water tank.
The mist button is on, mist is lower or abnormal.	Possible cause: Too much water. Solution: Don't add water more than the MAX line. Possible cause: Dirt on ultrasonic plate. Solution: Wash water tank and ultrasonic plate (refer to Care and Maintenance). Possible cause: Air intake on the bottom covered or blocked. Solution: Clear the blockage, and put product on the flat solid surface, avoid any objects which may block the air intake.
Leaking water	Possible cause: The water reservoir lid is not fitted correctly. Solution: Cover the lid well.

SPECIFICATIONS

Product Size:	(D)BB. 55mm x (H)153.8mm
Voltage:	DC 5V / 1A
Power Output:	-SW
Net Weight	-0.235kgs
Capacity:	100ml
Mist output:	10-25ml/h
Material:	ABS+PP
Accessories:	USB Type-C cable, user manual

CARE AND MAINTENANCE

In order to maintain the best performance of the Diffuser, the water reservoir and ultrasonic plate of the Diffuser should be cleaned regularly.

1. Always turn off and unplug the Diffuser.
2. Remove the top lid.
3. Pour the remaining water out of the tank avoiding the air outlet.
4. Use a small amount of mild kitchen detergent with water, wring out a soft cloth after immersing it into water, and

then wipe the product with the cloth softly, and dry the product with another clean soft cloth.

5. Do not immerse the product into water.
6. Gently remove any possible mineral deposit or build up from the ultrasonic plate with a moist cotton swab or a soft cloth.

The ultrasonic plate must not come in contact with hard or sharp objects.

When the product is not used, do not leave stagnant water inside the reservoir. Clean and dry all parts, then store in a dry and cool place.

Microorganisms that may be present in the water or in the environment where the appliance is used or stored, can develop in the water reservoir and expel into the air causing serious health risks. To prevent this, the water reservoir **MUST** be cleaned properly every 3 days.



WARRANTY

We offer a 1-year warranty on our Aromatherapy Diffuser against manufacturing defects from the date of purchase. Proof of purchase is required for all warranty claims. Any misuse due to not following the precautions, warnings, safety, care, and maintenance instructions are deemed not under warranty.

Please contact Head Office for maintenance or warranty claims at info@cocco.com.au

CUSTOMER SUPPORT

MAINE BEACH | COCCO CORPORATION
33c INGOLDBY ROAD, McLAREN FLAT, S.A. 5171
AUSTRALIAN OWNED & DESIGNED.

MADE IN PRC

INFO@MAINEBEACH.COM.AU



CE

FC

RoHS

MAINE BEACH



[MAINE BEACH RUBY Aromatherapy Diffuser](#) [pdf] User Manual
RUBY Aromatherapy Diffuser, RUBY, Aromatherapy Diffuser, Diffuser

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.