




# MAJORITY DX10 PC Computer Speaker User Manual

[Home](#) » [MAJORITY](#) » MAJORITY DX10 PC Computer Speaker User Manual 

## MAJORITY USER MANUAL DX10

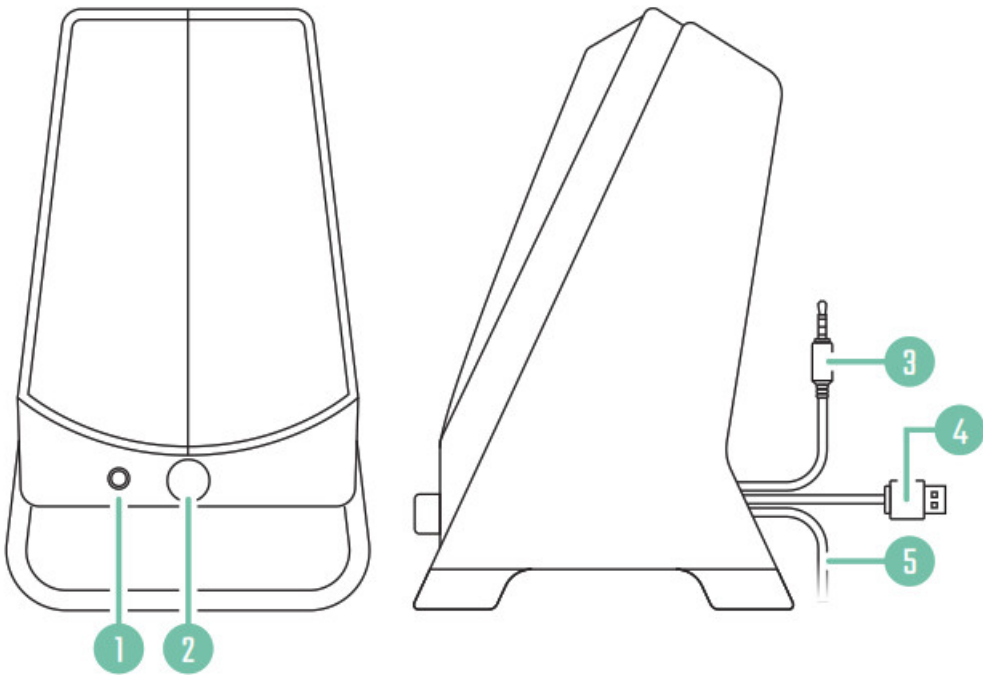

1. AUX/Headphone Port  
2. On/Off | Volume Dial  
3. AUX Cable

4. USB Cable  
5. Speaker Connector Cable

- To provide power, plug in the USB cable (Ref.4) to a USB power source.
- To switch on, turn the On/Off dial (Ref.2) clockwise until you feel a click.

- Use the AUX cable (Ref.3) to plug into a laptop, desktop computer or other AUX audio device.

## Contents

### 1 SAFETY INFORMATION

### 2 Documents /

### Resources

### 3 Related Posts

## SAFETY INFORMATION

1. Read these instructions.
2. Keep these instructions. Instructions are also available for download at [www.majorityradios.co.uk](http://www.majorityradios.co.uk)
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

## ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus. The mains plug is used to disconnect the device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

## RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

**IMPORTANT:** Please read all instructions carefully before use and keep them for future reference.



Risk of electric shock.

Do not open



Read all instructions carefully before use and keep them for future reference



When servicing, use only identical replacement parts



**IMPORTANT:** Please read all instructions carefully before use and keep for future reference

# MAJORITY

[www.majorityradios.co.uk](http://www.majorityradios.co.uk)

## Documents / Resources



[MAJORITY DX10 PC Computer Speaker](#) [pdf] User Manual  
DX10, PC Computer Speaker

[Manuals+.](#)