



Majority BCX10 Portable Boombox with Cassette, CD Player and FM Radio User Manual

[Home](#) » [MAJORITY](#) » Majority BCX10 Portable Boombox with Cassette, CD Player and FM Radio User Manual 

Contents

- [1 Majority BCX10 Portable Boombox with Cassette, CD Player and FM Radio](#)
- [2 PRECAUTIONS BEFORE USE](#)
- [3 FEATURES AND CONTROLS](#)
- [4 BEFORE FIRST USE](#)
- [5 OPERATING INSTRUCTIONS](#)
- [6 CARE AND MAINTENANCE](#)
- [7 TROUBLE SHOOTING](#)
- [8 TECHNICAL SPECIFICATION](#)
- [9 SPECIFICATIONS](#)
- [10 WARRANTY](#)
- [11 ADDITIONAL WARNINGS](#)
- [12 RECYCLING ELECTRICAL PRODUCTS](#)
- [13 DOWNLOAD](#)
- [14 Related Posts](#)

Majority BCX10 Portable Boombox with Cassette, CD Player and FM Radio



USER MANUAL

PORTABLE CD & CASSETTE PLAYER
MODEL NO.: CD-20 (UK+EU)

WARNING:

CLASS 1 LASER PRODUCT

- CLASS 1 LASER PRODUCT
- APPAREIL A LASER DE CLASSE 1
- PRODUCTO LASER DE CLASE 1

CAUTION:

INVISIBLE LASER RADIATION WHEN! OPEN AND INTERLOCKS DEFEATED.
AVOID EXPOSURE TO BEAM

This product contains a low power laser device.

Warning:

- Do not touch the lens.
- DO NOT THROW BATTERIES IN FIRES !

CAUTION

Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

PRECAUTIONS BEFORE USE

KEEP THESE INSTRUCTIONS IN MIND:

1. Do not cover or block any ventilation openings. When placing the device on a shelf, leave 5 cm (2") free space around the whole device.
2. Install in accordance with the supplied user manual.
3. Keep the device away from heat sources such as radiators, heaters, stoves, candles and other heat-generating products or naked flame. The device can only be used in moderate climates. Extremely cold or warm environments should be avoided. Working temperature between 0°C and 35°C .
4. Avoid using the device near strong magnetic fields.
5. Electrostatic discharge can disturb normal usage of this device. If so, simply reset and restart the device following the instruction manual. During file transmission, please handle with care and operate in a static-free environment.
6. Warning! Never insert an object into the product through the vents or openings. High voltage flows through the product and inserting an object can cause electric shock and/or short circuit internal parts. For the same reason, do not spill water or liquid on the product.
7. Do not use in wet or moist areas such as bathrooms, steamy kitchens or near swimming pools.
8. The device shall not be exposed to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on or near the apparatus.
9. Do not use this device when condensation may occur. When the unit is used in a warm wet room with damp, water droplets or condensation may occur inside the unit and the unit may not function properly; let the unit stand in power OFF for 1 or 2 hours before turning on the power: the unit should be dry before getting any power.
10. Although this device is manufactured with the utmost care and checked several times before leaving the factory, it is still possible that problems may occur, as with all electrical appliances. If you notice smoke, an excessive build-up of heat or any other unexpected phenomena, you should disconnect the plug from the main power socket immediately.
11. This device must operate on a power source as specified on the specification label. If you are not sure of the type of power supply used in your home, consult your dealer or local power company.
12. Keep away from animals. Some animals enjoy biting on power cords.
13. To clean the device, use a soft dry cloth. Do not use solvents or petrol based fluids.
To remove severe stains, you may use a damp cloth with dilute detergent.
14. The supplier is not responsible for damage or lost data caused by malfunction, misuse, modification of the device or battery replacement.
15. Do not Interrupt the connection when the device is formatting or transferring files. Otherwise, data may be corrupted or lost.
16. If the unit has USB playback function. the USB memory stick should be plugged into the unit directly. Don't use an USB extension cable because it can cause interference resulting in failing of data.
17. The rating label has been marked on the bottom or back panel of the device.
18. This device is not intended for use by people (including children) with physical, sensory or mental disabilities. or a lack of experience and knowledge, unless they're under supervision or have received instructions about the correct use of the device by the person who is responsible for their safety.
1g_ This product is intended for non professional use only and not for commercial or industrial use.
19. Make sure the unit is adjusted to a stable position. Damage caused by using this product in an unstable

position vibrations or shocks or by failure to follow any other warning or precaution contained within this user manual will not be covered by warranty ..

20. Never remove the casing of this device.
21. Never place this device on other electrical equipment.
22. Do not allow children access to plastic bags.
23. Only use attachments/accessories specified by the manufacturer.
24. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as the power supply cord or the plug, when liquid has been spilled or objects have fallen into the device, when the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
25. Long exposure to loud sounds from personal music players may lead to temporary or permanent hearing loss
26. If the product is delivered with power cable or AC power adaptor:
 - If any trouble occur, disconnect the AC power cord and refer servicing to qualified personnel.
 - Don't step on or pinch the power adaptor. Be very careful, particularly near the plugs and the cable's exit point. Do not place heavy items on the power adaptor, which may damage it. Keep the entire device out of children's reach! When playing with the power cable, they can seriously injure themselves.
 - Unplug this device during lightning storms or when unused for a long period.
 - The socket outlet must be installed near the equipment and must be easily accessible.
 - Do not overload ac outlets or extension cords. Overloading can cause fire or electric shock.
 - Devices with class 1 construction should be connected to a main socket outlet with a protective earthed connection.
 - Devices with class 2 construction do not require a earthed connection.
 - Always hold the plug when pulling it out of the main supply socket. Do not pull the power cord. This can cause a short circuit.
 - Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
27. If the product contains or is delivered with a remote control containing coin/cell batteries:

Warning:

- Do not ingest battery, Chemical Burn Hazard" or equivalent working.
 - [The remote control supplied with] This product contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
 - Keep new and used batteries away from children.
 - If the battery compartment does not close securely, stop using the product and keep it away from children.
 - If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
28. Caution about the use of Batteries:
 - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
 - Battery cannot be subjected to high or low extreme temperatures. low air pressure at high altitude during use, storage or transportation.
 - Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
 - Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
 - Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or that leakage of flammable liquid or gas.

 
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Attention should be drawn to the environmental aspects of battery disposal.

 
29. INSTALLATION

- Unpack all parts and remove protective material.
- Do not connect the unit to the mains before checking the mains voltage and before all other connections have been made.

FEATURES AND CONTROLS

1. Product Review and Accessories

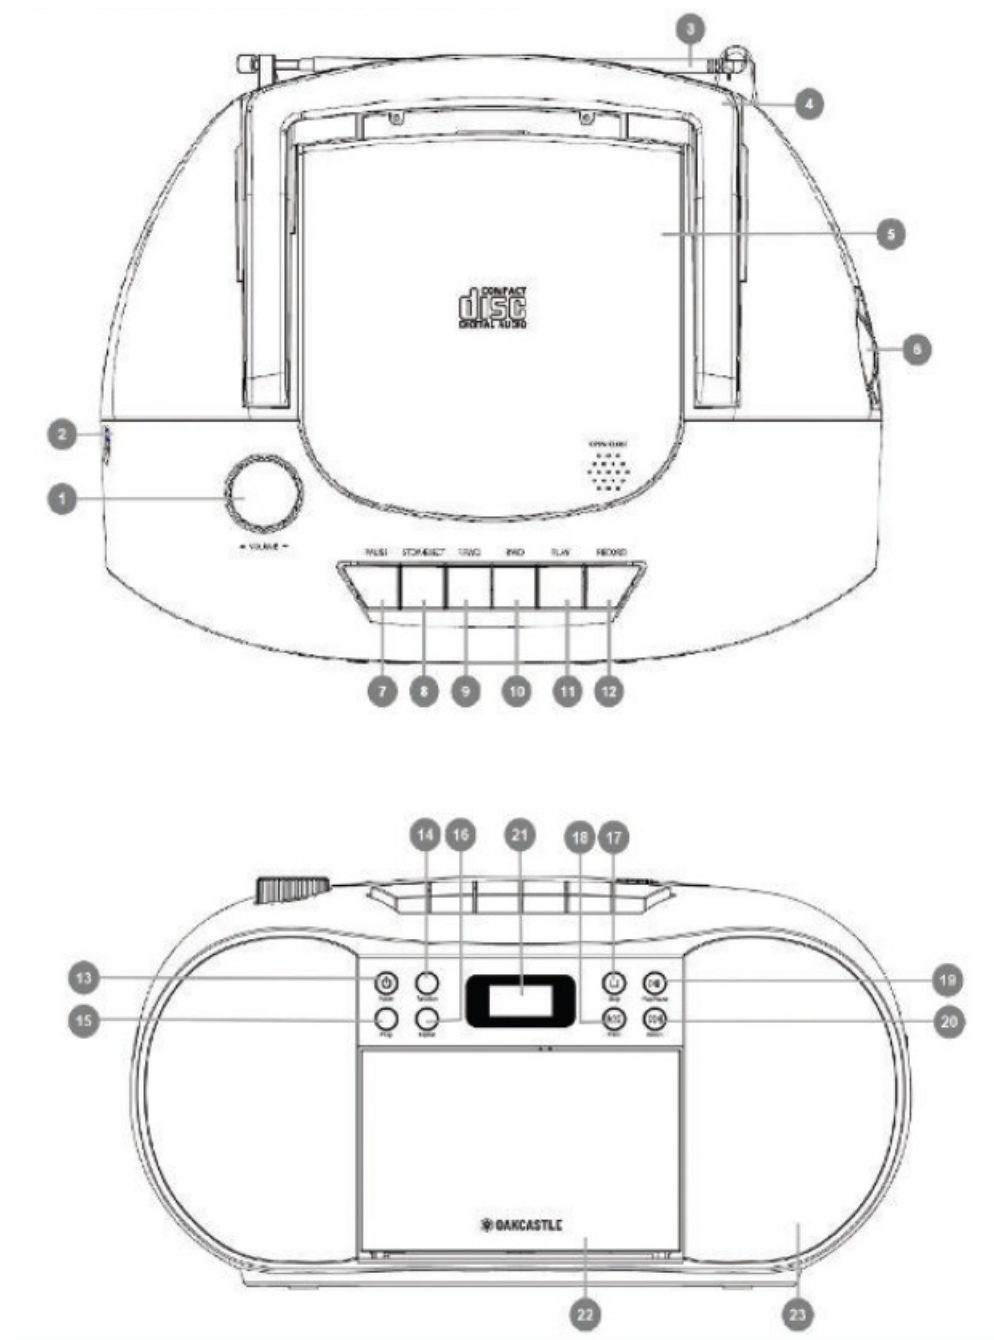

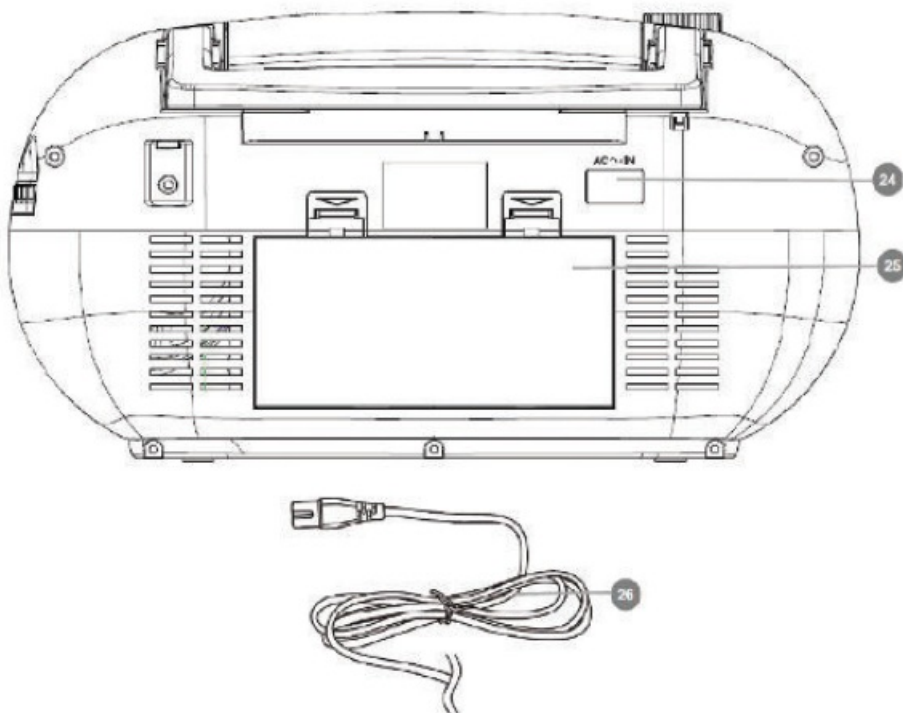

1. VOLUME knob	14. FUNCTION select button
2. 3.5mm headphone socket	15. PROG. button (CD/FM)
3. Telescopic antenna	16. REPEAT button (CD)
4. Carrying handle	17. STOP ■ button (CD)
5. CO compartment lid	18. PREV /- I ◀ ◀ button (CD/FM)
6. TUNING dial	19. PLAY/PAUSE ▶ II button (CO)
7. PAUSE button (cassette)	20. NEXT/+ ▶ ▶ I button (CD/FM)
8. STOP/EJECT button (casSi!tte)	21. LCD display
9. F.FWD button (cassette)	22. Cassette compartment
10. RWO button (cassette)	23. Speakers
11. PLAY button (cassette)	24. AC IN socket
12. RECORD butt0<1 (cassette)	25. Batte-ry compartment
13. POWER <I> button	26. Detachable po'Ner cord

BEFORE FIRST USE

1. Unpacking

- Remove all packaging_.
- Plausa k~p the paekuging. The piOducl wi, w stof'ai.J in it tr it is nol usEld r~ u klr.ga, pa!'iod lim8.
- Place the product on a level, stable, dean and c,ry surface.
- Do o::,l u)'!1ova any labuls o' slickafs on me back panels Of UIY muio u11iL

2. Power supply

 
NOTE: Do not use the product with socket-outlet and batteries at the same time. Remove batteries before connecting the product to main power.

■ Remove all packaging

■ Do not Plug or unplug the power cable in wet hands.

■ Please keep the packaging. The Product can be stored in it. If it is not used for a longer period of time


■ Insert the power cable into AC socket at the back of product. Connect the power plug to a suitable electrical outlet. Make sure that the Power supply voltage is the same as needed by the product.

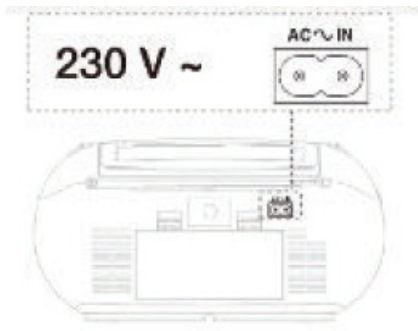

3. Battery operation

■ Open the battery compartment at the bottom of the product

 ■ Insert 6 batteries (12V, 8 x 1.5V, type C) (not supplied) according to the polarity markings, inside the battery compartment and on the batteries.

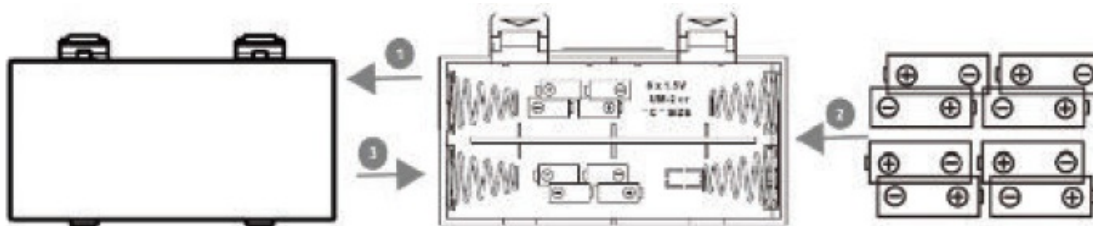

- Use batteries of high quality only. Batteries of low quality might leak and cause damage. Do not use new and old batteries together. Close the compartment lid after inserting the batteries.
- The product is now ready for operation.
- **IMPORTANT.** Do not use the product with an electrical outlet and batteries at the same time. Remove batteries before connecting the product to mains power and remove cable. If the product is to be powered by batteries.
- The product draws a small amount of power even if it is not turned on. If you do not use the product for a long period of time, disconnect the power plug or remove all batteries.
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- **CAUTION.** Do not touch the battery terminals if the battery is incorrectly replaced.

NOTE: The batteries need to be replaced when: a) The battery indicator shows, 01 starlight is displayed on the display. b) Remove the batteries if they are exhausted.

OPERATING INSTRUCTIONS

1. Switching On and Off

- Power the product on. Press the **POWER** button, the LCD display lights up. When the CD mode is selected

while no CD is inserted. the LCD display flashes – – then shows 'coed' steadily

- Power the product off Press the **POWER** button. the LCD display go off To completely off the product, disconnect the WNW plug Sore the elesArirml outlet or leirrxrie the hetteries

2. Setting Volume Level

- Adjust the volume by fOlabng We **VOLUME** knob.

Volume level	Setting
Inn-nese volime	Clockwise, (in + ciredion)
Decrease volume	Anti-clockwise -direction)

CAUTION: High volumes may memo separable damage to your heering

3. FM Radio Operation

3.1 Manual Station Selection

The product G equipped with a telesovic antenna located at true back or the product. Pull out Ma ant, and rotate to achieve the best FM channel reception.

- Pre. the **FUNCTION** button to select The **FM** mode. The LCD will show 'FM' along with the radio h
- kotabng the **TUNING** knob or press PREV /- I ◀ ◀ Or NEXT/+ ▶ ▶ I Button stop try step to turn to the stations

3.2 Search Station Operation

- Scrolling the **TUNING** knoh to quick reach the desired frequency. Or press and hold the PREV /- I ◀ ◀ Or NEXT/+ ▶ ▶ I Outten for approx. 1 second, It will start to search the next radio station in the direction a the search.
- The search operation simply finds stations with strong stone's Stations with weak reception can manually.

3.3 FM Stereo

- When hen to a **FM** Stereo SroerlOast. 'ST' will he shown on the **LCD** display

3.4 Memorize Radio Stations (Manually)

- Tune to Me desired station
- Long press PROD button, the LCD display will show 'PDT and 'PROD' is nashng.
- Press PREVI. i41 or NEXT/. 01 button and select the desired number of your program
- Press FROG button in store the radio Anti«, in the memory.
- Repeat steps above to store more tracks ri memory. You can store up to 20 radio station in the memory.
- I/ another stallion is already assigned to Me selected preset number, that station *replaced by the new one.

3.5 Memorize Radio Stations (Automatically)

Long press **PLAY/PAUSE** ►|| button. the radio will simply finds stations with strong signals. these stations are stored in memory from lower frequencies to higher ones

You need to memorize a station with a weak signal manually.

3.6 Select the Radio Stations in the Program (Program Play)

Press **FREQ** button for the radio station memory and press /- I ◀ ◀ Or NEXT/+ ► ► I button through the programmed station. the display will show 'PULL to c.', select the number to listen to the programmed stations.

4. CD Operation

This product supports CD, CD-R, RW discs. Other discs are not supported by this product.



- When playing CD-R or RW disc, the playback quality may be influenced by the quality of the burned disc. When burning CD-R or RW disc, with this device it is recommended to use the slowest burning speed.
- The product automatically powers off about 18 minutes after

– finishing the last playback for CD operation

– pressing the PLAY/PAUSE ►|| button to pause playback

– Pressing the STOP ■ button to stop playback

4.1 Inserting and Removing a CD

- Flip the carrying handle back, before open the CD compartment lid
- Press the FUNCTION button to the CD Mode, The LCD displays Flashes

Process	Display
No CD inside.	'NoCD'
CD compartment opened.	'OPEN'
Insert CD and reading.	'—'
CD is read (Audio CD)	Total number of tracks appears (i.e. 18).
CD is unable read 1 damaged CD	'Err'

NOTE: Press the STOP button before removing the CD inside.











4.2 Playing a Disc

Process	Display
Insert CD.	CD
CD is read (Audio CD).	Total number of tracks appears (i.e. '18')
Starting the playback (autoplay).	2-3 seconds autoplay, the first track (i.e. '01') appears and the playback symbol '▶' shows in the left corner.
Pausing the playback: Press the PLAY/PAUSE ▶ button.	The playback symbol '▶' keeps flashing.
Continuing the playback: Press the PLAY/PAUSE ▶ button again. The playback continues with the same track as before.	The playback symbol '▶' keeps playing.
Stopping the playback: Press the STOP ■ button.	Total number of tracks appears (i.e. '18').
Press the PLAY/PAUSE ▶ button again. The playback re-starts with the first track.	Number of the first track (i.e. '01') reappears and the playback symbol '▶' shows in the left corner.

Key	Press key	Description
NEXT/+ ⏭ button Or TUNING knob (Anti-clockwise)	1 x	Skip to the next track. The playback starts playing the chosen track.
PREV/- button Or TUNING knob (Clockwise)	1 x	Skip to the beginning of the current track
PREV/- ⏮ button Or TUNING knob (Clockwise)	2 x	Skip to the previous track. The playback starts playing the chosen track.
PREV/- ⏮ or NEXT/+ ⏭ button Or TUNING knob	Repeatedly	Press until the desired track number is shown on the LCD display. The playback starts playing the chosen track.
PREV/- ⏮ or NEXT/+ ⏭ button	Press and hold	Press and hold to fast forward/backward in order to find a particular position within a track. Let go when you reach the desired position. Playback will now continues from this position.

  Key	Press key	Description
PREV/- ⏮ button	1 x	Skip to the next track to review.
NEXT/+ ⏭ button	1 x	Skip to the previous track to review.

4.3 Programmed Playback

Step	Description
1. Press the PROG. button.	'P01' flashes on the LCD display. The 'PROG' keeps flashing.
2. Press PREV/-  or NEXT/+  button to select the first track to be programmed	The selected track number appears (i.e. '01'). The 'PROG' keeps flashing
3. Press the PROG. button to confirm your choice and save into the program memory;	'P02' flashes. The 'PROG' keeps flashing.
4. Repeat the steps above to save more tracks into the program memory.	When finished the memory or the memory is full to 20 memory, the display will show 'FUL'. The 'PROG' keeps flashing.
5. Press PLAY/PAUSE  button to start the programmed playback in the desired order.	Number of the currently played track and the playback symbol '  ' appears. The 'PROG' stops flashing and keeps steadily.
6. Press PLAY/PAUSE  button to pause the programmed playback.	The playback symbol '  ' flashes.
7. Press PLAY/PAUSE  button again. The playback continues with the previous track	The playback symbol '  ' keeps steadily.
8. Press the STOP  button to stop the programmed playback.	Total number of tracks appears. The 'PROG' keeps steadily.
9. Press the STOP  button again to clear the programmed playback.	Total number of tracks appears. The 'PROG' goes off.

Repetition and Random Playback of Tracks

- The repeat function allows repeated playback of a track or the entire content of a disc di.li~ nonnal playback "" pmgmmmed playback. Press REPEAT button to activate one of the roltowilYJ hmc:fions. • Press the **REPEAT** button dun"" normal " 1""-baCk or ,,,,,,,rammoo otavbaek to re""l me traeks .

Key	Description
REPEAT button	Press 1 x: repeat one title. 'REP' appears under the currently played track and then starts flashing.
	Press 2 x: repeat all titles. 'REP' under the currently played track keeps lit steadily.
	Press 3 x: random play. 'RANDOM' appears under the currently played track
	Press 4x: repeat cancelled. Repeat or random function cancelled

4.5 Compact Discs

- Treat compact disk carefully. Hurdle burn only by their edges. Never Inch the shiny, unlabelled side of the disc by you *gem
- Only hold the CD on the edges
- U0 net put adhesive tape, stickers etc. on enter soda 01 a disc.
- Clean cr,scs periodically with soft, lint-free and dry cloth. Never use detergents or abrasive cleaners to clean discs. If it is necessary, use a CD darning kiL
- If a disc stops or gets stuck during playback. it is probably dirty cc damaged_
- When cleaning a case, wipe in straight lmes Ma the centre et the disc to its edge. Never wipe in ClICUlaf motions.
- When removing a disc from its storage case, press down on the centre of the case end lift the disc out, holding

it carefully by its edges

- Fingerprints and dust should be carefully wiped off the discs recorded side with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust so gently wiping with a piece of soft cloth should remove most particles

5. Cassette Operation

This Product plays tapes in the format Compact Cassette. The product does not support other tape formats. When playing home recorded cassettes the playback quality might be influenced by the quality of the recording equipment and of the blank cassette used

5.1 Inserting and Removing a Cassette

- Press the FUNCTION button to select 'TAPE' mode. The LCD will show 'TAPE'.
- Open the cassette Compartment by pressing STOP/EJECT button.
- Insert a cassette, then close the cassette compartment

5.2 Cassette Playback

- Press the PLAY button to start playback. The product resumes playback from where it last stopped at after the last playback
- Press the PAUSE button to pause playback and press it again to resume playback
- During playback, use the FF and REW buttons to fastforward and rewind the tapes. Stop the winding by pressing the STOP/EJECT button.
- When playback reaches the end of the tape, the PLAY indicator pops up
- To manually stop playback, press the STOP/EJECT button

5.3 Recording on a tape

NOTE: Be sure to connect the AC power cord to avoid an unexpected recording failure.

1. Press POWER button turn on the power of the unit, and then prepare the source you want to record

- 10 second CD tracks On a DISC – Place a disc in the CD compartment. Make sure not to start playback See 'Playing a Disc'
- To record a FM radio program Tune to the desired station. See "FM Radio Operation."

2. Press STOP/EJECT button. insert a blank tape into the cassette tape compartment and then close the Compartment cover.

3. Press RECORD button to start recording (the PLAY button will depress automatically at the start)

- When recording from a disc – Playback starts automatically and recording of all the tracks on the disc proceeds until the last track – When the tape reaches the end, recording stops automatically.
- When recording a FM radio program – Recording continues until the tape reaches the end. NOTE: Adjusting volume will not affect the recording level.

4. Stop recording by press STOP/EJECT button 5.. Pause recording by press PLAY button; to resume recording, press the button again.

6. Connecting Headphones

CAUTION; Do not wear the earphones immediately without lowering the volume first NOTE; When the headphones are connected, the main speakers are muted automatically.

- Rotate the VOLUME knob anticlockwise to the lowest volume
- Connect the headphones to the 3.5mm headphone socket
- Adjust the volume by turning the VOLUME knob

CARE AND MAINTENANCE

1. Care of the product & Caution

- To prevent fire or shock hazard, disconnect the product from the power source when cleaning
- If the unit becomes dusty, wipe with a soft and dry cloth to clean the product. Do not use any polish, sprays, or abrasive cleaners on the unit.
- Never allow any water or other liquids to get inside the unit while cleaning. Dispose and use batteries in an environmentally responsible manner. This product is not intended for commercial use. Household use only.

TROUBLE SHOOTING

Problem	Possible cause	Solution
product does not work.	Power cable is not connected properly.	Check if the power cable is properly connected to the AC socket at the back of the product and to an electrical outlet.
	Batteries are discharged and/or not inserted correctly.	Check if batteries are inserted correctly or empty.
No sound.	Volume is set too low.	Increase the volume level.
Bad audio quality.	Inserted CD is dirty or scratched.	Clean the disc with a soft cloth or insert another CD.
Bad FM reception or no stereo.	FM: Telescopic antenna is not pulled out.	Pull out completely and rotate the telescopic antenna for best reception in FM mode.
Jumping of tracks during playback.	Inserted disc is dirty or scratched.	Clean the disc with a soft cloth or insert another CD.
product does not react to pressed buttons/keys.	Malfunction due to electrostatic discharge.	Disconnect the product from the power supply. Connect the power plug again to an electrical outlet.

TECHNICAL SPECIFICATION

Power supply

- Operation voltage: AC 230V-. 50Hz
- Power consumption. 14 W
- Battery. 12V =. 8 x 1.5V, type C/R 14UM2 batteries (not supplied)
- Speaker – power. 2 x 1 W (RMS)

Radio

- Frequency band: 87.5 108 MHz (FM)
- Antenna telescopic antenna (FM)
- Dimensions (W X H X D): approx. 240 x 155 x 221mm

NOTE: As a result of continual improvements in the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

PLL Radio Operation

1. The appliance is equipped with a telescopic antenna located at the back of the appliance. Pull out the antenna completely and rotate to achieve the best FM reception.
2. Press POWER/OFF button to turn on the unit.
3. Press the FUNCTION button to select the FM mode.

MANUAL STATION SELECTION

1. Press the TUN-/ or TUN+/ button step by step to tune to the desired radio stations.
2. Press VOLUME + or VOLUME— button for the desired volume level. v You can also choose the desired radio station by turning the TUNING control on the side of boombox. The selected radio frequency can be read on the LCD display.

SEARCH STATION OPERATION

1. Press and hold the TUN- or TUN+/ button for approx. 3 seconds, it will start to search the next radio station in the direction of the search.
2. The search operation simply finds stations with strong signals. Stations with weak reception can only be tuned in manually.
3. Press VOLUME+ or VOLUME— button for the desired volume level.

MEMORIZE RADIO STATIONS

1. Tune to the desired station,
2. Long press PROG. button, the LCD display will show 'Mr,
3. Press TUN-/ or TUN+/ button and select the desired number of your program.
4. Press PROG. button to store the radio station in the memory.
5. Repeat steps from 1 to 3 to store more tracks in memory. You can store up to 20 radio stations in the memory.

TO SELECT THE RADIO STATION IN THE MEMORY

Short press PROD. button for the radio station memory and press PROD. button skip up to the next memory

station.

NOTE: As a result of continual Improvements, the design and specifications of the product within may differ slightly to the unit illustrated on this file

1. Press the POWER button turn on the power of the unit and prepare the BLANK tape for recording.
2. Press STOP/EJECT button to open the Cassette Door, insert a cassette tape, and close the Cassette Door.
3. Press FUNCTION button switch to one of the other settings (FM/CD).
4. While playing from the Source, press RECORD button (PLAY button will depress automatically at the same time). Audio from the Source will be copied to the tape.
5. Recording continues until the tape reaches the end. Or stop recording by press STOP/EJECT button.

NOTE: Adjusting the volume will not affect the recording level. NOTE: Record only possible from CD or FM function

SPECIFICATIONS

CASSETTE SECTION

Track format:	2 trackstereo
Tape speed:	4.75 cm / sec.
F.F. & REW time:	170sec.(F-60tapes)
Frequency response:	125Hz-8000Hz(Normaltape)

CD SECTION

Channels:	2 channels
S / N ratio:	60 dB
Wow & Flutter:	undetectable
Sampling frequency:	44.1 kHz 8 x oversampling
Quantization:	1bit DA converter
Pick up light source:	Semi-conductor laser
Pick up wave length:	790 nm

RADIO SECTION

Tuning ranges:	FM 87.5-108 MHz
Antennas:	FM Rod antenna

GENERAL

Output power:	1.2W+1.2W (RMS)
Power consumption:	13 W
Speaker:	3 " 8 OHM
Phones jack:	3.5 MM
Power source:	AC:230V~50Hz DC:12V(8x1.5VLR14/"C"/UM2)
Operating temperature range:	0°C to 40°C
Dimensions:	288(L)x238(D)x155(H)mm
Weight	2.2 KGS

Due to continuing improvement, the features and the design are subject to change without notice.

WARRANTY

All products come with a standard 12 month warranty. All items must be registered on www.oakcastle.co.uk for the warranty to be valid. Once on the web page, use the menu to find "register your product". You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

1. Read these instructions.

2. Keep these instructions. Instructions are also available for download at www.oakcastle.co.uk
 3. Heed all Warnings
 4. Follow all instructions
 5. Do not clean the apparatus near or with water
 6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
 7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 9. Only use attachments/accessories specified by the manufacturer.
 10. Unplug this apparatus during light storms or when unused for long periods of time.
 11. Refer all servicing to qualified service personnel.
- Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
 13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be places on the apparatus.

Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely.

Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste.

Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT:

- Please read all instructions carefully before use and keep for future reference.
- Risk of electric shock.
- Do not open
- Read all instructions carefully before use and keep for future reference
- When servicing, use only identical replacement parts

DOWNLOAD

Majority BCX10 Portable Boombox with Cassette, CD Player and FM Radio User Manual – [[Download PDF](#)]
