



MAJORITY MIC-RS1-BLK RS1 Condenser Microphone User Guide

[Home](#) » [MAJORITY](#) » MAJORITY MIC-RS1-BLK RS1 Condenser Microphone User Guide 

MAJORITY

RS-ONE
CONDENSER MICROPHONE
MIC-RS1-BLK
User Guide



3 YEAR WARRANTY

Register your product online for a FREE 3 year extended warranty at: www.majority.co.uk

Contents

- 1 Box Contents
- 2 Instructions Guide
 - 2.1 Getting started with your Microphone
- 3 Specifications
- 4 Support and Warranty
- 5 Support
- 6 Specifications
- 7 Warranty
- 8 Safety Information
- 9 Documents / Resources
- 10 Related Posts

Box Contents

1. Majority RS1 Microphone
2. Tripod stand
3. USB cable



Instructions Guide

Getting started with your Microphone

Unfold the tripod (Ref.2) to the desired position and ensure it is securely placed on your desktop or table.

Carefully attach the microphone (Ref.1) to the tripod base (Ref.2) by screwing the holder into the base.

Connect the USB cable to the USB-C connection on the back of the microphone (Ref.3).

Connect the other end of the USB cable to your computer. The microphone indicator lights will switch on and display a green light.


Wait for your computer to automatically detect the microphone and install the necessary drivers.

The microphone will now be functional and you can use it as an audio input device. For certain applications, it may be necessary to change your settings to connect to the Majority RS1 microphone as an audio device instead of

your computer microphone.

Specifications

Polar/Pickup Pattern	Cardioid
Frequency Response	30-18,000Hz
Sensitivity	-36dB +/- 2dB (0dB = 1 V/Pa at 1KHz)
Max SPL	138dB
Sampling Rate	16bit/48KHz
Connection	USB 3.0 – USB C
Net Weight	230g
Dimensions	8.4 x 11 x 9.8 cm

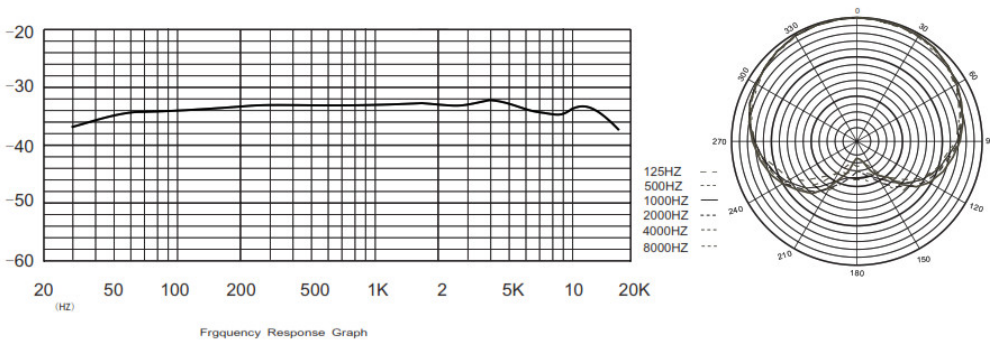

Cardioid pickup pattern

The cardioid pickup pattern means that the microphone is most sensitive at the front, less sensitive to unwanted ambient noise, and more resistant to audio feedback.

Support and Warranty

Support

If you require further assistance with your new CD player, please contact our support team on the Majority website:
www.majority.co.uk/support

Specifications

Warranty

All products come with a standard 12-month warranty. All items must be registered on www.majority.co.uk for the warranty to be valid. Once on the web page, use the menu to find “Register Your Product”. You will also be given the chance to extend your warranty for an additional 24 months, free of charge.

Safety Information

- 1. Read these instructions.

2. Keep these instructions. Instructions are also available for download at www.majorityradios.co.uk
3. Heed all Warnings
4. Follow all instructions
5. Do not clean the apparatus near or with water
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
8. Protect the power from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during light storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in a way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to the rain or moisture, does not operate normally or has been dropped.
12. No naked flame sources, such as lit candles, should be placed on the apparatus.
13. Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on the apparatus. The mains plug is used to disconnect the device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. The battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

RECYCLING ELECTRICAL PRODUCTS



You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep them for future reference.



Risk of electric shock.

Do not open



Read all instructions carefully before use and keep them for future reference



When servicing, use only identical replacement parts



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN




ATTENTION

RISQUE D'ELECTROCUTION
NE PAS OUVRIR



IMPORTANT: Please read all instructions carefully before use and keep for future reference

	<p>MAJORITY MIC-RS1-BLK RS1 Condenser Microphone [pdf] User Guide</p> <p>MIC-RS1-BLK, RS1, Condenser Microphone</p>
---	---