



MakerHawk V1 Type-C Tester Instruction Manual

[Home](#) » [MakerHawk](#) » MakerHawk V1 Type-C Tester Instruction Manual 

MakerHawk


Contents

- 1 V1 Type-C Tester
- 2 Instruction for display panel:
- 3 Documents / Resources
 - 3.1 References

V1 Type-C Tester



Guide for Type-C Tester

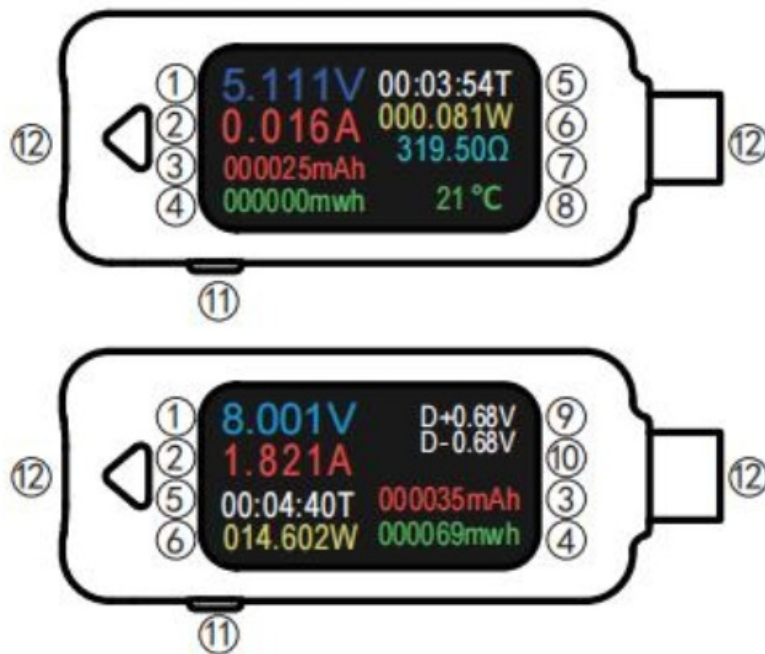

Instruction for display panel:

1. Voltage: 4-30V
2. Current: 0-5A
3. Capacity range: 0-999999mAh
4. Energy range: 0-999999mWh
5. Timer: 0-99H
6. Power. 0-150W
7. Charging resistance: 0-999.90
8. Inner temperature: 0-80°C (The red icon will flash when the temperature is higher than 45 C, it is recommended to stop using)
9. D Positive voltage: 0-10V
10. D Negative voltage: 0-10V
11. Function key
12. Input/Output

Instruction:

1. Press the function key to switch interface and save the data.
2. Press the function key twice to flip the screen.
3. Long press the function key 3 seconds to delete the saving data.
4. Long press the function key and link the tester with exact 5v power for voltage calibration.

MakerHawk

Documents / Resources

	MakerHawk V1 Type-C Tester [pdf] Instruction Manual V1 Type-C Tester, V1, Type-C Tester, Tester
---	--

References

- [User Manual](#)