


Makibes M2 Wireless Speaker User Manual

Home » Makibes » Makibes M2 Wireless Speaker User Manual

USER MANUAL

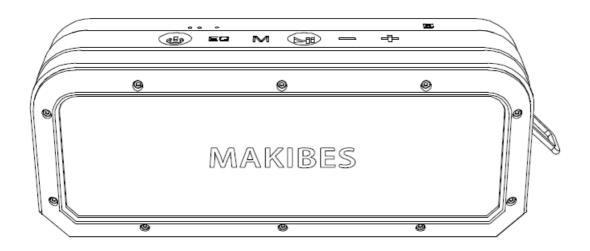

Wireless Speaker Model: Makibes M2

Thank you for choosing Makibes M2 Wireless Speaker. M2 is equipped with Bluetooth 5.0 for optimal connection & pairing with your Bluetooth enabled device. Please read the user manual before use and keep it handy for future reference.


FEATURES

- Silicon covered exterior with IPX7 water-resistance rating.
- · Passive radiator for deep bass.
- True Wireless Stereo (TWS) for stereo surround sound.
- Output up to 40W.
- Up to 18 hours of playtime
- Bluetooth 5.0.
- Equipped with USB Type-C port supporting DC 5V/2A input charging.

PACKAGE CONTENTS

- 1 x M2 wireless speaker
- 1 x Charging cable
- 1 x 3.5mm AUX cable
- 1 x Lanyard
- 1 x Warranty card

BUTTON CONFIGURATIONS

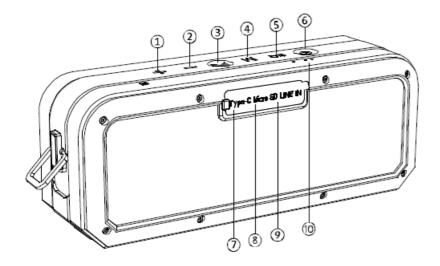

- 1. Volume+ / Next track
- 2. Volume- / Previous track
- 3. Play/Pause/Hands-free call / Voice Assistant
- 4. Music playing mode/Bluetooth disconnect
- 5. TWS / Tri-bass effects: Vocal, Extra Bass, Light music.
- 6. Power ON/OFF/Rest
- 7. Charging port
- 8. Micro SD/TF card slot
- 9. AUX-in
- 10. indicator

Contents

1 FUNCTION 2 Related **Posts**

FUNCTION

ON: Press the POWER button for 1 second.

OFF: Hold and press the POWER button for 3 seconds.

Reset: Press and hold for 8 seconds. (In the case of speaker crash)



Switch sound effects: Short press EQ button to switch sound effect (Vocal, Extra Bass, Light music) . The vocal is the default sound effects. (No light); Extra bass (Green light); Light music (White light)

TWS disconnect: Long press EQ button to disconnect two speakers from each other.

TWS connect: Please turn on the two speakers at the same time. After turning on the two speakers, the two speakers are disconnected to the mobile phone. Press one of the speakers and double-tap the EQ button twice, and there will be a beep sound, and then the yellow light flashes. After the pairing is successful, the yellow lights of the two speakers are on at the same time, the Bluetooth light of the host flashes. When the mobile phone and the speaker are connected, and the Bluetooth light of the auxiliary machine goes out.



Switch playing mode: During Bluetooth mode, press to switch to Micro SD/TF card mode.

Disconnect Bluetooth: Press and hold for 3 seconds.



Play/Pause: Press play/pause button

Answer/Hang up a phone call: During an incoming call, press to answer or hang up the phone call.

Reject a phone call: Hold for 2 seconds to reject the incoming call.

Redial: During Bluetooth connected mode, double press quickly to redial the last dialed number.

Voice Assistant: With the Bluetooth connected, Press and hold 2 seconds.

Hold and pots to choose previous track. Press to Volume down.

Reset: Press and hold for 5 seconds.



Hold and press to choose next track.

Press to Volume up



Turn on NFC and Bluetooth on the mobile phone, and put it close to the NFC sensing area of the speaker, then you can connect to NFC.

SPECIFICATION

Model: M2

• Bluetooth: 5.0

Transmission range: 12m/39ft (open area)

Waterproof: IPX7

• Output: 20W2

Playtime: Up to 18 hours

Power supply: DC 5V/2.0A Max
Battery capacity: 2600mAh2

Charging time: About 3±1 hours
Loudspeaker size: 52±0.3mm

• Distortion: 51.0%

• Frequency 20Hz-16KH

Dimension: 8.11x 2.51 x 3.14in /206 x 64 x 80mm

• Product weight: 700g / 24.69 oz

BLUETOOTH PAIRING

Turn ON the speaker, the blue LED light flashes, and then activate the Bluetooth in your device. Go to device's Bluetooth settings, scan for new Bluetooth devices and upon discovering the device 'Makibes M2', click to pair with it. Hold Play/Pause button for 3 seconds to disconnect the Bluetooth.

TWS MODE

What is TWS? TWS is true wireless stereo, which means two M2 Bluetooth speakers are able to be paired and then play music synchronously, providing stereo surround sound.

How to pair two M2 speakers?

- 1. Turn ON two speakers and confirm they are disconnected to any Bluetooth device.
- 2. Press one of the speakers and double-tap the EQ button twice, and there will be a beep sound, and then the yellow light flashes. After the pairing is successful, the yellow lights of the two speakers are on at the same time, the Bluetooth light of the host flashes. When the mobile phone and the speaker are connected, and the Bluetooth light of the auxiliary machine goes out.
- 3. Go to device's Bluetooth settings, scan for 'Makibes M2', click to pair with it. The Bluetooth indicator of main speaker being steady ON blue means the connection to Bluetooth device is successful. And when start to play music, this blue indicator will flash slowly.

How to disconnect TWS?

During TWS mode, long press the EQ button of one speaker, then the TWS will be disconnected. Note: Once two speakers are well paired for the first time, they will be automatically paired next time without the above pairing operations as long as they are ON.

AUX-IN MODE

The speaker also features one AUX audio in port. Simply connect the speaker with your mobile phone/MP3 player/PC/laptop with the 3.5mm audio jack cable. Once the blue light flashes slowly, then you can play music via the wired connection.

MICRO SD/TF CARD MODE

Press the Power ON/OFF button to switch Bluetooth Mode to Micro SD/TF card Mode. The memory capacity of Micro SD/TF card should be no more than 64G3.

LED

Bluetooth: Blue light flashes quickly for waiting for pairing mode. Blue light kept ON for connected successfully. Micro SD/TF &AUX-IN: Blue light flashes slowly. TWS: The TWS indicator flashes yellow slowly for pairing. Yellow light kept ON for paired successfully. Light goes off for canceling the pair. Charging: Red light ON for charging. Red light goes OFF for charging completion.

SLEEP MODE

The M2 speaker will go into Sleep Mode if it does not pair with any device through Bluetooth or after paired over Bluetooth, there is nothing is played within 10 minutes that helps to save battery power. When you need to use it, press the Power ON/OFF button to turn it on.

TIPS

Because of the powerful output of this speaker, please do not be too close to the speaker and keep an appropriate distance away to listen to the music. To avoid any discomfort caused by excessive sound, it is recommended to listen to music at a suitable volume.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO INSTRUCTIONS. To prevent possible hearing damage, do not listen at high volume levels for long periods.

CARE & MAINTENANCE

Please keep this manual handy for future reference. To clean the Makibes M2 Bluetooth Speaker use a lightly dampened cloth in water to clean the exterior in-case it gets dirty. Do not use any form of detergents or cleaning material to clean the product, any type of chemical may make this device unusable. Do not disassemble this product. It contains no user serviceable parts. Do not drop or jump on C. treat it with care for the best performance. Keep the product in a dry location. Dust, dirt & moisture from humidity can accumulate on the body of the product if kept at an unfriendly place. Do not dispose this product in bre, batteries may explode or leak.

WARRANTY INFORMATION

Your 'Makibes M2 Bluetooth Speaker is warranted to the original owner for 12 months from the date of purchase against defects in material and workmanship under normal use and service. Should your product prove defective within 12 months from the date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim. Please pack the product carefully to avoid damages in transit. Under this warranty, Makibes will repair or replace any parts found to be defective due to manufacturer's defect. This warranty extends only to personal use and does not extend to any product that gas been used for commercial use rental use, or use which is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Makibes is not responsible in any way for damages, losses or inconveniences caused by equipment with the 'User Manual or any additional safety, use, or warnings included in the product materials. Further, Makibes is not !Able for incidental use of this product and any liability shall not exceed the purchase price of the product.

This Warranty gives you specific legal rights. You may also have other rights which vary from state to state.

THIS WARRANTY DOES NOT APPLY TO THE FOLLOWING

- Damage due to accident, misuse, abuse, alterations or vandalism.
- Improper or inadequate maintenance.
- Unauthorized modifications or commercial use.
- Damage n return transit.
- Unsupervised use by children under 18 years of age.

(Makibes and its subsidiaries assume no liability for damage caused by the use of the Makibes M2 Bluetooth Speaker other than for its intended use or as Instructed above in the User Manual.)

Makibes-M2-Wireless-Speaker-Manual

Optimized PDF

Makibes-M2-Wireless-Speaker-Manual-Original

Download

Questions about your Manual? Post in the comments!