



MALATEC S8799 Home Safe With Electronic Code User Manual

[Home](#) » [MALATEC](#) » MALATEC S8799 Home Safe With Electronic Code User Manual 



USER MANUAL
A safe with a code S8799
M: 00008799 (T-17EA)

Contents

- [1 S8799 Home Safe With Electronic Code](#)
- [2 SPECIFICATION:](#)
- [3 MOUNTING METHOD:](#)
- [4 PRODUCT DESCRIPTION:](#)
- [5 SAFE OPENING FOR THE FIRST TIME:](#)
- [6 OPENING THE SAFE WITH THE EMERGENCY KEY:](#)
- [7 BATTERY INFORMATION:](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

S8799 Home Safe With Electronic Code

Importer
ISO TRADE Sp. z o. o.
Ul. Hangarowa 15
59-220 Legnica
WEEE-Reg.-No DE 12589110



Ladies and Gentlemen, thank you for purchasing our product!

Before starting to use, please read the following instructions for the correct use of the product. Please keep these instructions on future and to follow its recommendations, as non-compliance may endanger life or health.

Important: KEEP FOR FUTURE REFERENCE!

- Please read it completely before use and follow all instructions in the manual.
- Do not use the product if any part is missing or damaged.
- Please keep this manual for future reference.

WARNINGS:

Please read the operating instructions carefully and strictly observe the safety information. In case of non-compliance with the safety instructions and information on proper use contained in this manual, we assume no liability for any resulting personal injury or property damage.

- The factory code should be changed immediately upon receipt of the safe to the personal administrator code
- Do not set codes that use direct personal data, such as, for example, date of birth or other data that may also be known to other people.
- Make sure the safe is locked after each closing.
- The device is not a toy. Keep them out of the reach of children and pets.
- Do not leave the packing materials unattended. Children can start to play with them, which is dangerous.
- Protect the device from extreme temperatures, direct sunlight, strong vibrations, high humidity, moisture, flammable gases, vapors and solvents.
- The product should not be subjected to mechanical stress.
- If the safe use of the product is no longer possible, it must be excluded from use and secured against accidental use. Safe use is not guaranteed if the product: – shows visible signs of damage, – does not function properly, – has been stored for a long time under unfavorable conditions, or – has been subjected to heavy transport loads.
- If in doubt about the operation, safety or connection of the device, please contact a qualified specialist.
- Maintenance, modifications and repairs must only be performed by a technician or an authorized service center.
- Clean the device with a soft, dry cloth

NOTE: Do not keep spare keys in your safe!

SPECIFICATION:


- black colour
- material: steel
- power supply: 4x AA battery (not included)
- dimensions (length / width / height): 23/17/17cm

INCLUDED


- electronic safe
- 2 keys
- 2 mounting pins with screws

MOUNTING METHOD:

Install the safe in a place where it will be difficult to disassemble. Drill holes for wall plugs (or fixing screws) in the appropriate place. Use the wall plugs (or mounting screws) to mount the safe to the wall. Use wall plugs when mounting the safe to a concrete or brick wall. Use the mounting screws when mounting it to a wooden wall. Make sure the safe is mounted in the best and safe location as required and then tighten all screws.

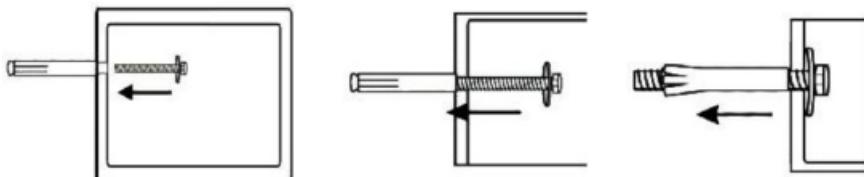

PRODUCT DESCRIPTION:

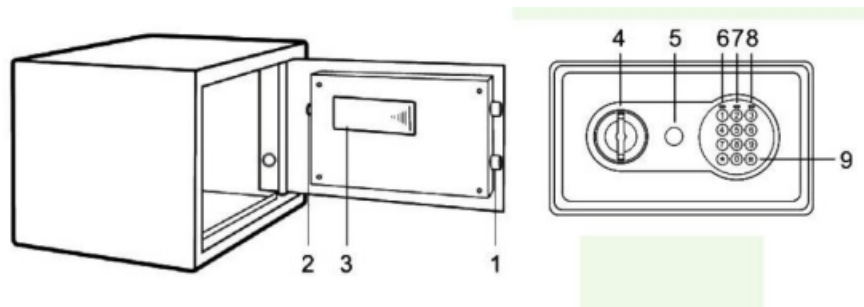

1. Lock
2. Reset button
3. Battery compartment
4. Lock knob
5. Emergency opening cover
6. Green light
7. Red light
8. Yellow light
9. Confirm button

SAFE OPENING FOR THE FIRST TIME:

1. The first opening should be done with the emergency key.
2. Remove the safety cover, then insert the emergency key into the hole and turn it clockwise.
3. Turn the knob clockwise to open the door.
4. Then remove the emergency key and keep it in a safe place.

The factory code is "159". Enter the factory code again if the yellow light is on and beeps three times.



INSERTING BATTERIES:

Open the safe door. Insert 4 AA batteries into the battery compartment. When both red and green lights are lit, the voltage is too low and new batteries should be inserted. Replace 4 new batteries at the same time. It is recommended to insert them as indicated by the "+" and "-" signs. During a battery outage of more than thirty minutes, you must reset the user code.

SETTING OF USER CODE:

1. When the door is open, press the reset button once, enter the code when the yellow light comes on.
2. Enter a new code (3-8 digits) and press the confirm key to confirm the operation.
3. It will be accompanied by two beeps, which means that the new code is accepted and saved.
4. If the yellow diode is flashing and it is accompanied by 3 beeps, the code change has failed and the procedure must be repeated.

DOOR OPENING:

1. Enter your user code (3 to 8 digits), each button press is accompanied by a beep and a yellow light.
2. Press the confirm button and the green light will be on.
3. Within 5 seconds, open the door by turning the knob clockwise.

CLOSING THE DOOR:

Close the door and turn the key or knob (turn the handle to the vertical position).

AUTOMATIC LOCK:

3 wrong entries of the opening code will start an acoustic signal for 20 seconds.

The keyboard will be locked. To turn off the buzzer, open the safe with the emergency key and cut off the power by removing the battery.

RESET:

When the safe is open, look for the red button on the inside of the door, next to its hinges. Please press the red button, the yellow light will come on. Within 30 seconds, enter the code (from 3 to 8 digits), then, to finish and save the entered code, press the confirm

button on the front side of the door. If the yellow light does not stop flashing or the beep sounds, the safe has not accepted the code.

Repeat the code entry process.



Please check your code again before closing the safe!

Custom mechanical safe opening with a security key:

If the code has been forgotten or the batteries have run out, please remove the cover on the front of the safe. Place and turn the emergency key slightly, then turn knob clockwise.

OPENING THE SAFE WITH THE EMERGENCY KEY:

If you do not know the access code, the first time you open the safe or when the electronics break down, you can use the emergency key to open the safe.

Remove the safety lock cover.

Insert the emergency key clockwise into the hole under the lock cover, then turn the knob clockwise to open the door.

**Information for the consumer on the handling of waste electrical and electronic equipment:**

Waste electrical and electronic equipment may not be placed with other household waste. Such equipment should be collected selectively, which is indicated by the attached marking – a crossed-out wheeled waste container. Failure to comply with the above rule, in the case of improper disposal of used equipment, may pose a threat to the natural environment and human health, resulting from the presence of hazardous components in the equipment, such as: electrical wiring, plastic, switches, etc. In order to avoid the above threat, these components should be collected and properly processed by specialized companies. Self-disassembly of worn equipment is unacceptable. Households play an important role in contributing to reuse and recovery, including recycling of waste equipment. This is done in particular through active participation in the waste equipment collection system.

BATTERY INFORMATION:

- Keep batteries/rechargeable batteries away from children.
- Do not store batteries/rechargeable batteries in easily accessible places, as there is a risk that they may be swallowed by children or pets. If swallowed, contact a doctor as soon as possible.
- Leaking or damaged batteries/rechargeable batteries may cause burns when in contact with the skin, so always wear suitable protective gloves when touching them.
- Batteries/rechargeable batteries must not be short-circuited, disassembled or thrown into fire. There is a risk of explosion!
- Do not recharge non-rechargeable batteries as there is a risk of explosion! Only recharge batteries intended for this purpose using the appropriate charger.
- Charge the batteries before inserting them into the product
- Batteries should only be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc) and rechargeable (nickel-cadmium) batteries.
- Never mix new and old batteries.
- It is forbidden to interfere with the power cables – it may cause a short circuit.
- Exhausted batteries must be removed from the product.
- Do not dispose of used batteries in unsorted waste!
- Batteries must be disposed of in accordance with hazardous electronic waste disposal.
- If the batteries are not properly disposed of, hazardous substances may pose a risk to human health or the environment. Recycling of materials contributes to the conservation of natural resources.
- Batteries/rechargeable batteries must always be inserted with the correct polarity (plus/+ and minus/-).
- Type of battery used in the product: AA

