



MAAn RC18T1-27 Bose Remote Control Instructions

[Home](#) » [MAAn](#) » MAAn RC18T1-27 Bose Remote Control Instructions 



Contents

- [1 RC18T1-27 Bose Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

RC18T1-27 Bose Remote Control



Original	Recharge
	On / Off
	Mute All
	Mute
	CD-DVD
	FM-AM
	AUX
	TV
	CBL-SAT
	VCR
	Up / Tune +
	DVD Menu
	Settings
	Left
	Enter
	Right
	Guide
	System
	Power
	Audio / Lang I/II
	Mute / Dimmer
	Shift + 3
	Shift + 6
	Shift + 7
	Shift + 1
	Shift + 0
	Shift + 4
	D.Menu / Top
	Setup / OPT /
	OK
	Left
	Right
	Guide / EPG / -/-
	Menu / Home

Original	Recharge
	Down / Tune -
	Exit
	Track/Chap./CH +
	Volume +
	Track/Chap./CH -
	Volume -
	Stop
	Pause
	Play
	I<< / Seek -
	I<< / Seek -
	I>> / Seek +
	I>> / Seek +
	Shuffle / Presets <-
	Repeat / Presets ->
	1
	2
	Exit / Cancel / Clear
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow
	I<< / Preset-
	I>> / Tune+
	I>> / Preset+
	Red / Netflix / Search
	Blue / Prime Video / Random
	1
	2



Original	Recharge
	3
	4
	5
	6
	7
	8
	9
	0
	Info / Angle

Original	Recharge
----------	----------



<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>

Documents / Resources



[MAn RC18T1-27 Bose Remote Control](#) [pdf] Instructions

RC18T1-27 Bose Remote Control, RC18T1-27, Bose Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace BOSE RC18T1-27](#)
- [User Manual](#)