



MANBA Wireless Switch Controller User Manual

[Home](#) » [Manba](#) » MANBA Wireless Switch Controller User Manual 



STK-7039HX



Wireless Controller

Manba E-mail: manba.service@gmail.com

Manba Website: www.manba.cc

 
USER MANUAL

V1.5

Contents

- 1 Key Function Instruction
- 2 Controller Mode & Operation
- 3 Sleeping Mode & Reconnect
- 4 Power Off
- 5 N-S Controller Mode
- 6 After-sales Service
- 7 Adjust Vibration intensity
- 8 Vibration intensity indication
- 9 Android device connection
- 10 IOS 13 mode
- 11 PC Wired Controller Mode
- 12 Xbox Wireless Controller Mode for PC
- 13 Specification
- 14 Turbo / Auto Function
- 15 After-sales Service
- 16 Documents / Resources
 - 16.1 References
- 17 Related Posts

Key Function Instruction

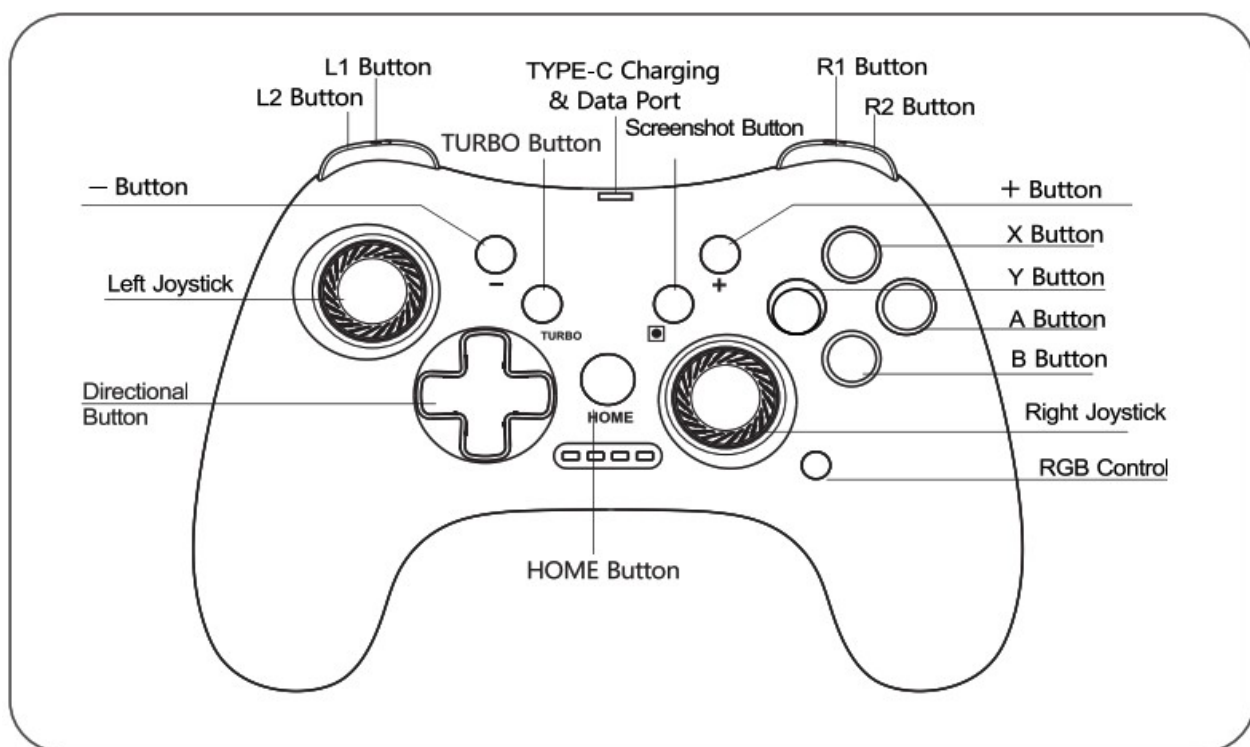

Controller Mode & Operation

MODE	SWITCH CONTROL LER		PC		ANDROID HID/PAD		APPLE/PA D	ANDROID TV
CONNECTI ON MODE	BLUET OOTH	WIRED	BLUET OOTH	WIRED	BLUET OOTH	WIRED	BLUETOOTH	WIRED
CONNECTI ON	B+HOM E	TYPE C C ABLE+NS CONSOLE	A+HOM E	TYPE C CAB LE+PC	X+HO ME	QMACRO(SOFTWARE) +"+"+HOM E	Y+HOME	TYPE C C ABLE+TV
LED	LED1,2, 3,4	LED1,2,3, 4	LED2,L ED3	LED1(X-INP UT);PRESS AND HOLD “ +”“- ” 5 SEC ONDS CHANGE LE D2,LED3 (D• INPUT)	LED2,L ED3	LED3,LED4	LED1,LED 4	LED1,2,3, 4
RECONNE CTION	HOME		HOME		HOME		HOME	

Sleeping Mode & Reconnect

Sleeping Mode: The controller will turn into sleeping mode automatically without any operation within 5 minutes.
Wake up & Reconnect: Press HOME button long with 3 seconds, the controller will power on and reconnect the device, which connected last time.

 
 
Power Off

Press HOME button long with 3-6 seconds, the controller will power off with all LED lights off.

N-S Controller Mode


(To connect the Controller to the N-S for the first time:)

Step 1: Select “Controllers” on the HOME Menu.

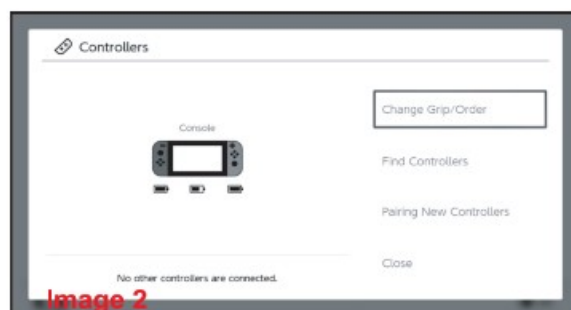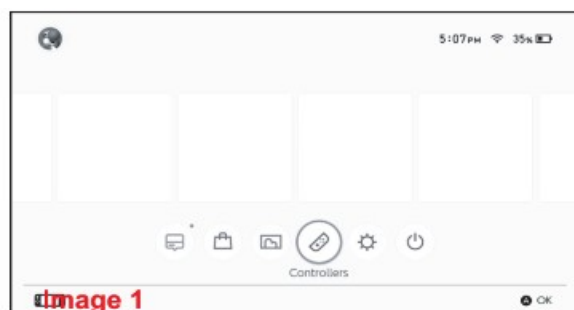

Step 2 Select “Change Grip/Order”.

 Step 3: Hold the “B”+”HOME?” Button on the controller about 2 seconds, LED lights fast flashing. (when LED lighting keep lights, it means controller paired with N-S)

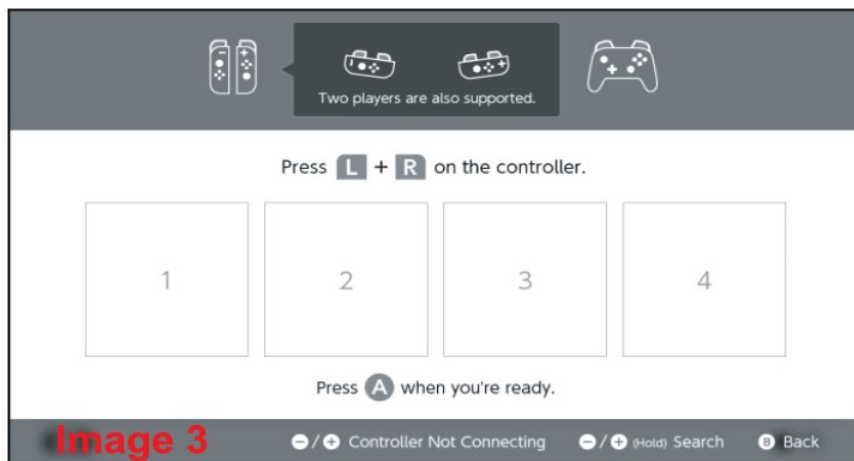

Reconnect: Press HOME Button

If your controller was once paired and connected to your N-S console, press the HOME button to rapidly connected next time.

Note: The gamepad support press HOME button to wake up the console under sleep mode You just need to press HOME button to finish reconnect.

When one of the following conditions occur, please reconnect referring to first time to pair and connect.

1. Upgrade
2. Reset
3. Change the console.

* Please make sure turn off the Airplane Mode when you connect controller to switch console

After-sales Service

If there are any problems with your product, please contact our service team.

We hope you never have the need, but if you do, our service is friendly and hassle-free.

manba.service@gmail.com

Manba Website: www.manba.cc

 <p>Manba Website</p>	 <p>Service Team</p>
<p>www.manba.cc</p>	<p>manba.service@gmail.com</p>

We're ready and waiting to help. manba.service@gmail.com

Adjust Vibration intensity

The handle has vibration and vibration intensity adjustment functions.

In the “Settings” option of the Switch host, you can choose to turn on or off the vibration function; when the handle is connected, in the “Search handle” interface of the Switch host, press and hold the four buttons Z, ZL, R, and ZR at the same time for 3 seconds to adjust the motor. Vibration intensity, adjustable in three gears: 30% (weak) — 70% (medium) — 100% (strong), the default is 70% (strong). Intensity defaults to 70%.

Vibration intensity indication



If there are any problems with your product, please contact our service team.

manba.service@gmail.com

 
Manba Website: www.manba.cc

Android device connection

Step 1; When the controller is turned off, press and hold the “X” + “HOME” key combination for 2 seconds to turn it on, and the connection indicator LED2 and LED3 will flash. .

Step 2: At the same time, in the Bluetooth “Available Devices” list of the Android device, find and click “Gamepad” to pair.


Step 3: After the pairing is successful, LED2 and LED3 are keep lighting, and the handle enters Android mode. You can play games under the Android standard protocol or enter the game hall to download games. Short press the HOME button to reconnect, LED2 and LED3 will flash slowly, after successful reconnection, LED2 and LED3 will always be on.

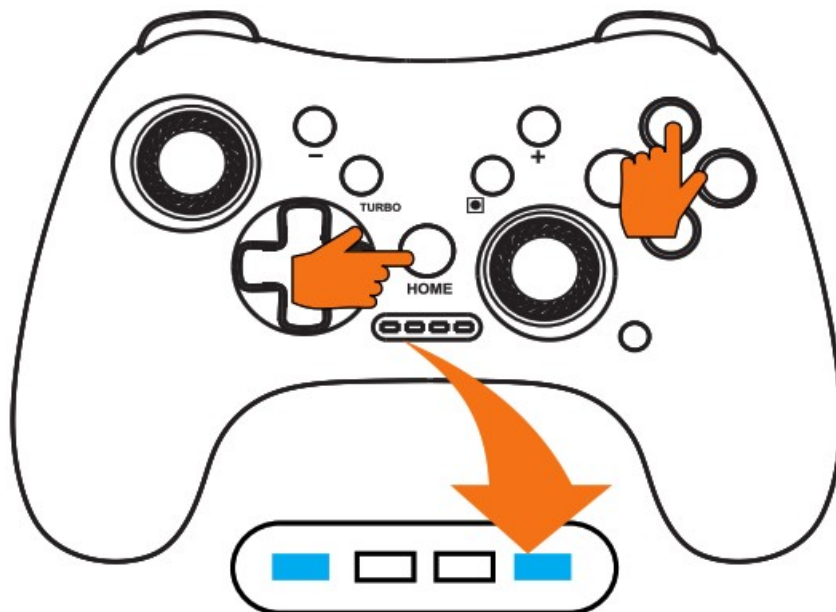

The Android Game Controller mode support Android Standard Protocol(HID Protocol) game


IOS 13 mode

 Press Y+HOME for 2 seconds to enter the Bluetooth search mode, the Bluetooth name is “DUALSHOCK 4 wireless Controller”, LED1 and LED4 flash quickly when pairing, and LED1 and LED4 are always on after the connection is successful

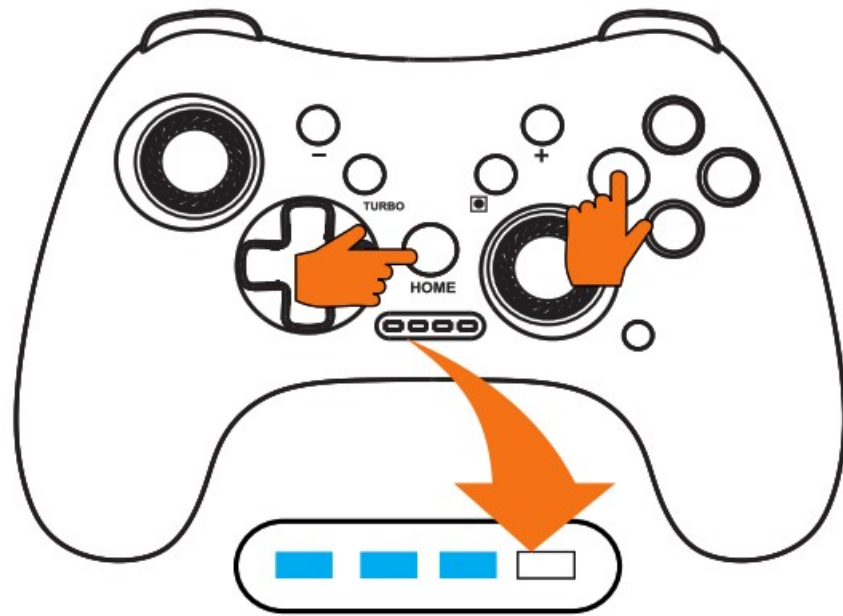


PC Wired Controller Mode

 X-Input Mode

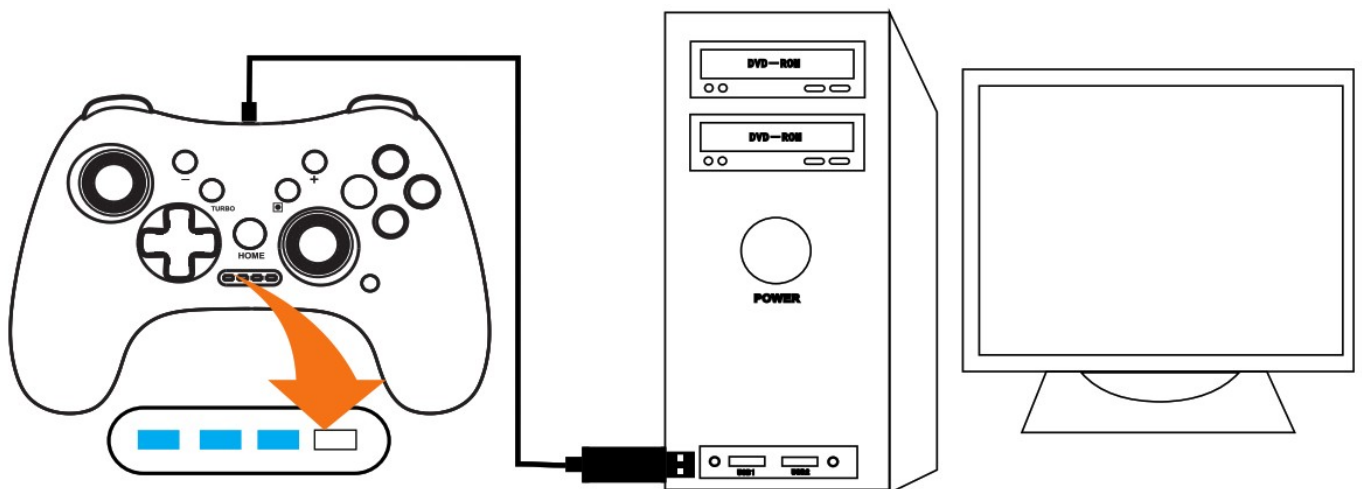

Connect controller to pc with type-c cable, after windows system recognized, the controller wil start to work, LED 1 light will be long on.

 D-Input Mode

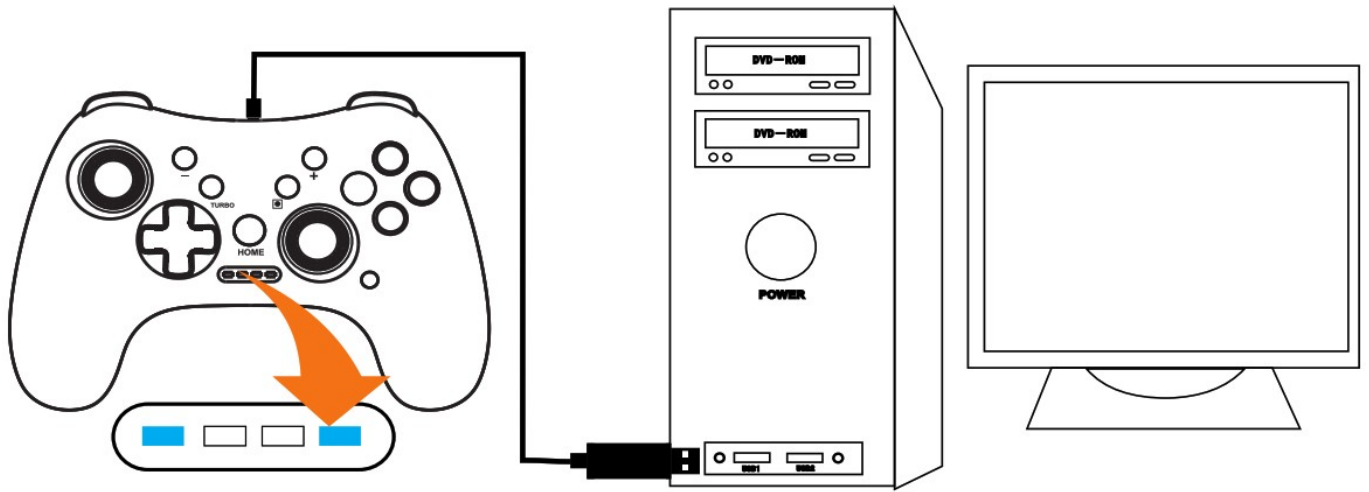

Under the mode of X-nput, press the “-”, “+” button 5 seconds lang to switch X-nput to D-nput Mode.

 
Xbox Wireless Controller Mode for PC

Step 1: Press A+HOME button to power on the gamepad LED 2,3 will be twinkling and wait for pairing.

Step 2: Open the interface of Settings on android / IOS device. open Bluetooth.

Step 3: Scan the devices and get the name of Gamepad, cick the device into Paring and Connect automatically.

Step 4: LED 2,3 indicator will be long on after connected successfully.

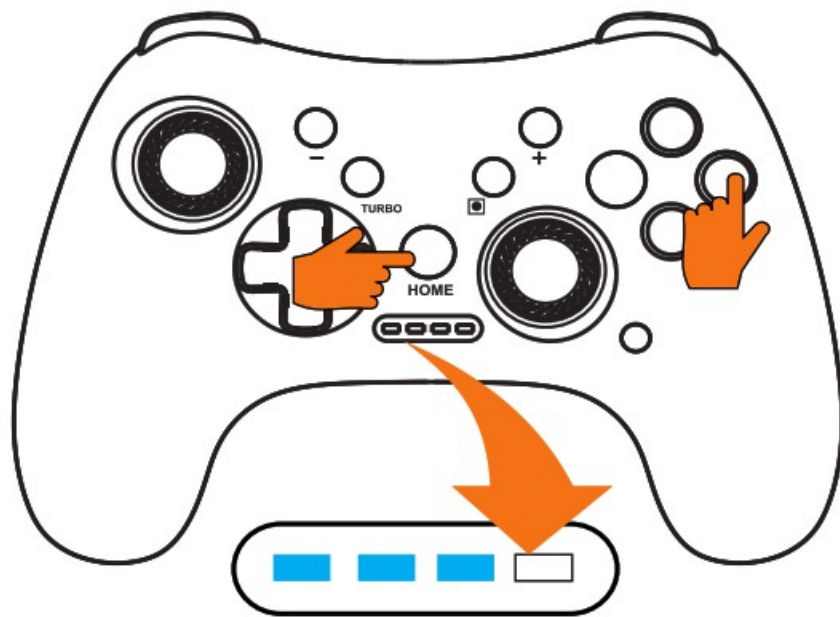

Reconnecting:

Long press HOME button to power on the gamepad, it will connect automatically.

Specification

Product size: 157x109x63mm

Model number KM-002

Product weight: 205g

Product name: Multifunctional gamepad

Power supply: built-in 500mAh polymer battery

Charging interface: Type-c

Game time: 8h

Charging time: 2.5H

Packing: color box
Package Contents: gamepad, charging cable, instruction manual

Turbo / Auto Function

Turbo batter function

Buttons (which called short function buttons) can be set TURBO/ AUTO: A B/ X Y/ U ZU R/ ZR button

Enable! Disable the TURBO / AUTO speed function/

Step 1: Press the Turbo button and one the function button simultaneously, to enable the Turbo speed function

Step 2: Repeat the step1 to enable the AUTO function

Step 3: Repeat the Step1 to disable AUTO function

Adjust TURBO speed

Press the TURBO button simultaneously the directional button Up / Down

Press TURBO+Right joysticks UP button to adjust the TURBO to faster.

Press TURBO+Left joysticks DOWN button to adjust the TURBO to slower

Clear TURBO /AUTO function

Press the TURBO button with 1 second .Then all TURBO function cleared.

After-sales Service


If there are any problems with your product, please contact our service team.

manba.service@gmail.com

Manba Website: www.manba.cc

Manba E-mail: manba.service@gmail.com

Documents / Resources

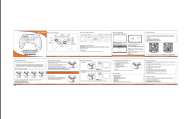	Manba MANBA Wireless Switch Controller [pdf] User Manual MANBA Wireless Switch Controller, MANBA, Wireless Switch Controller, Switch Controller, Controller
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.