



Mandis 00017 B Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis 00017 B Remote Control Instructions 

Mandis 00017 B Remote Control Instructions



Contents

 
1 Remote Control

 
 
 
 
2 Documents / Resources

 
 
 
 
 
 
 
2.1 References

 
 
 
3 Related Posts

Remote Control

Original		Replacement	
	Standby/On		Power

	Eject		Eject
	1/Slow-		1
	2		2
	3/Slow+		3
	4/← Shuttle		4
	5		5
	6/Shuttle →		6
	7/▼ V.Lock		7
	8		8
	9/▲ V.Lock		9
	0/F.ADV		0
	CLR/RST		Exit
	Q-Pro		Options
	IPC		Smart

	Display		Info
	Index		Guide
	Input/Repeat		AV
	Prog Up		Ch +
	Prog Down		Ch –
	TRK Up		Vol +
	TRK Down		Vol –
	Menu		Menu
	Speed		Format
	Audio		Dual
	Left		Left
	Tv/VCR		TV/R

	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	Rec		Rec
	Up		Up
	Down		Down
	Right		Right
	OK		OK

[QUEE Up -51420-replacement-remote-control-for-Samsung-00017-B.html https://all-remote-controls.co.uk/en/Samsung/100](https://all-remote-controls.co.uk/en/Samsung/100)



Documents / Resources

	Mandis 00017 B Remote Control [pdf] Instructions 00017 B Remote Control, 00017 B, Remote Control, Control
	Mandis 00017 B Remote Control [pdf] Instructions 00017 B Remote Control, 00017 B, Remote Control, Control
	Mandis 00017 B Remote Control [pdf] Instructions 00017 B Remote Control, 00017 B, Remote Control, Control

References

- [M Replacement remote control for SAMSUNG 00017 B](#)
- [User Manual](#)