



Mandis 00017 B Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis 00017 B Replacement Remote Control Instructions 

Contents

- [1 Mandis 00017 B Replacement Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 REPLACEMENT PARTS](#)
- [6 BUTTON FUNCTIONS](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Mandis 00017 B Replacement Remote Control Instructions



Product Information

Specifications:

- Model: Q-Pro IPC
- Power: AC adapter (included)
- Display: Index display
- Playback Speed: Variable (Slow2, Slow+, Shuttle)
- Locking Mechanism: V.Lock
- Function Buttons: Standby/On, Eject, Shuttle, F.ADV CLR/RST, Power Eject, Input/Repeat, Prog Up/Down, TRK Up/Down, Menu, Speed, Audio Left, Tv/VCR, Play, Pause, Stop

Product Usage Instructions

Powering On and Off:

To turn on the Q-Pro IPC, press the Standby/On button. To put the device on standby or turn it off completely, press the same button again.

Ejecting a Disc:

To eject a disc, press the Eject button.

Playback Control:

The Q-Pro IPC offers various playback control options:

- **Slow Motion:** Use the Slow2 and Slow+ buttons to play the content at slower speeds.
- **Shuttle Control:** The Shuttle buttons (4, 5, and 6) allow you to control the playback speed and direction.
- **Variable Speed Playback:** Press the Shuttle buttons in combination with the number of buttons (1-9) to set specific playback speeds.

V.Lock Function:

The V.Lock function ensures that the disc tray remains locked during playback. Use the V.Lock buttons (7, 8, and 9) to activate or deactivate this feature.

F.ADV CLR/RST:

The F.ADV CLR/RST button serves as a fast advance and also resets the device to its default settings.

Display Index:

The Q-Pro IPC includes an index display feature that allows you to navigate through the content on the disc. Use the Display Index button to access this feature.

Replacement:

If you need to replace any parts or components of the Q-Pro IPC, please refer to the user manual for detailed instructions specific to your model.

Smart Info Guide:

The Smart Info Guide provides additional information and guidance on using the Q-Pro IPC. Access this feature by pressing the Options button and selecting Smart Info Guide.

Frequently Asked Questions (FAQ):






 
 
 
 
 

 

 
 
 
 
 
 
 

 
 
 

 
 
 

 
 
 

 
 

 
 






 




 

 



 

 

 

 
 
 
 
 


- **Q:** How do I change the playback speed?
- **A:** To change the playback speed, use the Shuttle buttons in combination with the number of buttons (1-9) on the device.
- **Q:** How do I activate or deactivate the V.Lock function?
- **A:** Press the V.Lock buttons (7, 8, or 9) to activate or deactivate the V.Lock function.
- **Q:** How do I navigate through the content on a disc?
- **A:** Use the Display Index button to access the index display feature, which allows you to navigate through the content on the disc.
- **Q:** How do I access additional information and guidance?
- **A:** Press the Options button and select Smart Info Guide to access the Smart Info Guide feature, which provides additional information and guidance on using the Q-Pro IPC.

OVERVIEW

Samsung 00017B



REPLACEMENT PARTS

Original		Replacement	
	Standby/On		Power
	Eject		Eject
	1/Slow-		1
	2		2
	3/Slow+		3
	4/← Shuttle		4
	5		5
	6/Shuttle →		6
	7/▼ V.Lock		7
	8		8
	9/▲ V.Lock		9
	0/F.ADV		0
	CLR/RST		Exit
	Q-Pro		Options
	IPC		Smart
	Display		Info
	Index		Guide
	Input/Repeat		AV
	Prog Up		Ch +
	Prog Down		Ch -
	TRK Up		Vol +
	TRK Down		Vol -
	Menu		Menu
	Speed		Format
	Audio		Dual
	Left		Left
	Tv/VCR		TV/R
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	Rec		Rec
	Up		Up


	Down		Down
	Right		Right
	OK		Ok

BUTTON FUNCTIONS



<https://all-remote-controls.co.uk/en/Samsung/1063492-51420-replacement-remote-control-for-Samsung-00017-B.html>

Documents / Resources

	<p>Mandis 00017 B Replacement Remote Control [pdf] Instructions</p> <p>00017 B Replacement Remote Control, 00017 B, Replacement Remote Control, Remote Control</p>
-------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [M Replacement remote control for SAMSUNG 00017 B](#)
- [User Manual](#)