



Mandis 00017B Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis 00017B Remote Control Instructions 

Mandis 00017B Remote Control



Contents

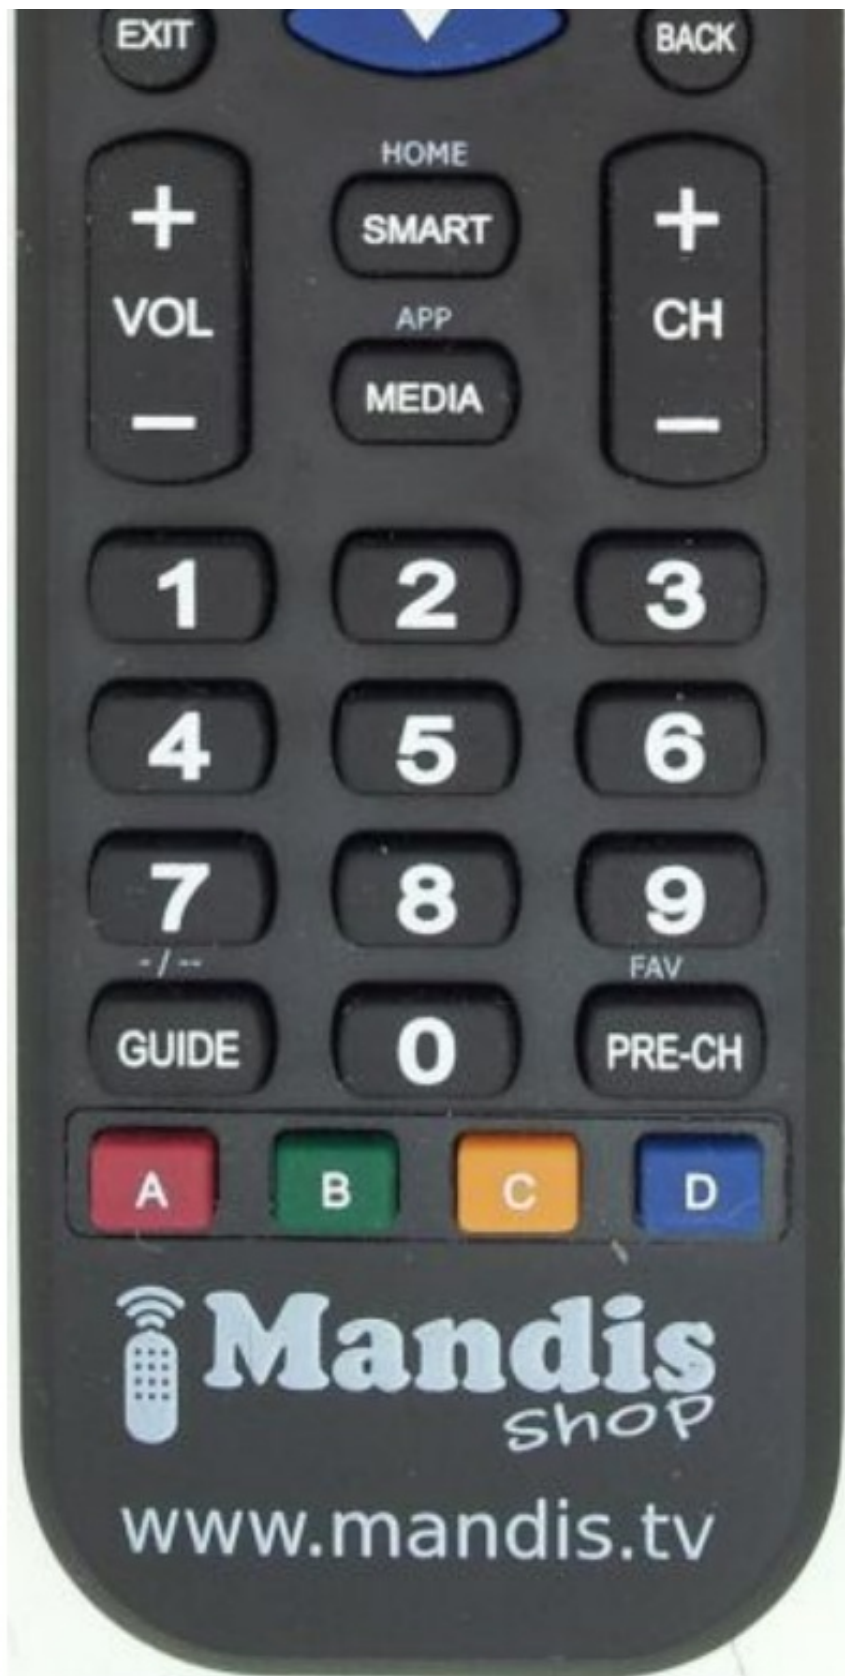 
- [1 Product View](#)
- [2 Buttons Descriptions](#)
- [3 Customers Support](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Product View





 
 




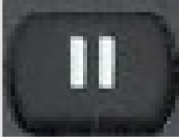 
 
Buttons Descriptions

Original	Replacement
----------	-------------

 Standby/On	 Power
 Eject	 Eject
 1/Slow-	 1
 2	 2
 3/Slow+	 3
 4/← Shuttle	 4
 5	 5
 6/Shuttle →	 6
 7/▼ V.Lock	 7

 8	8	 8	8
 9	9/▲ V.Lock	 9	9
 F.ADV 0	0/F.ADV	 0	0
 CLR/RST	CLR/RST	 CLEAR EXIT	Exit
 Q-PRO	Q-Pro	 SETTINGS OPT	Options
 IPC	IPC	 HOME SMART	Smart
 DISPLAY	Display	 DISPLAY INFO	Info
 INDEX	Index	 - / - GUIDE	Guide

 INPUT REPEAT	Input/Repeat	 TIMER AV	AV
 PROG	Prog Up	 + CH	Ch +
 PROG	Prog Down	 CH —	Ch -
 TRK	TRK Up	 + VOL	Vol +
 TRK	TRK Down	 VOL —	Vol -
 MENU	Menu	 TOP MENU MENU	Menu
 SPEED	Speed	 PICTURE FORMAT	Format
 AUDIO	Audio	 SOUND DUAL	Dual
	Left	 AR	Left

 TV/VCR	TV/VCR	 SEARCH TV/R	TV/R
 Play	Play	 PLAY MODE	Play
 Pause	Pause	 Pause	Pause
 Stop	Stop	 Stop	Stop
 >>	>>	 >>	>>
 <<	<<	 <<	<<
 REC	Rec	 REC MODE	Rec
 Up	Up	 Up	Up



Customers Support

<https://all-remote-controls.co.uk/en/Samsung/1063492-51420-replacement-remote-control-for-Samsung-00017-B.html>

[Samsung 00017B](#)



Documents / Resources

	Mandis 00017B Remote Control [pdf] Instructions 00017B, 00017B Remote Control, Remote Control, Control
---	---

References

- [Replacement remote control for SAMSUNG 00017 B](#)
- [User Manual](#)