



Mandis 1G Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis 1G Remote Control Instructions 

Mandis 1G Remote Control



Contents

- [1 Product View](#)
- [2 Buttons Description](#)
- [3 Customers Support](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Product View

 
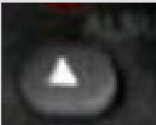 
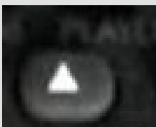 








Buttons Description

Original		Replacement	
	Power		Power
	EQ		Dual
	Mute		Mute
	Album Up		Vol +
	Album Down		Vol -
	Playlist Up		Ch +
	Playlist Down		Ch -
	1		1

abc 2 2	2 2
def 3 3	3 3
ghi 4 4	4 4
jkl 5 5	5 5
mno 6 6	6 6
pqr 7 7	7 7
tuv 8 8	8 8
wxyz 9 9	9 9
0 0	0 0



Star



Guía



Buscar



Media



Pre Ch



Guide



Smart



Media



Grab



Info



Menu



Salir



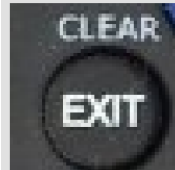 
Options



Info



Menu



Exit



Up



Right



Down



Left



Up



Right



Down



Left



OK



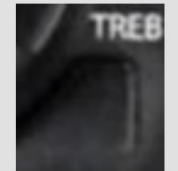 
Ok



Bass



Format




Treb




3D



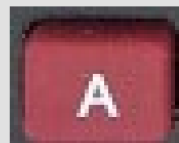 
Red / Rec




Red

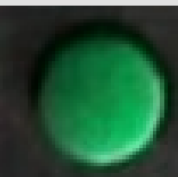 


Green

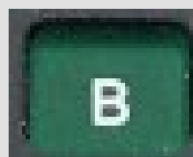 

Green

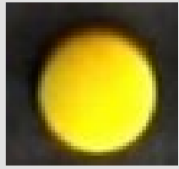 

Yellow

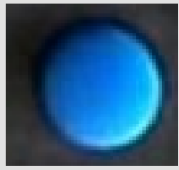 

Blue



Red / Rec



<<



Yellow



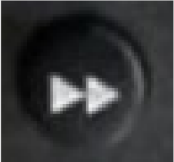 
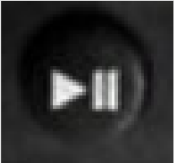 
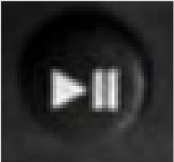 
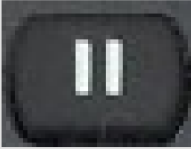 
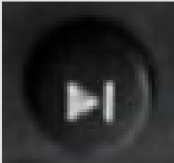 
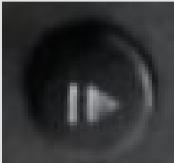 
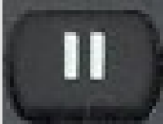 
Blue




Rec



<<

 >>	 >>
 Play / Pause	PLAY MODE  Play
 Play / Pause	 Pause
 Stop	 Stop
 >	 >>
 <	 <<
 >	 +  Shift + Pause
 Ir A	RETURN  Back

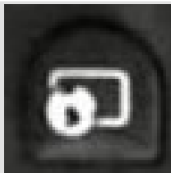 	Widgets TV		Text
	Top TV		AV

Customers Support

<https://tout-telecommandes.fr/fr/Oki/1058698-24702-telecommande-de-remplacement-pour-Oki-SB-MEDIA-PLAYER-1G-SOUNDBAR-1GB.html>



Documents / Resources

	Mandis 1G Remote Control [pdf] Instructions 1G Remote Control, 1G, Remote Control, Control
---	--

References

- [Télécommande qui remplace OKI SB MEDIA PLAYER 1G \(SOUNDBAR 1GB\)](#)
- [User Manual](#)