



Mandis 22AV8573-RC6-SETUP Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis 22AV8573-RC6-SETUP Remote Control Instructions 



Contents

- [1 22AV8573-RC6-SETUP Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

22AV8573-RC6-SETUP Remote Control



Original		Replacement		Original		Replacement	
	Power		Power		OK		Ok
	A		Red		Right		Right
	B		Green		Down		Down
	C		Yellow		Teletext		Text
	D		Blue		CC		Subt
	E		3D		TV Vol +		Vol +
	F		Shift + 6		TV Vol -		Vol -
	G		Shift + 7		Mute		Mute
	Reset / Upgrade		Exit		P+		Ch +
	Recall / Info		Info		P-		Ch -
	Guide		Guide		1		1
	Home / Menu		Menu		2		2
	Back / PP		Back		3		3
	Options		Options		4		4
	Smart		Smart		5		5
	Up		Up		6		6
	Left		Left		7		7

[illegible]



Original	Replacement
	Power
	Red
	Green
	Yellow
	Blue
	3D
	Shift + 6
	Shift + 7
	Exit
	Info
	Guide
	Menu
	Back
	Options
	Media
	Smart
	Up

Original	Replacement
	Left
	Ok
	Right
	Down
	Text
	Subt
	Vol +
	Vol -
	Mute
	Ch +
	Ch -
	1
	2
	3
	4
	5
	6



Original	Replacement
	7
	8
	9
	0
	AV
	Sleep

Original	Replacement
----------	-------------



Documents / Resources



[Mandis 22AV8573-RC6-SETUP Remote Control](#) [pdf] Instructions

22AV8573-RC6-SETUP Remote Control, 22AV8573-RC6-SETUP, Remote Control, Control

References

- [M Replacement remote control for PHILIPS Hospitality-1 \(22AV8573\)](#)
- [User Manual](#)