



Mandis 31000484 Remote Control Instructions


[Home](#) » [Mandis](#) » Mandis 31000484 Remote Control Instructions 

Contents

- [1 Mandis 31000484 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Product Overview](#)
- [6 Remote Using Instructions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis 31000484 Remote Control

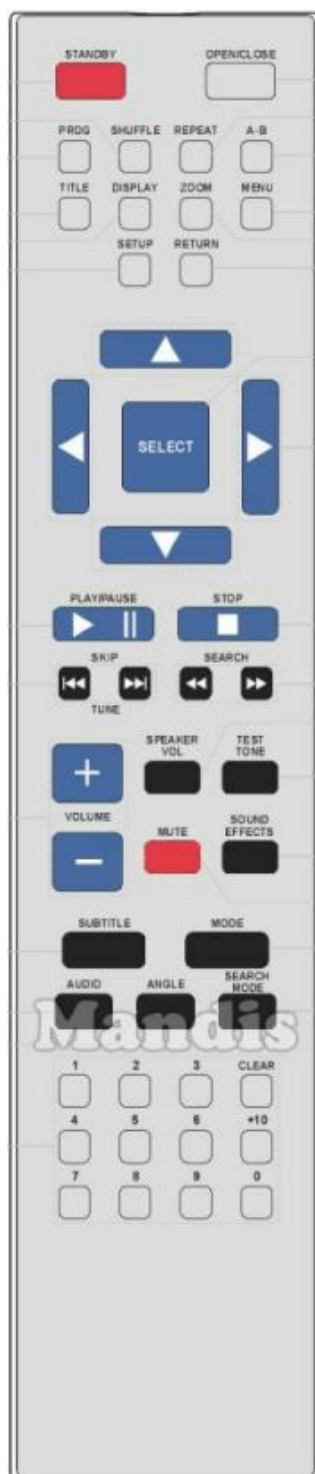

Product Information

Specifications

- **Brand:** Hitachi
- **Model:** VS20114696
- **Compatible with:** TV/Radio
- **Color:** Black
- **Remote Control Type:** Replacement
- **Power Source:** 2x AAA batteries (not included)

Product Usage Instructions

Power and Basic Controls

To turn the device on or off, use the Power button on the remote control. The following buttons are used for navigation:

- **Up**: Navigate up in menus or channels
- **Down**: Navigate down in menus or channels
- **Left**: Navigate left in menus or channels
- **Right**: Navigate right in menus or channels
- **OK**: Confirm a selection or enter a menu
- **Exit / Cancel / Clear**: Exit a menu or cancel an action

Playback and Media Controls

To play or pause media, press the Play/Pause button. To stop playback, press the Stop button. The following buttons control media playback:

- **II / Tune+**: Play/Pause button
- **>>**: Fast forward button
- **> / Tune+**: Skip forward button
- **D.Menu / Top Text**: Access the top text menu
- **Vol+**: Increase volume
- **Vol-**: Decrease volume
- **Mute**: Mute the sound

Additional Controls

The remote control also provides additional controls for features such as subtitles, audio modes, and searching:

- **Subtitle Mode**: Change subtitle settings
- **Audio**: Select audio mode
- **Info / Angle**: Access additional information or change camera angles
- **Red / Netflix / Search**: Access Netflix or perform a search
- **Guide / EPG**: Access the electronic program guide

FAQ

- **Q**: How do I change the language settings?
 - **A**: Press the Menu button, navigate to the Setup menu, and find the Language option. Use the arrow keys to select your desired language, then press OK to confirm.
- **Q**: How do I adjust the screen size?
 - **A**: Press the Zoom button on the remote control to cycle through different screen size options. Select the one that best fits your preference.
- **Q**: How do I access YouTube?
 - **A**: Press the Yellow button on the remote control to launch the YouTube app.

- **Q:** How do I program the remote control for my TV/Radio?
- **A:** Please refer to the user manual specific to your TV/Radio model for instructions on programming the remote control.

Product Overview



Remote Using Instructions

Original / Replacement

	Standby		Power
	Open / Close		Eject / Surround
	Prog		TV/Radio /
	Shuffle		Blue / Prime Video / Random
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	Title		Shift + Sound / Title
	Display		Display / Media
	Zoom		Zoom / Size
	Menu		Menu / Home
	Setup		Setup / OPT /
	Return		Back / Return
	Up		Up
	Left / AM		Left
	Select		OK
	Right / FM		Right
	Down		Down

	Play/Pause		Play / Slow
	Stop		Stop / Hold
	I<< Skip / Tune-		I<< / Preset-
	I<< Skip / Tune-	 + 	Shift + << /
	Skip >>I / Tune+		>>I / Preset+
	Skip >>I / Tune+	 + 	Shift + >> /
	<< Search		<< / Tune-
	Search >>		>> / Tune+
	Volume+		Vol+
	Speaker		D.Menu / Top
	Test Tone		Text / Goto
	Volume-		Vol-
	Mute		Mute / Dimmer
	Sound Effects		Sound / Title
	Subtitle		Subtitle / EQ
	Mode		Smart / List
	Audio		Audio / Lang I/II

	Angle		Info / Angle
	Search Mode		Red / Netflix / Search
	1		1
	2		2
	3		3
	Clear		Exit / Cancel / Clear
	4		4
	5		5
	6		6
	+10		Guide / EPG / -/--
	7		7
	8		8
	9		9
	0		0

<https://all-remote-controls.co.uk/en/Hitachi/1066693-1143-replacement-remote-control-for-Hitachi-VS20114696.html>

Documents / Resources



[Mandis 31000484 Remote Control](#) [pdf] Instructions
31000484, 31000484 Remote Control, Remote Control, Control

References

- [Replacement remote control for HITACHI VS20114696](#)
- [User Manual](#)

