



Mandis 40BL5EA Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis 40BL5EA Remote Control Instructions 

Contents

- [1 Mandis 40BL5EA Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis 40BL5EA Remote Control



Product Information

Specifications

- **Product Name:** Sharp 40BL5EA
- **Model Number:** SHWRMC0133N-40BL5EA
- **Power Source:** 2 AAA batteries (not included)
- **Compatibility:** Compatible with Sharp 40BL5EA TV
- **Dimensions:** Not specified
- **Weight:** Not specified
- **Color:** Black

Product Usage Instructions

Power On/Off

To turn on the TV, press the “Power” button located on the remote control. To turn off the TV, press the “Power” button again.

Volume Control

To increase the volume, press the “Vol+” button. To decrease the volume, press the “Vol-” button. To mute the sound, press the “Mute” button.

Channel Selection

To change channels, use the “Ch+” button to go to the next channel and the “Ch-” button to go to the previous

channel.

Navigation and Menu

Use the arrow buttons (Up, Down, Right, Left) to navigate through menus and options. Press the “OK” button to confirm selections. Use the “Menu” button to access the main menu. Press the “Back” button to go back to the previous screen. Press the “Exit” button to exit a menu or return to live TV.

Media Control

Use the media control buttons (Play, Pause, Stop) to control media playback. Use the arrow buttons to navigate through media options. Press the “OK” button to confirm selections.

FAQ

- **Q: Where can I find a replacement remote control for Sharp 40BL5EA?**

A: You can find a replacement remote control for Sharp 40BL5EA on the following website: [Replacement Remote Control for Sharp SHWRMC0133N-40BL5EA](https://all-remote-controls.co.uk/en/Sharp/1061619-92730-replacement-remote-control-for-Sharp-SHWRMC0133N-40BL5EA.html).


- **Q: Are batteries included with the remote control?**

A: No, the remote control requires 2 AAA batteries, which are not included.

- **Q: What is the color of the remote control?**

A: The remote control is black in color.

OVERVIEW

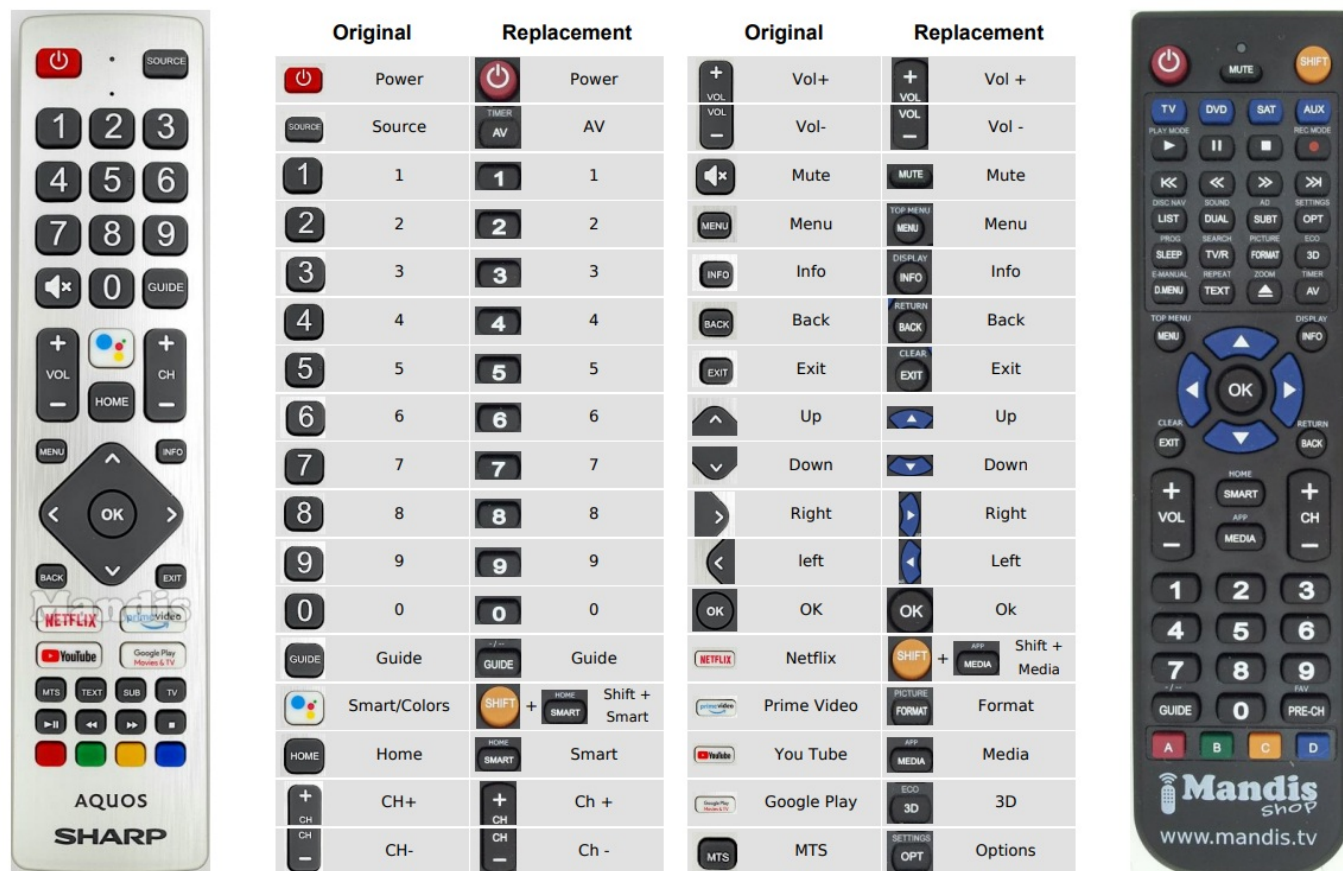

<https://all-remote-controls.co.uk/en/Sharp/1061619-92730-replacement-remote-control-for-Sharp-SHWRMC0133N-40BL5EA.html>

