



Mandis 40BL5EA Sharp Replacement Remote Control User Guide

[Home](#) » [Mandis](#) » Mandis 40BL5EA Sharp Replacement Remote Control User Guide 

Mandis 40BL5EA Sharp Replacement Remote Control User Guide



Contents




- [1 Remote Control Using Butt0n Instruction](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

Remote Control Using Butt0n Instruction



Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Source	 AV	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 Menu	 Menu
 3	 3	 Info	 Info
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 left	 Left
 0	 0	 OK	 Ok
 Guide	 Guide	 Netflix	 Shift + Media
 Smart/Colors	 Shift + Smart	 Prime Video	 Format
 Home	 Smart	 You Tube	 Media
 CH+	 Ch +	 Google Play	 3D
 CH-	 Ch -	 MTS	 Options

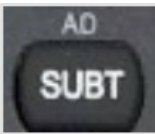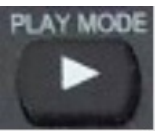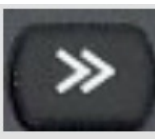

		Text		Text
		Sub		Subt
		TV		TV/R
		Play		Play
		Pause		Pause
		<<		<<
		>>		>>
		Stop		Stop
		Red		Red
		Green		Green
		Yellow		Yellow
		Blue		Blue





Documents / Resources



[Mandis 40BL5EA Sharp Replacement Remote Control](#) [pdf] User Guide
40BL5EA Sharp Replacement Remote Control, 40BL5EA, Sharp Replacement Remote Control
, Replacement Remote Control, Remote Control, Control

References

- [User Manual](#)