



Mandis 510004E Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis 510004E Remote Control Instructions 




Contents

[1 510004E Remote Control](#)

[2 Documents / Resources](#)
[2.1 References](#)

510004E Remote Control

[SCHNEIDER 510004E](#)

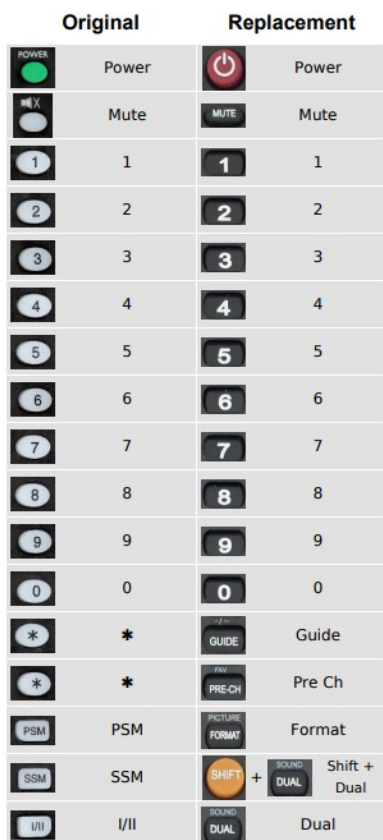

Original		Replacement	
	Menu		Menu
	TV / AV		AV
	Sleep		Sleep
	Up / PR+		Up
	Up / PR+		Ch +
	Down / PR-		Down
	Down / PR-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Text / Mix		Text
	Q.View		Options
	List		List
	Red		Red
	Green		Green



Original		Replacement	
	Yellow		Yellow
	Blue		Blue
	Update		Subt
	Time		Eject
	Reveal		TV/R
	Hold		Stop
	PIP/*		3D
	ARC		Smart
	TV / PC		Back
	Position/*		Media
	Swap/*		Shift + Media
	Input/*		Shift + AV
	Mode/*		Shift + 3D
	PR+/*		Shift + Ch +
	PR-/*		Shift + Ch -



Documents / Resources

	Mandis 510004E Remote Control [pdf] Instructions 510004E Remote Control, 510004E, Remote Control, Control
	Mandis 510004E Remote Control [pdf] Instructions 510004E Remote Control, 510004E, Remote Control, Control

References

-  [Replacement remote control for SCHNEIDER 510004E \(35941330\)](#)
- [User Manual](#)