



Mandis 6710CDAK09J Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis 6710CDAK09J Remote Control Instructions 



Contents

- [1 6710CDAK09J Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

6710CDAK09J Remote Control

[6710CDAK09J](#)



Original	Rechange
	VSM D.Menu / Top
	Power
	Eject / Surround
	Smart / List
	Shift + 6
	Shift + 2
	Shift + 7
	Shift + 8
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Rechange
	0
	Picture / Format
	Fav / Marker / PC
	Red / Netflix / Search
	Audio / Lang I/II
	Sound / Title
	Subtitle / EQ
	Back / Return
	Setup / OPT /
	Up
	Shift + >> / Preset+
	Display / Media
	Left
	Shift + << /
	OK
	Right
	Shift + >> / Tune+



Original	Rechange
	Menu / Home
	Down
	Shift + I<< / Preset-
	Shift + Sound / Title
	<< / Tune-
	>> / Tune+
	Play / Slow
	Vol+
	I<< / Preset-
	I>> / Preset+
	Pause / Step / Freeze
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Stop / Hold
	Vol-
	TV/Radio /
	Exit / Cancel / Clear

Original	Rechange
	Zoom / Size
	Mute / Dimmer
	Sleep / Timer
	Text / Goto
	Guide / EPG / -/-
	Shift + Mute / Dimmer
	CH+ / Page+
	Shift + Vol+
	Shift + Smart / List
	Shift + Power
	CH- / Page-
	Shift + Vol-
	AV / Input / RDS



<https://tout-telecommandes.fr/fr/LG/1067327-4874-telecommande-de-remplacement-pour-LG-AKB32273501.html>

Documents / Resources



[Mandis 6710CDAK09J Remote Control](#) [pdf] Instructions
6710CDAK09J Remote Control, 6710CDAK09J, Remote Control, Control

References

- [M Télécommande qui remplace LG AKB32273501](#)
- [User Manual](#)