




Mandis 6711A20041E Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis 6711A20041E Remote Control Instructions 

Contents

- [1 Mandis 6711A20041E Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 BUTTON FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis 6711A20041E Remote Control



Product Information

Specifications

- **Model:** 6711A20041E
- **Compatible with:** LG devices
- **Color:** Black
- **Power Source:** 2 AAA batteries (not included)
- **Dimensions:** 5.5 x 2.0 x 0.8 inches

Product Usage Instructions

Power

The power button is used to turn the device on or off. Press the power button once to turn on the device and press it again to turn it off.

Temperature Control

The temperature control buttons labeled “Temp+” and “Temp-” are used to adjust the temperature settings. Press the “Temp+” button to increase the temperature and press the “Temp-” button to decrease the temperature.

Cold Timer

The cold timer feature allows you to set a specific time duration for the device to operate in cold mode. Press the cold timer button and use the arrow buttons to set the desired time. Press the cold timer button again to activate the timer.

Fan Speed

The fan speed button controls the speed of the device's fan. Press the fan speed button repeatedly to cycle through different fan speed settings.

Humidity Control

The humidity control button is used to adjust the humidity level of the device. Press the humidity control button once to increase the humidity and press it again to decrease the humidity.

Frequently Asked Questions (FAQ)











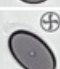









- **What devices are compatible with the 6711A20041E remote control?**

The 6711A20041E remote control is compatible with LG devices.

- **Where can I purchase a replacement 6711A20041E remote control?**

You can purchase a replacement 6711A20041E remote control from the following website: <https://all-remote-controls.co.uk>

BUTTON FUNCTION

Original	Replacement
 Power	 Power
 Temp+	 CH+ / Page+
 Temp-	 CH- / Page-
 Cold	 Zoom / Size
 Timer	 Sleep / Timer
 FAN	 Smart / List
 *	 Display / Media
 +	 Setup / OPT /
 Humidity	 Guide / EPG / -/-
 ▲	 TV/Radio /

<https://all-remote-controls.co.uk/en/LG/1065220-93850-replacement-remote-control-for-LG-6711A20041E.html>



[Mandis 6711A20041E Remote Control](#) [pdf] Instructions
6711A20041E Remote Control, 6711A20041E, Remote Control, Control

References

- [M Replacement remote control for LG 6711A20041E](#)
- [User Manual](#)