



Mandis AA59-00496A Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis AA59-00496A Remote Control Instruction Manual 

Contents

- [1 Mandis AA59-00496A Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Remote Using Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Mandis

Mandis AA59-00496A Remote Control



Product Information

The Samsung AA59-00496A is an original remote control designed for Samsung TVs. It is a replacement option for the Samsung TM940-AA59-00496A remote control. This remote control provides convenient and easy control over your Samsung TV, allowing you to navigate menus, adjust settings, and access various features.

Specifications

- **Model:** AA59-00496A
- **Compatibility:** Samsung TVs
- **Power Source:** Requires batteries (not included)
- **Color:** Black

Product Usage Instructions

Powering On and Off

- To power on your Samsung TV, press the “Power” button located at the top of the remote control.
- To power off the TV, press the “Power” button again.

Volume Control

- To adjust the volume, use the “Vol+” and “Vol-” buttons located on the remote control.
- Press the “Vol+” button to increase the volume and the “Vol-” button to decrease the volume.

Channel Selection

- To change channels, use the “CH+” and “CH-” buttons located on the remote control.
- Press the “CH+” button to go to the next channel and the “CH-” button to go to the previous channel.

Navigating Menus and Settings

The remote control provides various buttons for navigating menus and settings on your Samsung TV. Use the directional buttons (Up, Down, Left, Right) to navigate through options. Press the “OK” button to select an option. The “Return” button can be used to go back to the previous screen.

Accessing Additional Features

The remote control also provides quick access to additional features. The colored buttons (Red, Green, Yellow, Blue) may have specific functions depending on the TV model and application. The “Menu” button can be used to access the TV’s main menu. The “Info” button provides information about the current program or content.

FAQ

FAQ (Frequently Asked Questions)

How do I pair the remote control with my Samsung TV?

- The remote control should automatically work with your Samsung TV once you insert batteries. If it doesn’t, try replacing the batteries or contacting Samsung customer support for further assistance.

Can I use this remote control with other brands of TVs?

- No, this remote control is specifically designed for Samsung TVs and may not work with other brands.

Where can I find a replacement for this remote control?

- You can find a replacement for the Samsung AA59-00496A remote control on various online retailers or Samsung authorized service centers.

Remote Using Instructions

Original / Recharge



	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

	Vol-		Vol-
	CH LIST		Smart / List
	P-		CH- / Page-
	Content		D.Menu / Top
	Menu		Menu / Home
	Guide		Guide / EPG / -/--
	Tools		Setup / OPT /
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Return		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat

	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	E-Manual		Display / Media
	P.Size		Zoom / Size
	AD/Subt		Subtitle / EQ

<https://tout-telecommandes.fr/fr/Samsung/1038838-19988-telecommande-de-remplacement-pour-Samsung-TM940-AA59-00496A.html>

Documents / Resources

	Mandis AA59-00496A Remote Control [pdf] Instruction Manual TM940, AA59-00496A, AA59-00496A Remote Control, Remote Control, Control
	Mandis AA59-00496A Remote Control [pdf] Instructions AA59-00496A Remote Control, AA59-00496A, Remote Control, Control
	Mandis AA59-00496A Remote Control [pdf] Instructions AA59-00496A Remote Control, AA59-00496A, Remote Control, Control
	Mandis AA59-00496A Remote Control [pdf] Instructions AA59-00496A Remote Control, AA59-00496A, Remote Control, Control
	Mandis AA59-00496A Remote Control [pdf] Instructions AA59-00496A Remote Control, AA59-00496A, Remote Control, Control

References

- [M Télécommande qui remplace SAMSUNG TM940 \(AA59-00496A\)](#)
- [User Manual](#)