



Mandis AA59-00496A Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AA59-00496A Remote Control Instructions 

 
Mandis AA59-00496A Remote Control Instructions



 
 
Contents

 
 
 
- [1 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)



Original	Rechange
 Power	 Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
 TTX/MIX	 Text / Goto
0	0
 PRE-CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+



Original	Recharge
 Vol-	 Vol-
 CH LIST	Smart / List
 P-	 CH- / Page
 Content	 D.Menu / Top
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /

 Info	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red/A	 Red / Netflix / Search
 Green/B	 Green / APP / Repeat
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
E-Manual	Display / Media
P.Size	Zoom / Size
AD/Subt	Subtitle / EQ

<https://tout-telecommandes.fr/fr/Samsung/1038838-19988-telecommande-de-remplacement-pour-Samsung-TM940-AA59-00496A.html>

Documents / Resources



[Mandis AA59-00496A Remote Control](#) [pdf] Instructions

AA59-00496A Remote Control, AA59-00496A, Remote Control, Control

References

- [M Télécommande qui remplace SAMSUNG TM940 \(AA59-00496A\)](#)
- [User Manual](#)