



Mandis AA59-00496A Remote Control Instructions

[Home](#) » [Mandis](#) » **Mandis AA59-00496A Remote Control Instructions**

Contents

- 1 AA59-00496A Remote Control
- 2 Product Information
- 3 Remote using instructions
- 4 Documents / Resources
 - 4.1 References

Mandis

AA59-00496A Remote Control



Product Information

Specifications

- **Model:** Samsung AA59-00496A
- **Power Source:** Rechargeable
- **Compatibility:** Original Samsung remote
- **Color:** Black
- **Weight:** N/A
- **Dimensions:** N/A
- **Manufacturer:** Samsung

Product Usage Instructions

Powering On/Off

To power on the device, press the Power button located at the top of the remote. To power off the device, press and hold the Power button until the device turns off.

Changing Channels

Use the CH+ and CH- buttons to navigate through the available channels. Press the CH+ button to go to the next channel and the CH- button to go to the previous channel.

Adjusting Volume

To adjust the volume, use the Vol+ and Vol- buttons. Press the Vol+ button to increase the volume and the Vol- button to decrease the volume.

Navigating Menus

The remote features various navigation buttons to help you navigate through menus. Use the Up, Down, Left, and Right buttons to move around the menu options. Press OK to select an option.

Accessing Additional Functions

The remote has dedicated buttons for accessing additional functions. Use the Menu button to access the main menu, Guide button for electronic program guide, and Tools button for additional tools and settings.

FAQ

- **Q: Is this remote compatible with all Samsung TVs?**
- **A:** This remote is compatible with most Samsung TVs. However, it is always recommended to check the compatibility list or consult the manufacturer for specific model compatibility.
- **Q: How do I pair the remote with my TV?**
- **A:** The remote should automatically pair with your TV. If it doesn't, try replacing the batteries or contacting Samsung customer support for further assistance.

- **Q: What do the colored buttons on the remote do?**
- **A:** The colored buttons on the remote provide quick access to specific functions. For example, the Red button may be used for accessing streaming services like Netflix, and the Green button may be used for accessing apps.

Remote using instructions



Original	Rechange
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	PRE-CH
	Vol+
	Mute
	P+

Original	Rechange
	Vol-
	CH LIST
	P-
	Content
	Menu
	Guide
	Tools
	Info
	Up
	Left
	OK
	Right
	Return
	Down
	Exit
	Red/A
	Green/B



Original	Rechange
	Yellow/C
	Blue/D
	E-Manual
	P.Size
	AD/Subt

Original	Rechange
----------	----------



Documents / Resources



[Mandis AA59-00496A Remote Control](#) [pdf] Instructions
AA59-00496A Remote Control, AA59-00496A, Remote Control, Control

References

- [M Télécommande qui remplace SAMSUNG TM940 \(AA59-00496A\)](#)
- [User Manual](#)