



Mandis AA59-00787A Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AA59-00787A Remote Control Instructions 



Contents

- [1 AA59-00787A Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

AA59-00787A Remote Control

[Samsung AA5900787A](#)



Original	Rechange	Original	Rechange
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH.List		List
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Smart Hub		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Return/Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green



<https://tout-telecommandes.fr/fr/Samsung/1060266-79282-telecommande-de-remplacement-pour-Samsung-AA59-00787A.html>

Samsung AA5900787A



Original	Rechange	Original	Rechange
	Yellow		Yellow
	Blue		Blue
	E-Manual		D. Menu
	3D		3D
	D		Dual
	Stop		Stop
	<</I<<		<<
	Play		Play
	Pause		Pause
	>>/>>I		>>



<https://tout-telecommandes.fr/fr/Samsung/1060266-79282-telecommande-de-remplacement-pour-Samsung-AA59-00787A.html>

Documents / Resources



[Mandis AA59-00787A Remote Control](#) [pdf] Instructions
AA59-00787A, AA59-00787A Remote Control, Remote Control, Control

References

- [M Télécommande qui remplace SAMSUNG AA59-00787A](#)
- [User Manual](#)