



Mandis AA59-00787A Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AA59-00787A Replacement Remote Control Instructions 

Contents

- [1 Mandis AA59-00787A Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Instructions](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis AA59-00787A Replacement Remote Control



Product Information

Specifications

- Model: Samsung AA5900787A
- Power Source: Rechargeable
- Compatible with: Samsung TVs
- Color: Original (black)

Product Usage Instructions

• Power On/Off

To turn on the TV, press the Power button located at the top of the remote. Press the same button again to turn off the TV.

• Volume Control

Use the Vol+ and Vol- buttons to increase or decrease the volume of the TV.

• Channel Selection

To navigate through channels, use the Ch+ and Ch- buttons. Press the List button to view the channel list.

• Menu Navigation

Access the TV menu by pressing the Menu button. Use the Up, Down, Right, and Left buttons to navigate within the menu. Press OK to select an option.

• Smart Hub and E-Manual

The Smart Hub button provides quick access to various smart features and apps. Press the E-Manual button to access the electronic manual for detailed instructions and information.

FAQ

- **Q: How do I change the batteries?**

A: This remote is rechargeable and does not require batteries. To recharge, connect the remote to a power source using the provided cable.

- **Q: Can I use this remote with other brands of TVs?**

A: No, this remote is specifically designed for Samsung TVs and may not be compatible with other brands.

- **Q: Where can I find a replacement remote?**

A: You can find a replacement remote for the Samsung AA5900787A at the following website: [Replacement Remote for Samsung AA59-00787A](#)

[Samsung AA5900787A](#)

Instructions



Original		Recharge	
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Original		Recharge	
	CH.List		List
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Smart Hub		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Return/Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green





Original	Rechange	Original	Rechange
Yellow	Yellow		
Blue	Blue		
E-Manual	D. Menu		
3D	3D		
D	Dual		
Stop	Stop		
<</I<<	<<		
Play	Play		
Pause	Pause		
>>/>>I	>>		



<https://tout-telecommandes.fr/fr/Samsung/1060266-79282-telecommande-de-remplacement-pour-Samsung-AA59-00787A.html>

Documents / Resources



[Mandis AA59-00787A Replacement Remote Control](#) [pdf] Instructions

AA59-00787A Replacement Remote Control, AA59-00787A, Replacement Remote Control, Remote Control

References

- 
[Télécommande qui remplace SAMSUNG AA59-00787A](#)
- [User Manual](#)