



Mandis AA5900787A Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AA5900787A Remote Control Instructions 

Contents

- [1 Mandis AA5900787A Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 BUTTON FUNCTION](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Mandis AA5900787A Remote Control



Product Information

Specifications

- Product Name: Samsung AA5900787A
- Compatibility: Original remote for Samsung devices

Product Usage Instructions

Power and Volume Control

The power source button is located at the top left corner of the remote. To turn on or off your device, press the power button. The volume control buttons are located on the right side of the remote. Use the Vol+ button to increase the volume and the Vol- button to decrease the volume. Press the VolMute button to mute/unmute the sound.

Channel and Menu Navigation

Use the CH. List button to access the channel list. Press P+ and P- buttons to navigate through the channels. The Menu button allows you to access the menu options of your device. The Smart Hub button provides quick access to online streaming services and apps. Use the Up, Down, Right, and Left buttons to navigate menus and options. Press OK to confirm your selection.

Text and E-Manual

The Text button allows you to access teletext or text-based information on compatible channels. The E-Manual button provides access to the electronic version of the user manual for detailed instructions and information.

Color Buttons and 3D Functionality

The remote features color buttons – Yellow, Blue, Red, and Green – that can be used for various functions depending on the device and application. The 3D button enables or disables 3D functionality if supported by your TV.

Additional Functions

The remote also includes additional functions such as Guide, Tools, Info, Return/Back, Exit, and Dual Stop. These buttons provide access to various features and options depending on your device.

Frequently Asked Questions (FAQ)

Q: Where can I find a replacement remote for Samsung AA5900787A?

A: You can find a replacement remote for Samsung AA5900787A on the following website: [Replacement Remote for Samsung AA5900787A](#).

OVERVIEW



BUTTON FUNCTION

Original		Rechange	
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		Text
	PRE-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Original		Rechange	
	CH.List		List
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Smart Hub		Smart
	Guide		Guide
	Tools		Options
	Info		Info
	Return/Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green

Original		Rechange	
	Yellow		Yellow
	Blue		Blue
	E-Manual		D. Menu
	3D		3D
	D		Dual
	Stop		Stop
	<</l<<		<<
	Play		Play
	Pause		Pause
	>>/>>l		>>

<https://tout-telecommandes.fr/fr/Samsung/1060266-79282-telecommande-de-remplacement-pour-Samsung-AA59-00787A.html>



[Mandis AA5900787A Remote Control](#) [pdf] Instructions
AA5900787A Remote Control, AA5900787A, Remote Control, Control

References

- [M Télécommande qui remplace SAMSUNG AA59-00787A](#)
- [User Manual](#)