



Mandis AH5902291A Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AH5902291A Remote Control Instructions 



[Samsung AH5902291A-DVD](#) ()

Contents

- [1 AH5902291A Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

AH5902291A Remote Control



Original		Replacement	
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green/Tuner		Green
	Yellow/MO/ST		Yellow
	Blue/CD Ripping		Blue
	Dimmer		Subt
	S.Vol		Format
	P.Bass/Audio Upscale		3D



[illegible]

	Mandis AH5902291A Remote Control [pdf] Instructions AH5902291A Remote Control, AH5902291A, Remote Control, Control
	Mandis AH5902291A Remote Control [pdf] Instructions AH5902291A, AH5902291A Remote Control, Remote Control, Control
	Mandis AH5902291A Remote Control [pdf] Instructions AH5902291A Remote Control, AH5902291A, Remote Control, Control

References

- [M Remote controls for all devices](#)
- [M Replacement remote control for SAMSUNG MI-AH5902291A](#)
- [User Manual](#)