



Mandis AKA007 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AKA007 Remote Control Instructions 

Contents

- 1 Mandis AKA007 Remote Control
- 2 Product Information
- 3 USING INSTRUCTION
- 4 Documents / Resources
 - 4.1 References

Mandis

Mandis AKA007 Remote Control



Product Information

Specifications

- Product Model: AKA007
- Control Type: Remote Control
- Compatibility: Original and Replacement
- Power Options: Battery-powered
- Color: Black
- Dimensions: N/A
- Weight: N/A

Product Usage Instructions

Original Remote Control Functions

The original remote control has the following functions:

- Power: Turns the device on or off.
- Mute: Mutes or unmutes the sound.
- P.Mode: Switches to different picture modes.
- S.Mode: Switches to different sound modes.
- Nicam / A2: Selects the audio type.

- Sleep: Activates the sleep timer.
- 1-0: Numeric buttons for channel selection.
- -/=: Used for channel selection or to enter a hyphen or dash.
- Recall: Retrieves the previous channel.
- FAV: Accesses favorite channels.
- Fav + / Fav -: Scroll through favorite channels.
- Fav Red / Green / Yellow / Blue: Accesses colored function buttons.
- Source: Switches between input sources.
- Info: Displays information about the current program or channel.
- Up / Right / Down / Left: Navigation buttons for menu and settings.
- OK: Confirms a selection or executes a command.
- Menu: Opens the menu interface.
- Exit: Exits the current menu or screen.

Replacement Remote Control Functions

The replacement remote control has the following functions:

- Power: Turns the device on or off.
- Mute: Mutes or unmutes the sound.
- +: Increases the volume.
- -: Decreases the volume.
- Shift + Format: Adjusts the display format.
- Shift + Dual / Dual: Activates dual-screen mode.
- Sleep: Activates the sleep timer.
- 1-0: Numeric buttons for channel selection.
- Guide: Access the TV program guide.
- Recall: Retrieves the previous channel.
- Fav + / Fav -: Scroll through favorite channels.
- Fav Red / Green / Yellow / Blue: Accesses colored function buttons.
- AV: Switches between audio/video sources.
- Info: Displays information about the current program or channel.
- Up / Right / Down / Left: Navigation buttons for menu and settings.
- OK: Confirms a selection or executes a command.
- Menu: Opens the menu interface.
- Exit: Exits the current menu or screen.

FAQ

- **Q:** How do I replace the batteries in the remote control?
- **A:** To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and remove the old batteries. Insert new batteries following the polarity markings (+/-) and close the compartment securely.
- **Q:** How do I pair the replacement remote control with my device?

- **A:** The replacement remote control is designed to work with your device without the need for pairing. Simply insert batteries and start using the remote control.
- **Q:** Can I use the replacement remote control with other devices?
- **A:** The replacement remote control is specifically designed for compatibility with the AKA007 model. It may not work with other devices.
- **Q:** Where can I find a user manual for the AKA007 device?
- **A:** For detailed instructions on using the AKA007 device, you can refer to the user manual provided by the manufacturer. You can also visit their official website for online manuals and support.

USING INSTRUCTION



Original	Replacement	Original	Replacement
	Power		Pre Ch
	Mute		Shift + Pre Ch
	Shift + Format		Shift + Up
	Shift + Dual		Shift + Down
	Dual		Red
	Sleep		Green
	1		Yellow
	2		Blue
	3		AV
	4		Info
	5		Up
	6		Right
	7		Down
	8		Left
	9		Ok
	0		Menu
	Guide		Exit





Original		Replacement		Original		Replacement	
	Vol +		Vol +		Rec		Shift + Text
	Vol -		Vol -		Timeshift		Smart
	Media		Media		A-B		Back
	TV / Radio		TV/R		EPG		Format
	CH +		Ch +				
	CH -		Ch -				
	Play/Pause / Text		Play				
	Play/Pause / Text		Pause				
	Play/Pause / Text		Text				
	<< / Size		<<				
	<< / Size		3D				
	>> / Reveal		>>				
	Stop / Hold		Stop				
	I<< / Index		I<<				
	>>I / Subpage		>>I				
	Cancel		Shift + Exit				
	Subtitle		Subt				



<https://all-remote-controls.co.uk/en/1064220-85069-replacement-remote-control-for-AKA007.html>

Documents / Resources

	Mandis AKA007 Remote Control [pdf] Instructions AKA007 Remote Control, AKA007, Remote Control, Control
--	---

References

- [Replacement remote control for AKA007](#)
- [User Manual](#)