



Mandis Akai 845A45MTK15XBB Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis Akai 845A45MTK15XBB Remote Control Instructions 



Contents

- [1 Akai 845A45MTK15XBB](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

Akai 845A45MTK15XBB



Original	Replacement	Original	Replacement
	Power		8
	Freeze		9
	Subtitle		Jump
	Guide		0
	Fav.CH		Ent
	I-II		Vol+
	Text / Mix		Info
	Mute		CH+ / Page+
	Sleep		Vol-
	P.Size		Input
	1		CH- / Page-
	2		Exit / Cancel / Clear
	3		Menu / Home
	4		Up
	5		Left
	6		OK
	7		Right

Original	Replacement	Original	Replacement
	8		8
	9		9
	Jump		Back / Return
	0		0
	Ent		Display / Media
	Vol+		Vol+
	Info		Info / Angle
	CH+ / Page+		CH+ / Page+
	Vol-		Vol-
	Input		AV / Input / RDS
	CH- / Page-		CH- / Page-
	Exit / Cancel / Clear		Exit / Cancel / Clear
	Menu / Home		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right



Original	Replacement	Original	Replacement
	S.Mode		Sound / Title
	Down		Down
	P.Mode		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Index		Rec / Rec Mode
	Reveal		Play / Slow
	Size		Zoom / Size
	Hold		Stop / Hold

Original	Replacement	Original	Replacement



<https://all-remote-controls.co.uk/en/Akai/1066199-23207-replacement-remote-control-for-Akai-845A45MTK15XBB.html>

Documents / Resources



[Mandis Akai 845A45MTK15XBB Remote Control](#) [pdf] Instructions

Akai 845A45MTK15XBB Remote Control, Akai 845A45MTK15XBB, Remote Control, Control

References

- [🌐 Wir sind bald für Sie da!](#)
- [📖 Replacement remote control for AKAI 845A45MTK15XBB](#)
- [User Manual](#)