



Mandis AKB32273501 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AKB32273501 Remote Control Instructions 

Contents

- [1 Mandis AKB32273501 Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 REPLACEMENT PARTS](#)
- [6 REMOTE FUNCTIONS](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



Mandis AKB32273501 Remote Control Instructions



Product Information

Specifications

- Model: VSM Power Open / Close
- Supported Bands: Band DVD
- Auxiliary Port: USB

Product Usage Instructions

Power and Navigation

- To power on/off the device, use the “Power” button.
- Use the number buttons (1-9) to directly select a channel or menu option.
- Press the “Menu” button to access the main menu.
- Use the directional buttons (Up, Down, Left, Right) to navigate through menus and options.
- Press the “Enter” button to confirm selections.

Audio and Video Controls

- Adjust the volume using the “+” and “-” buttons.
- Change the audio language or audio mode using the “Audio” button.
- Select subtitles or enable/disable them using the “Subtitle” button.
- Change the picture format or zoom level using the “Picture/Format” button.
- Access additional audio and video settings using the “Setup” button.

Media Playback

- Use the “Play” button to start playing media.
- Press the “Pause/Step” button to pause playback or step through frames.
- Press the “Stop” button to stop playback.
- Use the “Skip+” and “Skip-” buttons to scan forward or backward through media.
- Enable repeat mode or set A-B repeat using the “Repeat” button.

FAQ

- Q: Where can I find a replacement remote control for this device?
- A: You can find a replacement remote control for this device at <https://tout-telecommandes.fr/fr/LG/1067327-4874-telecommande-de-remplacement-pour-LG-AKB32273501.html>
- Q: What is the model number of this device?
- A: The model number of this device is 6710CDAK09J.

OVERVIEW

6710CDAK09J



REPLACEMENT PARTS

Original

Recharge

	VSM		D.Menu / Top
	Power		Power
	Open / Close		Eject / Surround
	Band		Smart / List
	Band	 + 	Shift + 6
	DVD	 + 	Shift + 2
	Aux	 + 	Shift + 7
	USB	 + 	Shift + 8
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

	0		0
	XTS Pro		Picture / Format
	Marker		Fav / Marker / PC
	Search		Red / Netflix / Search
	Audio		Audio / Lang I/II
	Sound		Sound / Title
	Subtitle		Subtitle / EQ
	Return		Back / Return
	Setup		Setup / OPT /
	Up / Preset +		Up
	Up / Preset +		Shift + >>I / Preset+
	Display		Display / Media
	Left / Tun -		Left
	Left / Tun -		Shift + << /
	Enter		OK
	Right / Tun +		Right
	Right / Tun +		Shift + >> / Tune+

	Menu		Menu / Home
	Down / Preset -		Down
	Down / Preset -	 + 	Shift + I<< / Preset-
	Title	 + 	Shift + Sound / Title
	<< Scan -		<< / Tune-
	>> Scan +		>> / Tune+
	Play		Play / Slow
	Volume +		Vol+
	I<< / Skip-		I<< / Preset-
	>>I / Skip+		>>I / Preset+
	Pause / Step		Pause / Step / Freeze
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Stop		Stop / Hold
	Volume -		Vol-
	Prog / Memo.		TV/Radio /
	Clear		Exit / Cancel / Clear

	Zoom		Zoom / Size
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	RDS / Resol.		Text / Goto
	PTY / HDMI		Guide / EPG / -/--
	Dimmer		Shift + Mute / Dimmer
	Tv Channel+		CH+ / Page+
	Tv Vol+		Shift + Vol+
	Tv Mute		Shift + Smart / List
	Power Tv		Shift + Power
	Tv Channel-		CH- / Page-
	Tv Vol-		Shift + Vol-
	Tv Input		AV / Input / RDS

REMOTE FUNCTIONS



<https://tout-telecommandes.fr/fr/LG/1067327-4874-telecommande-de-remplacement-pour-LG-AKB32273501.html>

Documents / Resources



[Mandis AKB32273501 Remote Control](#) [pdf] Instructions
AKB32273501 Remote Control, AKB32273501, Remote Control, Control

References

- [M Télécommande qui remplace LG AKB32273501](#)
- [User Manual](#)

