



Mandis AKB72914020 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AKB72914020 Remote Control Instructions 

Contents

- [1 Mandis AKB72914020 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 PRODUCT OVERVIEW](#)
- [6 FUNCTION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Mandis

Mandis AKB72914020 Remote Control



Product Information

Specifications

- Model: LG AKB72914020
- Color: Black
- Dimensions: 15 x 5 x 2 cm
- Battery: 2 AAA batteries (not included)
- Compatibility: Compatible with LG TVs and Radios

Product Usage Instructions

Power

Press the “Power” button to turn the device on or off.

Volume Control

Use the “Vol+” button to increase the volume and the “Vol-” button to decrease the volume.

Channel Control

Use the “CH+” button to go to the next channel and the “CH-” button to go to the previous channel.

Input Selection

Press the “Input” button to select the input source for your device.

Menu Navigation

Use the arrow buttons (Up, Down, Left, Right) to navigate through the menu options. Press the “OK” button to select an option.

Playback Control

Use the “Play/Pause” button to start or pause playback. Use the “Stop” button to stop playback. Use the “>>/Tune+” button to skip forward during playback.

Additional Functions

The remote control also provides additional functions such as Sleep/Timer, Energy Saving, FAV/Mark/Char/Nu, AV Mode, Picture/Format, 3D, Zoom/Size, Mute/Delete, Q.Menu, and more. Please refer to the user manual for detailed instructions on these functions.

Frequently Asked Questions

Q: How do I change the input source?

A: Press the “Input” button and use the arrow buttons to select the desired input source. Press the “OK” button to confirm.

Q: How do I adjust the volume?

A: Use the “Vol+” button to increase the volume and the “Vol-” button to decrease the volume.

Q: How do I navigate through the menu options?

A: Use the arrow buttons (Up, Down, Left, Right) to navigate through the menu options. Press the “OK” button to select an option.

Q: How do I start or pause playback?

A: Use the “Play/Pause” button to start or pause playback.

Q: How do I stop playback?

A: Use the “Stop” button to stop playback.

PRODUCT OVERVIEW



FUNCTION

Original		Rechange	
	Power		Power
	Energy Saving		Sleep / Timer
	AV Mode		Picture / Format
	Input		AV / Input / RDS
	Tv/Rad		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Setup / OPT /

Original		Rechange	
	Vol+		Vol+
	FAV/Mark/Char/Nu		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	Mute/Delete		Mute / Dimmer
	P-		CH- / Page-
	Menu		Menu / Home
	NetCast		Sound / Title
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Back		Back / Return

Original	Recharge
 Guide	 Guide / EPG / -/--
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/L/R/Select	 Blue / Prime Video / Random
 Text	 Text / Goto
 T.Opt	 Shift + Setup / OPT / Tools
 Subtitle	 Subtitle / EQ
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Simplink	 Display / Media
 Info	 Info / Angle
 AD	 Audio / Lang I/II
 APP/*	 Shift + Green / APP / Repeat

<https://tout-telecommandes.fr/fr/LG/1066771-19989-telecommande-de-remplacement-pour-LG-AKB72914020.html>

Documents / Resources

	Mandis AKB72914020 Remote Control [pdf] Instructions AKB72914020 Remote Control, AKB72914020, Remote Control, Control
---	--

References

- [M Télécommande qui remplace LG AKB72914020](#)
- [User Manual](#)