



Mandis AKB73616401 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AKB73616401 Remote Control Instructions 



LG AKB73616401

 
 
 
 
 
 
 
 
 
 
 
Contents

- [1 AKB73616401 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

AKB73616401 Remote Control

 




	Originale		Sostituto		Originale		Sostituto
	Power		Power		Page Up		Ch +
	My Media/USB		Media		Page Down		Ch –
	Input		AV		Ratio		TV/R
	Stop		Stop		Blank		Text
	Play		Play		Mute		Mute
	Pause		Pause		Settings		Options
	<<		<<		Still		Smart
	>>		>>		Q.Menu		Menu
	Mark		Guide		Back		Back
	Keys Up		1		Auto		Eject
	Keys Down		4		Exit		Exit
	Sleep		Sleep		OK		Ok
	Picture		Format		UP		Up
	3D		3D		Down		Down
	L/R		Pre Ch		Right		Right
	Vol+		Vol +		Left		Left
	Vol-		Vol –		Red		Red
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				



Documents / Resources

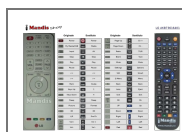

[Mandis AKB73616401 Remote Control](#) [pdf] Instructions
AKB73616401 Remote Control, AKB73616401, Remote Control, Control

References

- [M Telecomando sostituto di LG AKB73616401](#)
- [User Manual](#)