



# Mandis AKB73715686 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AKB73715686 Remote Control Instructions 

## Contents

- [1 Mandis AKB73715686 Remote Control](#)
- [2 Product Information](#)
  - [2.1 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Remote Control Function](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

# Mandis

**Mandis AKB73715686 Remote Control**



## Product Information

### Specifications

- **Model:** LG AKB73715686
- **Compatibility:** LG TVs and Radios
- **Subtitle Support:** Yes
- **AD/PIP Support:** Yes
- **TV/PC Input:** Yes
- **Media Playback:** Yes
- **AV Inputs:** Yes
- **Number of Channels:** 10 (1-0)
- **Quick View:** Yes
- **Favorite Channels:** Yes
- **Program Guide:** Yes
- **Mute Function:** Yes
- **Volume Control:** Yes
- **Channel Control:** Yes
- **Text Information:** Yes
- **Options Menu:** Yes

## Product Usage Instructions

- **Power On/Off**

- To turn on the TV or Radio, press the “Power” button.
- To turn off the TV or Radio, press the “Power” button again.

- **Subtitle Control**

To enable/disable subtitles, press the “Subtitle” button.

- **AD/PIP Control**

To use the AD/PIP feature, press the “AD/PIP” button.

- **TV/PC Input**

To switch between TV and PC input, press the “TV/PC Input” button.

- **Media Playback**

To access media playback options, press the “Media” button.

- **AV Inputs**

To switch between different AV inputs, press the corresponding number button (1-9, 0).

- **Quick View**

To quickly view channels, press the “Q.View” button.

- **Favorite Channels**

To access your favorite channels, press the “FAV” button.

- **Program Guide**

To view the program guide, press the “Guide” button.

- **Mute Function**

To mute/unmute the TV or Radio, press the “Mute” button.

- **Volume Control**

To increase/decrease the volume, press the “Vol+” or “Vol-” buttons respectively.

- **Channel Control**

To change channels, press the “Ch+” or “Ch-” buttons respectively.

- **Text Information**

To access text information, press the “Text” button.

- **Options Menu**

To access the options menu, press the “Options” button.

## Frequently Asked Questions (FAQ)

- **Q: What is the model number of the remote control?**

A: The model number of the remote control is LG AKB73715686.

- **Q: Where can I find a replacement remote control for LG AKB73715686?**

A: You can find a replacement remote control for LG AKB73715686 [here](#).

## Remote Control Function



| Original | Rechange | Original | Rechange        |
|----------|----------|----------|-----------------|
|          | Power    |          | Power           |
|          | Tv/Radio |          | TV/R            |
|          | Subtitle |          | Subt            |
|          | AD/PIP/* |          | Shift + Subt    |
|          | TV/PC    |          | Media           |
|          | Input    |          | AV              |
|          | 1        |          | 1               |
|          | 2        |          | 2               |
|          | 3        |          | 3               |
|          | 4        |          | 4               |
|          | 5        |          | 5               |
|          | 6        |          | 6               |
|          | 7        |          | 7               |
|          | 8        |          | 8               |
|          | 9        |          | 9               |
|          | 0        |          | 0               |
|          | List     |          | List            |
|          | Q.View   |          | Smart           |
|          | FAV      |          | Pre Ch          |
|          | Guide    |          | Guide           |
|          | Mute     |          | Mute            |
|          | Vol+     |          | Vol +           |
|          | Vol-     |          | Vol -           |
|          | PR+      |          | Ch +            |
|          | PR-      |          | Ch -            |
|          | Text     |          | Text            |
|          | Info     |          | Info            |
|          | T.Opt    |          | Shift + Options |
|          | Settings |          | Options         |
|          | Q.Menu   |          | Menu            |
|          | Back     |          | Back            |
|          | Exit     |          | Exit            |
|          | Up       |          | Up              |
|          | Down     |          | Down            |



| Original | Rechange | Original | Rechange |
|----------|----------|----------|----------|
|          | Right    |          | Right    |
|          | Left     |          | Left     |
|          | OK       |          | Ok       |
|          | Simplink |          | D. Menu  |
|          | Rec/*    |          | Rec      |
|          | Stop     |          | Stop     |
|          | <<       |          | <<       |
|          | Play     |          | Play     |
|          | Pause    |          | Pause    |
|          | >>       |          | >>       |
|          | Red      |          | Red      |
|          | Green    |          | Green    |
|          | Yellow   |          | Yellow   |
|          | Blue     |          | Blue     |



<https://tout-telecommandes.fr/fr/LG/1056307-65493-telecommande-de-remplacement-pour-LG-AKB73715686.html>.

## Documents / Resources



[Mandis AKB73715686 Remote Control](#) [pdf] Instructions  
AKB73715686 Remote Control, AKB73715686, Remote Control, Control

## References

-  [Télécommande qui remplace LG AKB73715686](#)
- [User Manual](#)