



# Mandis AKB73975758 Replacement Remote Control User Manual

[Home](#) » [Mandis](#) » Mandis AKB73975758 Replacement Remote Control User Manual 

## Contents

- [1 Mandis AKB73975758 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 PRODUCT OVERVIEW](#)
- [6 REMOTE USING INSTRUCTIONS](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)



**Mandis AKB73975758 Replacement Remote Control**



## Product Information

### Specifications

- **Product Name:** Power My Apps TV/Radio
- **Model Number:** LG AKB73975758
- **Compatible Brands:** LG
- **Color:** Black
- **Dimensions:** N/A
- **Weight:** N/A
- **Wireless Technology:** Infrared (IR)
- **Power Source:** 2 AAA batteries (not included)

### Product Usage Instructions

## Power On/Off

To turn on the TV/Radio, press the “Power” button located at the top left corner of the remote. To turn it off, press the same button again.

## Channel Selection

Use the number buttons (1-9, 0) to directly enter the channel number you want to watch. Press the “Ch +” or “Ch -” buttons to switch between channels sequentially.

## Volume Control

Adjust the volume by pressing the “Vol +” or “Vol -” buttons. Pressing the “Mute” button will instantly mute or unmute the sound.

## Menu Navigation

Navigate through the menu options using the arrow buttons (Up, Down, Left, Right). Press the “OK” button to select an option.

## TV/Radio Guide

Access the TV/Radio guide by pressing the “Guide” button. Use the arrow buttons to navigate through the guide and select a program. Press the “OK” button to confirm your selection.

## Playback Control

During playback of media content, use the following buttons for control:

- **“Play/Pause”**: Start or pause the playback.
- **“Stop/Line”**: Stop the playback or go back to the previous line.
- **>**: Fast forward the playback.
- **<<**: Rewind the playback.

## FAQ

- **Q: How do I replace the batteries?**
  - **A:** To replace the batteries, locate the battery compartment on the back of the remote. Open it and remove the old batteries. Insert two new AAA batteries, ensuring they are correctly aligned with the polarity markings. Close the battery compartment securely.
- **Q: Can this remote control be used with other TV brands?**
  - **A:** No, this remote control is specifically designed for LG TVs.
- **Q: How do I access subtitles?**
  - **A:** Press the “Subtitle” button to enable or disable subtitles while watching a program.
- **Q: What should I do if the remote control is not working?**
  - **A:** First, make sure the batteries are inserted correctly and have sufficient charge. If the problem persists, try replacing the batteries. If the issue still persists, check if there are any obstacles blocking the line of sight

between the remote control and the TV. Additionally, ensure that there are no other devices interfering with the remote control's signal. If none of these solutions work, please contact customer support for further assistance.

## PRODUCT OVERVIEW



## REMOTE USING INSTRUCTIONS



Original	Replacement	Original	Replacement
	Power		Guide
	My Apps		Info
	TV/Radio		Mute
	1		Vol +
	2		Vol -
	3		Page+
	4		Page-
	5		Text
	6		T.Opt
	7		Smart
	8		FAV
	9		Back
	0		Exit
	List		Ok
	Q.View		Up
	Input		Down
	Q.Menu/Subtitle		Right
			Right



Original	Replacement
	Left
	Red
	Green
	Yellow
	Blue
	Stop
	Rec
	Play
	Pause
	>>
	<<
	Shift + Media
	Shift + Subt
	Shift + Options

<https://all-remote-controls.co.uk/en/LG/1037295-65492-replacement-remote-control-for-LG-AKB73975758.html>



**[Mandis AKB73975758 Replacement Remote Control](#)** [pdf] User Manual  
AKB73975758 Replacement Remote Control, AKB73975758, Replacement Remote Control, Remote Control

## References

- [User Manual](#)