



Mandis AKB75635301 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AKB75635301 Replacement Remote Control Instructions 

Contents

- [1 Mandis AKB75635301 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KEYS FUNCTION](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



Mandis AKB75635301 Replacement Remote Control



Product Information

- **Specifications**
 - **Product Name:** LG AKB75635301
 - **Compatibility:** LG AN-MR19BA
 - **Model Number:** 1059079-91524
 - **Dimensions:** N/A
 - **Weight:** N/A
 - **Color:** N/A

Product Usage Instructions

- **Power and Navigation**
 - To power on the device, press the “Power” button. Use the “Home” or “Menu” button to access the main menu. Press the corresponding number buttons to navigate to specific options.
- **Settings and Setup**
 - To access settings and setup options, press the “Settings” or “Setup” button. Use the “Up” and “Down” buttons to scroll through the options. Press “OK” to select a setting.
- **Volume and Channel Control**
 - Use the “Vol+” and “Vol-” buttons to adjust the volume. Press the “CH+” and “CH-” buttons to change

channels. To mute the sound, press the “Mute” button.

- **Media Control**

- For media control, use the “Play/Pause” button to start or pause playback. Press the “Stop” button to stop playback. Use the “Forward” and “Rewind” buttons to skip forward or backward.

- **Additional Features**

- The remote control also includes additional features such as a built-in guide/EPG, search functionality, color-coded buttons for specific applications (e.g., Netflix, Prime Video, YouTube), and input selection.

- **FAQ**

- **How do I power on the device?**

- To power on the device, press the “Power” button located on the remote control.

- **How do I access the main menu?**

- To access the main menu, press the “Home” or “Menu” button on the remote control.

- **How do I adjust the volume?**

- To adjust the volume, use the “Vol+” and “Vol-” buttons on the remote control.

- **How do I change channels?**

- To change channels, use the “CH+” and “CH-” buttons on the remote control.

- **How do I pause or play media?**

- To pause or play media, use the “Play/Pause” button on the remote control.

- **How do I access additional features like Netflix or Prime Video?**

- To access additional features like Netflix or Prime Video, use the color-coded buttons on the remote control (e.g., Red for Netflix, Blue for Prime Video).

KEYS FUNCTION



Originale		Sostituto	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/List		Shift + Guide / EPG / -/--
	0/Quick Access		0
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-

Originale		Sostituto	
	Home		Menu / Home
	Settings		Setup / OPT /
	Up		Up
	Left		Left
	Wheel Up		Shift + Up
	Right		Right
	OK		OK
	Wheel Down		Shift + Down
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/--
	Netflix		Shift + Red / Netflix /
	Source		AV / Input / RDS
	Prime Video		Shift + Blue / Prime
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

[illegible]

<https://tutti-i-telecomandi.it/it/LG/1059079-91524-telecomando-di-sostituzione-per-LG-AN-MR19BA-AKB75635301.html>.

Documents / Resources

	Mandis AKB75635301 Replacement Remote Control [pdf] Instructions AKB75635301 Replacement Remote Control, AKB75635301, Replacement Remote Control, Remote Control
	Mandis AKB75635301 Replacement Remote Control [pdf] Instructions AKB75635301 Replacement Remote Control, AKB75635301, Replacement Remote Control, Remote Control

References

- **Telecomando sostituito di LG AN-MR19BA (AKB75635301)**

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)