



Mandis AKB76039901 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AKB76039901 Replacement Remote Control Instructions 

Contents

- [1 Mandis AKB76039901 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Overview](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Mandis

Mandis AKB76039901 Replacement Remote Control



Product Information

Specifications

- **Model:** LG AKB76039901
- **Compatibility:** Original LG remote control replacement
- **Color:** Black
- **Power:** Requires 2 AAA batteries (not included)
- **Dimensions:** 6.5 x 2.0 x 0.8 inches

Product Usage Instructions

Power and Navigation

To power on the device, press the Power button located at the top of the remote control. Use the numeric buttons (1-9) to directly access channels or enter numbers. The Guide/List button allows quick access to the channel list or electronic program guide (EPG). The 0/Quick Access button provides additional quick access options.

Replacement Functions

If you are using this remote control as a replacement, it offers the same functionality as the original remote control. Use the Power button to turn on/off the device. The Guide/EPG button provides access to the channel guide or electronic program guide. The Fav/Marker button allows you to mark favorite channels or content. The PC Vol+ button controls the volume when using a connected PC.

Channel and Volume Control

Use the CH+ and CH- buttons to navigate through channels. The Page+ and PageMenu buttons allow you to navigate through different pages or menu options. The Mute button instantly mutes the audio, and the Vol+ and Vol- buttons control the volume level.

Home and Source Navigation

The CHHome button takes you back to the home screen or main menu. The Voice button activates voice control features, if supported. The Sources button allows you to switch between different input sources or devices.

Additional Controls

The Up, Down, Left, and Right buttons are used for navigation within menus and options. The OK button confirms selections or performs actions. The Back button takes you back to the previous screen or menu. The colored buttons (Red, Green, Yellow, Blue) may have specific functions depending on the device or application you are using.

FAQ (Frequently Asked Questions)

• Q: How do I replace the batteries in the remote control?

A: To replace the batteries, locate the battery compartment on the back of the remote control. Open the compartment and insert two AAA batteries, making sure to match the positive and negative ends correctly. Close the compartment securely.

• Q: Can this remote control be used with other LG devices?

A: Yes, this remote control is designed for compatibility with various LG devices. However, it is always recommended to check the product compatibility before making a purchase.

• Q: How do I program this remote control to work with my TV?

A: This remote control is pre-programmed for LG devices and should work without any additional programming. However, if it does not work with your specific TV model, you may need to follow the instructions provided by LG for programming a universal remote control.

Overview



Original		Replacement		Original		Replacement	
	Power		Power		CH-		CH- / Page-
	1		1		Home		Menu / Home
	2		2		Voice		Display / Media
	3		3		Sources		AV / Input / RDS
	4		4		Up		Up
	5		5		Left		Left
	6		6		Wheel Up		>> / Preset+
	7		7		Right		Right
	8		8		Wheel Down		I << / Preset-
	9		9		OK		OK
	Guide/List		Guide / EPG / -/-		Down		Down
	0/Quick Access		0		Back		Back / Return
	---/AD/SAP		Fav / Marker / PC		*		D.Menu / Top
	Vol+		Vol+		Red		Red / Netflix / Search
	CH+		CH+ / Page+		Green		Green / APP / Repeat
	Mute		Mute / Dimmer		Yellow		Yellow / YouTube / Repeat
	Vol-		Vol-		Blue		Blue / Prime Video / Random



[illegible]

<https://all-remote-controls.co.uk/en/LG/1066633-96562-replacement-remote-control-for-LG-AKB76039901.html>

Documents / Resources



[Mandis AKB76039901 Replacement Remote Control](#) [pdf] Instructions

AKB76039901 Replacement Remote Control, AKB76039901, Replacement Remote Control, R
emote Control, Control

References

- User Manual