



Mandis ALC001 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis ALC001 Remote Control Instructions 

Contents

- [1 Product Information](#)
- [2 Product Usage Instructions](#)
- [3 Overview](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



Mandis ALC001 Remote Control



Product Information

Specifications

- Product Name: ALCAD ALC001 Remote Control
- Model Number: ALC001
- Compatible with: ALCAD devices
- Color: Black
- Material: Plastic

Product Usage Instructions

Power

Press the “Power” button to turn the device on or off.

EPG

Press the “EPG” button to access the Electronic Program Guide.

Mute

Press the “Mute” button to mute the audio. Press again to unmute. The “Dimmer” button can be used to adjust the brightness of the display.

OPT

The “OPT” button is used for setup and configuration.

TV

The “TV” button allows you to switch between TV and Radio modes.

OK

Press the “OK” button to confirm a selection or perform an action.

Program

Use the numeric keypad (1-9, 0) to directly enter channel numbers for quick access.

Navigation Buttons

- **Up:** Press the “Up” button to navigate upwards in menus or increase volume.
- **Down:** Press the “Down” button to navigate downwards in menus or decrease volume.
- **Left:** Press the “Left” button to navigate left in menus or rewind content.
- **Right:** Press the “Right” button to navigate right in menus or fast forward content.

Volume Control

- **Vol+:** Press the “Vol+” button to increase the volume.
- **Vol-:** Press the “Vol-” button to decrease the volume.

Channel/Page Navigation

- **CH/Page+:** Press the “CH/Page+” button to switch to the next channel or page.
- **CH/Page-:** Press the “CH/Page-” button to switch to the previous channel or page.

Color Buttons

- **Red:** Press the “Red” button to access Netflix or perform a search.
- **Green:** Press the “Green” button to access APPs or repeat content.
- **Yellow:** Press the “Yellow” button to access YouTube or repeat content.
- **Blue:** Press the “Blue” button to access Prime Video or play content randomly.

Other Buttons

- **Recall:** Press the “Recall” button to return to the previous channel or exit a menu.
- **Exit:** Press the “Exit” button to cancel or clear an action.
- **Back:** Press the “Back” button to return to the previous menu or return to the previous screen.
- **Text:** Press the “Text” button to access text-based features or go to a specific page.
- **APP:** Press the “APP” button to shift between different applications or perform specific functions.
- **Shift +:** Use the combination of “Shift” and other buttons to access additional features.
- **Sub:** Press the “Sub” button to enable/disable subtitles or adjust equalizer settings.

Frequently Asked Questions (FAQ)

- **Q: Is the ALCAD ALC001 remote control compatible with all ALCAD devices?**

A: Yes, the ALCAD ALC001 remote control is compatible with all ALCAD devices.

- **Q: Where can I find a replacement remote control for my ALCAD device?**

A: You can purchase a replacement remote control for your ALCAD device from the following website: [ALCAD Replacement Remote Control](https://www.mandis.tv)

ALC001

Overview



Original		Replacement		Original		Replacement	
	Power		Power		EPG		Guide / EPG / -/-
	Mute		Mute / Dimmer		OPT		Setup / OPT /
	TV		TV/Radio /		OK		OK
	1		1		Up		Up
	2		2		Down		Down
	3		3		Left		Left
	4		4		Right		Right
	5		5		Vol+		Vol+
	6		6		Vol-		Vol-
	7		7		CH/Page+		CH+ / Page+
	8		8		CH/Page-		CH- / Page-
	9		9		Red		Red / Netflix / Search
	0		0		Green		Green / APP / Repeat
	Recall		Back / Return		Yellow		Yellow / YouTube / Repeat
	Exit		Exit / Cancel / Clear		Blue		Blue / Prime Video / Random
	List		Smart / List		Text		Text / Goto
	APP		Shift + Green / APP / Repeat		Sub		Subtitle / EQ



