



Mandis ALC001 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis ALC001 Remote Control Instructions 

Contents

- [1 Mandis ALC001 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Product Overview](#)
- [5 Remote Using Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis ALC001 Remote Control



Product Information

The ALCAD ALC001 remote control is a replacement remote control for the ALCAD ALC001 model. It is designed to be compatible with the original remote control and provides the same functionality.

Specifications

- **Model:** ALCAD ALC001
- **Compatibility:** Original and Replacement

Frequently Asked Questions

- **Q:** How do I turn off the device?
 - **A:** Press the Power button to turn off the device.
- **Q:** How do I navigate through the electronic program guide?
 - **A:** Press the EPG button to display the guide. Use the arrow buttons to navigate and press OK to select a program.
- **Q:** How do I adjust the volume?

- **A:** Use the Volume Up and Volume Down buttons to increase or decrease the volume level.
- **Q:** What do the color buttons do?
 - **A:** The color buttons have different functions depending on the context. They can be used to access specific apps or features like Netflix, YouTube, Prime Video, etc.
- **Q:** How do I access teletext services?
 - **A:** Press the Text/Go to button to access teletext services on your TV.

Product Usage Instructions

Power

- The Power button turns the device on or off.

EPG (Electronic Program Guide)

- The EPG button displays the electronic program guide on your TV screen.
- Use the arrow buttons to navigate through the guide and press OK to select a program.

Mute

- The Mute button mutes the audio. Press it again to unmute.
- The Dimmer function can be accessed by pressing the Mute button for a longer period of time.

OPT (Optical)

- The OPT button is used to select the optical input source on your TV or audio system.

TV

- The TV button switches the remote control to control your TV.
- Use this button to navigate through TV menus or adjust TV settings.

OK

- The OK button confirms your selection when navigating through menus or selecting options.

Program Up/Down

- The Program Up and Program Down buttons are used to navigate through TV channels or program lists.

Volume Up/Down

- The Volume Up and Volume Down buttons adjust the volume level of your TV or audio system.

Channel/Page Up/Down

- The Channel/Page Up and Channel/Page Down buttons allow you to switch between TV channels or scroll through pages.

Number Buttons

- The number buttons (0-9) are used to directly input channel numbers or navigate through menus by entering numeric values.

Color Buttons

- The color buttons (Red, Green, Yellow, Blue) have different functions depending on the context.
- They can be used to access specific apps or features like Netflix, YouTube, Prime Video, etc.

Recall/Exit

- The Recall/Exit button recalls the previous channel or exits from menus.
- It can also be used to cancel or clear certain actions.

List/Smart

- The List/Smart button displays a list of available options or activates the smart features of your TV.

Text/Goto

- The Text/Goto button allows you to access teletext services or jump to a specific location within a program.

APP

- The APP button provides quick access to apps or app-related functions on your TV.

Shift +

- The Shift + button is used in combination with other buttons to access additional functions or alternate commands.

Subtitles/EQ
















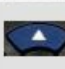



































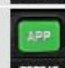



















- The Subtitles/EQ button activates subtitles during playback or adjusts the equalizer settings of your audio system.

Product Overview




Remote Using Instructions

Original / Replacement

	Power		Power		EPG		Guide / EPG / -/--
	Mute		Mute / Dimmer		OPT		Setup / OPT /
	TV		TV/Radio /		OK		OK
	1		1		Up		Up
	2		2		Down		Down
	3		3		Left		Left
	4		4		Right		Right
	5		5		Vol+		Vol+
	6		6		Vol-		Vol-
	7		7		CH/Page+		CH+ / Page+
	8		8		CH/Page-		CH- / Page-
	9		9		Red		Red / Netflix / Search
	0		0		Green		Green / APP / Repeat
	Recall		Back / Return		Yellow		Yellow / YouTube / Repeat
	Exit		Exit / Cancel / Clear		Blue		Blue / Prime Video / Random
	List		Smart / List		Text		Text / Goto
	APP		Shift + Green / APP /		Sub		Subtitle / EQ
				Menu			
						Menu / Home	
						Info / Angle	

<https://all-remote-controls.co.uk/en/ALCAD/1066585-79802-replacement-remote-control-for-ALCAD-ALC001-Alcad.html>

Documents / Resources

	<p>Mandis ALC001 Remote Control [pdf] Instructions</p> <p>ALC001 Remote Control, ALC001, Remote Control, Control, Remote</p>
-------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------

References

-  [Replacement remote control for ALCAD ALC001 \(Alcad\)](#)
- [User Manual](#)