



Mandis AXD7698 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AXD7698 Replacement Remote Control Instructions 

Contents

- [1 Mandis AXD7698 Replacement Remote Control Instructions](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 REPLACEMENT PARTS <https://all-remote-controls.co.uk/en/Pioneer/1060557-92667-replacement-remote-control-for-Pioneer-AXD7698.html>](#)
- [6 Read More About This Manual & Download PDF:](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Mandis AXD7698 Replacement Remote Control Instructions



Product Information

Specifications

- Model: Pioneer AXD7698
- Original Remote Control
- Replacement Remote Control available
- Compatible with various devices: BD, DVD, DVR, BDR, HDMI, TV, CD, NET, ADPT, iPod, USB, SAT, CBL, MHL, TUNER
- Input Select feature
- Status Volume control
- Power On/Off
- Multiple function buttons for various actions

Product Usage Instructions

- **Power On/Off**

To turn the device on or off, press the “Power” button.

- **Input Selection**

To select the desired input source, use the “Input Select” button.

- **Volume Control**

To adjust the volume level, use the “Volume+” and “Volume-” buttons.

- **Mute / Dimmer**

To mute the audio or adjust the display dimmer, use the “Mute / Dimmer” button.

FAQ

- **Q: Where can I find a replacement remote control for Pioneer AXD7698?**

A: You can find a replacement remote control for Pioneer AXD7698 [here](#).



Original		Replacement		Original		Replacement	
	Standby / On		Power		Volume-		Vol-
	BD	 + 	Shift + 5		Mute		Mute / Dimmer
	DVD	 + 	Shift + 2		Audio		Audio / Lang / i
	DVR / BDR	 + 	Shift + 7		Up		Up
	HDMI	 + 	Shift + 0		Video		Picture / Format
	TV	 + 	Shift + 1		Tools Menu		Setup / OPT /
	CD	 + 	Shift + 3		Left		Left
	NET	 + 	Shift + 9		Enter		OK
	ADPT		SRV + Guide / EPG / +		Right		Right
	iPod / USB	 + 	Shift + 8		Home Menu		Menu / Home
	SAT / CBL		Shift + Fav / Marker / PC		iPod Ctrl.		D.Menu / Top
	MHL	 + 	Shift + 4		Down		Down
	TUNER	 + 	Shift + 6		Return		Back / Return
	Input Select ↗		CH - / Page-		Features PHASE		Red / Netflix / Search
	Input Select ↘		CH + / Page+		Features ECO		Yellow / YouTube / Repeat
	i / Status		Info / Angle		MPX	 + 	Shift + Pause / Stop / Freeze
	Volume+		Vol+		Pause		Pause / Stop / Freeze



Original		Replacement		Original		Replacement	
	BAND		Shift + Play /		3		3
	Play		Play / Slow		+ Favorite		Fav / Marker / PC
	PTY		Shift + Stop /		Audio / THX		Sound / Title
	Stop		Stop / Hold		4		4
	Preset -		Shift + < / Preset		Signal Sel.		TV/Radio /
	I<<		I<< / Preset-		MCACC		Zoom / Size
	Preset+		Shift + > / Preset+		5		5
	>>I		>>I / Preset+		6		6
	Tune-		Shift + << /		CH. Level		Text / Goto
	<<		<< / Tune-		Disp / Auto		Display / Media
	Tune+		Shift + >> /		7		7
	>>		>> / Tune+		Speakers		Shift + Audio /
	Auto / ALC /		Subtitle / EQ		Dimmer		Shift + Audio /
	1		1		8		8
	Standard		Smart / List		9		9
	2		2		Sleep		Sleep / Timer
	Adv. Surr.		Eject / Surround		Repeat		Green / APP / Repeat

[illegible]



Original		Replacement		Original		Replacement	
	Standby / On		Power		Volume-		Vol-
	BD	 → 5	Shift + 5		Mute		Mute / Dimmer
	DVD	 → 2	Shift + 2		Audio		Audio / Lang L/R
	DVR / BDR	 → 7	Shift + 7		Up		Up
	HDMI	 → 0	Shift + 0		Video		Picture / Format
	TV	 → 1	Shift + 1		Tools Menu		Setup / OPT /
	CD	 → 3	Shift + 3		Left		Left
	NET	 → 9	Shift + 9		Enter		OK
	ADPT	 → SHFT + GUIDE	Shift + Guide / EPG / - / +		Right		Right
	iPod / USB	 → 8	Shift + 8		Home Menu		Menu / Home
	SAT / CBL	 → FWD	Shift + Fwd / Marker / PC		iPod Ctrl.		D.Menu / Top
	MHL	 → 4	Shift + 4		Down		Down
	TUNER	 → 6	Shift + 6		Return		Back / Return
	Input Select ↵	 → CH- / Page-	CH- / Page-		Features PHASE		Red / Netflix / Search
	Input Select ↵	 → CH+ / Page+	CH+ / Page+		Features ECO		Yellow / YouTube / Repeat
	i / Status	 → INFO	Info / Angle		MPX	 → Shift + Pause / Stop / Freeze	Shift + Pause / Stop / Freeze
	Volume+		Vol+		Pause		Pause / Step / Freeze



Original		Replacement		Original		Replacement	
	BAND	 + 	Shift + Play /		3		3
	Play		Play / Slow		+ Favorite		Fav / Marker / PC
	PTY	 + 	Shift + Stop /		Audio / THX		Sound / Title
	Stop		Stop / Hold		4		4
	Preset -	 + 	Shift + Preset-		Signal Sel.		TV/Radio /
	I<<	 + 	I<< / Preset-		MCACC		Zoom / Size
	Preset+	 + 	Shift + Preset+		5		5
	>>I	 + 	>>I / Preset+		6		6
	Tune-	 + 	Shift + << /		CH. Level		Text / Goto
	<<	 + 	<< / Tune-		Disp / Auto		Display / Media
	Tune+	 + 	Shift + >> /		7		7
	>>	 + 	>> / Tune+		Speakers	 + 	Shift + Audio / Large Vol
	Auto / ALC		Subtitle / EQ		Dimmer	 + 	Shift + Mute / Dimmer
	1		1		8		8
	Standard		Smart / List		9		9
	2		2		Sleep		Sleep / Timer
	Adv. Surr.		Eject / Surround		Repeat		Green / APP / Repeat

[illegible]

REPLACEMENT PARTS

<https://all-remote-controls.co.uk/en/Pioneer/1060557-92667-replacement-remote-control-for-Pioneer-AXD7698.html>

Documents / Resources

	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control

	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control
	Mandis AXD7698 Replacement Remote Control [pdf] Instructions AXD7698 Replacement Remote Control, AXD7698, Replacement Remote Control, Remote Control, Control

References

- [Replacement remote control for PIONEER AXD7698](#)
- [User Manual](#)