



## Mandis AXD7737 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AXD7737 Remote Control Instructions 



### AXD7737 Remote Control Instructions

#### Contents

[1 AXD7737 Remote  
Control](#)

[2 Documents / Resources](#)

[2.1 References](#)

### AXD7737 Remote Control



Pioneer AXD7737 (TV )



| Original       | Recharge                    | Original       | Recharge              |
|----------------|-----------------------------|----------------|-----------------------|
| Standby/on     | Power                       | Dimmer/Display | Display / Media       |
| Open/Close     | Eject / Surround            | Program        | TV/Radio /            |
| Disc/Bluetooth | 9                           | EQ             | Subtitle / EQ         |
| FM             | 6                           | Clock          | Shift + Sleep / Timer |
| Preset/Album   | CH+ / Page+                 | Sleep/Timer    | Sleep / Timer         |
| USB/Audio In   | 8                           |                |                       |
| <</Tune-       | << / Tune-                  |                |                       |
| Play           | Play / Slow                 |                |                       |
| Pause          | Pause / Step / Freeze       |                |                       |
| >>/Tune+       | >> / Tune+                  |                |                       |
| Preset/Album   | CH- / Page-                 |                |                       |
| Repeat         | Green / APP / Repeat        |                |                       |
| Vol+           | Vol+                        |                |                       |
| Stop           | Stop / Hold                 |                |                       |
| Vol-           | Vol-                        |                |                       |
| Shuffle        | Blue / Prime Video / Random |                |                       |
| Mute           | Mute / Dimmer               |                |                       |





|  | Original       | Recharge                    |  | Original       | Recharge              |
|--|----------------|-----------------------------|--|----------------|-----------------------|
|  | Standby/on     | Power                       |  | Dimmer/Display | Display / Media       |
|  | Open/Close     | Eject / Surround            |  | Program        | TV/Radio /            |
|  | Disc/Bluetooth | 9                           |  | EQ             | Subtitle / EQ         |
|  | FM             | 6                           |  | Clock          | Shift + Sleep / Timer |
|  | Preset/Album   | CH+ / Page+                 |  | Sleep/Timer    | Sleep / Timer         |
|  | USB/Audio In   | 8                           |  |                |                       |
|  | <</<<          | << / Tune-                  |  |                |                       |
|  | Play           | Play / Slow                 |  |                |                       |
|  | Pause          | Pause / Step / Freeze       |  |                |                       |
|  | >>/>>I         | >> / Tune+                  |  |                |                       |
|  | Preset/Album   | CH- / Page-                 |  |                |                       |
|  | Repeat         | Green / APP / Repeat        |  |                |                       |
|  | Vol+           | Vol+                        |  |                |                       |
|  | Stop           | Stop / Hold                 |  |                |                       |
|  | Vol-           | Vol-                        |  |                |                       |
|  | Shuffle        | Blue / Prime Video / Random |  |                |                       |
|  | Mute           | Mute / Dimmer               |  |                |                       |



[www.mandis.tv](http://www.mandis.tv)



<https://tout-telecommandes.fr/fr/Pioneer/1058392-65904-telecommande-de-replacement-pour-Pioneer-AXD7737-8.50.1.RCXEM222RR2.html>

## Documents / Resources



[Mandis AXD7737 Remote Control \[pdf\] Instructions](#)  
AXD7737 Remote Control, AXD7737, Remote Control, Control

## References

- [M Télécommande qui remplace PIONEER AXD7737 \(8.50.1.RCXEM222RR2\)](#)
- [User Manual](#)