



# Mandis AXIL RT8100M-2 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AXIL RT8100M-2 Remote Control Instructions 

## Contents

- [1 Mandis AXIL RT8100M-2 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)



**Mandis AXIL RT8100M-2 Remote Control**



## Product Information

### Specifications

- **Model:** RT8100M-2

### Product Usage Instructions

#### Power On/Off

- To power on the device, press the “Power” button located on both the original and substitute remote controls.
- To power off, press the same button again.

#### Open/Close Disc Tray

- For the original remote, press the “Open/Close” button to open or close the disc tray. The substitute remote uses the “Eject” button for the same function.

#### Volume Control

- Adjust the volume by using the “Vol+” and “Vol-” buttons on both the original and substitute remotes.

## Menu Navigation

- Navigate through the menu options using the directional buttons.

The original remote has dedicated buttons for specific functions like “Menu,” “Prog/EPG,” and “Display,” while the substitute remote uses corresponding buttons such as “Menu,” “Guide,” “Text,” “Sleep,” “Info,” and “Pre Ch.”

## Playback Controls

- Use the playback controls to control media playback. The original remote has buttons for “Play,” “Stop,” “Pause,” and “Forward,” while the substitute remote uses similar buttons labeled accordingly.
- The substitute remote also has an additional “Smart” button.

## Other Functions

- The remotes have additional buttons for various functions such as subtitles, zoom, language selection, repeat, angle, slow motion, and more.

These buttons are labeled differently on each remote but serve the same purpose.



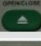
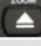
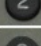
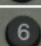
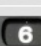
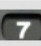

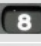
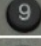
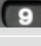
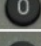
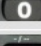

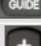
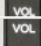




## FAQ (Frequently Asked Questions)

### Q: Where can I find a replacement remote for RT8100M-2?

- **A:** You can find a replacement remote for RT8100M-2 on the following **website:** [Replacement Remote for RT8100M-2](#)

## OVERVIEW



Originale	Sostituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	


Originale	Sostituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	



Originale		Sostituto	
	Down		Down
	Right/Fav+		Right
	Left/Fav-		Left
	Enter		Ok
	3D		3D
	Subtitle		Subt
	Zoom		Shift + Eject
	Mode		Smart
	Digest		Blue
	Language		Dual
	L/R		Media
	P/N		Red
	Repeat		Shift + Text
	A-B		Yellow
	Angle		Green
	Slow		Format

[RT8100M-2](#)

Documents / Resources

	<p><a href="#">Mandis AXIL RT8100M-2 Remote Control</a> [pdf] Instructions RT8100M-2, AXIL RT8100M-2 Remote Control, AXIL RT8100M-2, Remote Control, Control, R emote</p>
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [M Telecomando sostituto di RT8100M-2](#)
- [User Manual](#)