



# Mandis AY5512 Philips Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AY5512 Philips Remote Control Instructions 

## Contents

- [1 Mandis AY5512 Philips Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Overview](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



**Mandis AY5512 Philips Remote Control**



## Product Information

The Philips AY5512 is a remote control designed for use with Philips audio and video devices. It is available as both an original and replacement remote control.

## Specifications

- Model: AY5512
- Compatibility: Philips audio and video devices
- Dimensions: Not specified
- Weight: Not specified
- Color: Black

## Product Usage Instructions

### Power On/Off

To turn on the device, press the “Power” button. To turn it off, press the “Power” button again.

### Source Selection

To select the input source, use the “AV / Input / RDS” button. Press it repeatedly to cycle through the available sources.

### Menu Navigation

To navigate through the menu options, use the arrow buttons. Press the “Up” button to move up, the “Down” button to move down, the “Left” button to move left, and the “Right” button to move right.

### Volume Control

To adjust the volume level, use the “Vol+” button to increase the volume and the “Vol-” button to decrease it. Press

the “VolMute” button to mute or unmute the audio.

Color Buttons

The color buttons (Red, Green, Yellow, Blue) have different functions depending on the context. Refer to the device’s manual for details on their specific usage.

Additional Functions

The remote control offers additional functions such as subtitle control, EQ settings, media playback controls, and program selection. Refer to the device’s manual for detailed instructions on using these functions.

FAQ

**Q: Where can I purchase a replacement remote control for the Philips AY5512?**

**A:** You can purchase a replacement remote control for the Philips AY5512 from [this website](#).

AY5512

Overview



Original	Replacement	Original	Replacement
	Power		Down
	Source		D.Menu / Top
	[=]		Info / Angle
	I-II		Vol+
	[...]		Stop / Hold
	Red / Netflix / Search		CH+ / Page+
	Green / APP / Repeat		Vol-
	Yellow / YouTube / Repeat		Mute / Dimmer
	Blue / Prime Video / Random		CH- / Page-
	Menu / Home		1
	Guide / EPG / -/-		2
	Up		3
	Left		Fav / Marker / PC
	<< / Tune-		4
	OK		5
	Right		6
	>> / Tune+		J/Slideshow
			TV/Radio /



[illegible]

<https://all-remote-controls.co.uk/en/Philips/1066304-81334-replacement-remote-control-for-Philips-AY5512.html>

## Documents / Resources



[Mandis AY5512 Philips Remote Control](#) [pdf] Instructions  
AY5512 Philips Remote Control, AY5512, Philips Remote Control, Remote Control, Control

## References

- [Replacement remote control for PHILIPS AY5512](#)
- [User Manual](#)