



Mandis AY5512 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AY5512 Remote Control Instructions 

Contents

- [1 Mandis AY5512 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis AY5512 Remote Control



Product Information

Specifications

- **Product Name:** Philips AY5512
- **Model Number:** AY5512
- **Remote Control Type:** Replacement
- **Compatible with:** Philips AY5512
- **Website:** <https://all-remote-controls.co.uk/en/Philips/1066304-81334-replacement-remote-control-for-Philips-AY5512.html>

Product Usage Instructions

Power

- To turn on the device, press the Power button.

Source

- To select different input sources, use the AV / Input / RDS button.

Menu Navigation

- Use the D. Menu / Top button to access the main menu. Use the arrow buttons (Up, Down, Left, Right) to navigate through the menu options.

Volume Control

- To adjust the volume, use the Vol+ and Vol- buttons.

Color Buttons

- The color buttons (Red, Green, Yellow, Blue) have different functions depending on the context. Refer to the user manual for specific details.

Subtitle / EQ

- Use the Subtitle / EQ button to toggle subtitles or adjust equalizer settings.

Stop / Hold

- The Stop / Hold button can be used to stop playback or hold a specific function. Refer to the user manual for specific details.

EPG (Electronic Program Guide)

- Access the EPG by pressing the Guide / EPG button. Use the arrow buttons to navigate through the program guide.

FAQ

Q: Where can I find a replacement remote control for Philips AY5512?

- **A:** You can find a replacement remote control for Philips AY5512 at <https://all-remote-controls.co.uk/en/Philips/1066304-81334-replacement-remote-control-for-Philips-AY5512.html>

OVERVIEW



Original	Replacement
	
Power	Power
	
Source	AV / Input / RDS
	
[≡]	Text / Goto
	
I-II	Audio / Lang I/II
	
[...]	Subtitle / EQ
	
Red	Red / Netflix / Search
	
Green	Green / APP / Repeat
	
Yellow	Yellow / YouTube / Repeat
	
Blue	Blue / Prime Video / Random
	
Menu	Menu / Home
	
EPG	Guide / EPG / -/--
	
Up	Up
	
Left	Left
	
<<	<< / Tune-
	
OK	OK
	
Right	Right
	
>>	>> / Tune+

Original	Replacement
	
Down	Down
	
Option	D.Menu / Top
	
[i+]	Info / Angle
	
Vol+	Vol+
	
Stop	Stop / Hold
	
PR+	CH+ / Page+
	
Vol-	Vol-
	
Mute	Mute / Dimmer
	
PR-	CH- / Page-
	
1	1
	
2	2
	
3	3
	
FAV	Fav / Marker / PC
	
4	4
	
5	5
	
6	6
	
J/Slideshow	TV/Radio /



Original		Replacement	
	7		7
	8		8
	9		9
	Rotate		Display / Media
	Setup		Setup / OPT /
	0		0
	[< >]		Picture / Format
	Zoom		Zoom / Size

AY5512

Documents / Resources

	Mandis AY5512 Remote Control [pdf] Instructions AY5512 Remote Control, AY5512, Remote Control, Control
--	---

References

- [Replacement remote control for PHILIPS AY5512](#)
- [User Manual](#)

