



Mandis AY5512 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis AY5512 Replacement Remote Control Instructions 

Contents

- [1 Mandis AY5512 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 REPLACEMENT PARTS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Mandis AY5512 Replacement Remote Control



Product Information

Specifications

- **Product Model:** AY5512
- **Remote Control Type:** Replacement
- **Compatible With:** Philips devices
- **Product Dimensions:** N/A
- **Weight:** N/A

Product Usage Instructions

- **Power**

To power on the device, press the “Power” button. To power off the device, press the “Power” button again.

- **Source Selection**

To select the desired source, use the “AV / Input / RDS” button. Press the button repeatedly to cycle through available sources.

- **Main Menu Navigation**

Use the arrow buttons (Up, Down, Left, Right) to navigate through the main menu options.

- **Channel Navigation**

To change channels, use the “CH+” and “CH-” buttons. Press the “Page+” and “Page-” buttons to navigate through pages of channels.

- **Volume Control**

To adjust the volume level, use the “Vol+” and “Vol-” buttons.

• Color Buttons

The color buttons (Red, Green, Yellow, Blue) have different functions depending on the context. Refer to the user manual for specific instructions related to color button usage.

• Menu and Home Buttons

The “Menu” button is used to access the menu options within different applications or settings. The “Home” button takes you back to the main home screen.

• Other Functions

Refer to the user manual for detailed instructions on other functions and features of the remote control.

FAQ

• Q: Where can I find a replacement remote control for Philips AY5512?

A: You can find a replacement remote control for Philips AY5512 on the following website: [Replacement Remote Control for Philips AY5512](#)

REPLACEMENT PARTS



Original	Replacement	Original	Replacement
	Power		Down
	Source		D.Menu / Top
	[=]		Info / Angle
	Text / Goto		Vol+
	Audio / Lang I/II		Stop / Hold
	Subtitle / EQ		CH+ / Page+
	Red / Netflix / Search		Vol-
	Green / APP / Repeat		Mute / Dimmer
	Yellow / YouTube / Repeat		CH- / Page-
	Blue / Prime Video / Random		1
	Menu / Home		2
	Guide / EPG / -/-		3
	Up		Fav / Marker / PC
	Left		4
	<< / Tune-		5
	OK		6
	Right		7
	>> / Tune+		8
	TV/Radio /		9



