



Mandis BM32C1 Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis BM32C1 Remote Control Instructions 

Contents

- [1 Mandis BM32C1 Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Overview](#)
- [5 Remote Using Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Mandis

Mandis BM32C1 Remote Control



Product Information

Specifications

- **Power:** 16:9 Wide
- **Red:** Green / Subtitle
- **Green:** Subtitle
- **Yellow:** FAV
- **Blue:** EPG
- **I>I:** List
- **>I:** List
- **Radio >>:** Radio Play
- **Index:** Sostituto Power Format

FAQ

- **Q:** Where can I find a replacement remote control for Stream System BM32C1?
 - **A:** You can find a replacement remote control for Stream System BM32C1 at the following website:
Replacement Remote Control for Stream System BM32C1.

Product Usage Instructions

Power

- To turn on the device, press the Power button.

Subtitle

- To activate the Subtitle function, press the Green button.

Favorites

- To access your favorite channels, press the Yellow button.

Electronic Program Guide (EPG)

- To access the EPG, press the Blue button.

List

- To navigate through a list, press the |>| or >| buttons.

Radio Play

- To listen to radio stations, press the Radio >> button.

Sostituto Power Format

- This button has multiple functions – Sostituto, Power, and Format. Refer to the user manual for specific instructions on how to use these functions.

Pause / Zoom

- To pause or zoom in, press the Pause / Zoom button.

Stop / Reveal

- To stop playback or reveal hidden information, press the Stop / Reveal button.

Back / TTX

- To go back or access teletext, press the Back / TTX button.

Info

- To view additional information, press the Info button.

Rec

- To start recording, press the Rec button.

Smart

- To access smart features, press the Smart button.

Navigation

- Use the Up, Right, Down, and Left buttons to navigate through menus and options.

OK

- To confirm a selection, press the OK button.

Source

- To change the input source, press the Source button.

Menu

- To access the main menu, press the Menu button.

Volume

- To adjust the volume, use the Vol + and Vol – buttons.

Overview



Remote Using Instructions

Original / Replacement

	Power		Power
	16:9 Wide		Format
	Red		Red
	Green / Subtitle		Green
	Green / Subtitle		Subt
	Yellow / FAV		Yellow
	Yellow / FAV		Shift + Pre Ch
	Blue / EPG		Blue
	Blue / EPG		Shift + Guide
	I<< / Hold		I<<
	>>I / List		List
	>>I / List		>>I
	<< / Language		Dual
	<< / Language		<<
	>> / Radio		>>
	>> / Radio		TV/R
	Play / Index		Play

	Pause / Zoom		Pause
	Pause / Zoom		Eject
	Stop / Reveal		Stop
	Back / TTX		Back
	Back / TTX		Text
	Info		Info
	Rec		Rec
	L / R	 +  Shift + Dual	
	Smart S		Smart
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Source		AV
	Menu		Menu
	Vol +		Vol +

	Vol -		Vol -
	F1		Media
	Mute		Mute
	CH +		Ch +
	CH -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Guide		Guide

<https://tutti-i-telecomandi.it/Stream-System/1058820-82675-telecomando-di-sostituzione-per-Stream-System-BM32C1.html>

	Mandis BM32C1 Remote Control [pdf] Instructions BM32C1 Remote Control, BM32C1, Remote Control, Control
	Mandis BM32C1 Remote Control [pdf] Instructions BM32C1 Remote Control, BM32C1, Remote Control, Control

References

- [M Télécommande qui remplace STREAM SYSTEM BM32C1](#)
- [M Telecomando sostituto di STREAM SYSTEM BM32C1](#)
- [User Manual](#)