



Mandis BN59-00403B Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis BN59-00403B Remote Control Instructions 

Contents

- [1 Mandis BN59-00403B Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 OVERVIEW](#)
- [5 BUTTON FUNCTION](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



Mandis BN59-00403B Remote Control



Product Information

Specifications

- Model: Samsung BN59-00403B
- Type: Original / Replacement
- Power: 1, 2, 3, 4, 5, 6, 7, 8, 9, 0
- Buttons: [+]/-, Recall, Auto, Pre-C, MuHte, Vol+, VolP+, Pre Ch, Mute, Vol, Ch, [..]/Source, [i]/Menu (+), [?]/Info/[+], Exit, Up, Right, Down, Left, Enter, TTX/MIX, [o]/Dual I-II, [], [], Sleep, Red, Green, Ch AV, Menu, Media Info, Exit, Up, Right, Down, Left, Ok, Text Dual Format
- Colors: Yellow, Blue/P.Mode

Product Usage Instructions

Original Remote Control

1. Power: Press the corresponding number buttons (1-9) or the '0' button.
2. Volume Control: Use the Vol+ and Vol- buttons to increase or decrease the volume.
3. Channel Selection: Use the Ch+ and Ch- buttons to navigate through channels.

4. Mute: Press the Mute button to mute or unmute the audio.
5. Input Selection: Use the [..]/Source button to switch between different input sources.
6. Menu Navigation: Use the [i]/Menu (+) button to access and navigate through the menu options.
7. Information Display: Press the [?]/Info/[+] button to view additional information about the current program or content.
8. Navigation and Selection: Use the arrow buttons (Up, Down, Left, Right) to navigate through options and press the Enter button to make a selection.
9. Teletext/Mix: Use the TTX/MIX button to access Teletext or mix audio and video sources.
10. Dual Audio: Press the [o]/Dual I-II button to switch between dual audio channels.
11. Sleep Timer: Use the [] []/Sleep buttons to set a sleep timer for the TV.
12. Color Buttons: The Red and Green buttons have specific functions depending on the context.

Replacement Remote Control

1. Power: Press the corresponding number buttons (1-9) or the '0' button.
2. Volume Control: Use the Vol+ and Vol- buttons to increase or decrease the volume.
3. Channel Selection: Use the Ch+ and Ch- buttons to navigate through channels.
4. Mute: Press the Mute button to mute or unmute the audio.
5. Input Selection: Use the Ch AV button to switch between different input sources.
6. Menu Navigation: Use the Menu button to access and navigate through the menu options.
7. Information Display: Press the Info button to view additional information about the current program or content.
8. Navigation and Selection: Use the arrow buttons (Up, Down, Left, Right) to navigate through options and press the Ok button to make a selection. Teletext/Mix: Use the Text button to access teletext or mix audio and video sources.
9. Dual Audio: Press the Dual button to switch between dual audio channels.
10. Format: Use the Dual Format button to switch between different video formats.
11. Sleep Timer: Use the Sleep button to set a sleep timer for the TV.
12. Color Buttons: The Red and Green buttons have specific functions depending on the context.

OVERVIEW



BUTTON FUNCTION

Original		Replacement	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡+]/-/-		Guide
	Recall/Auto/Pre-C		Pre Ch
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

	P-		Ch -
	[≡..]/Source		AV
	[≡i]/Menu		Menu
	(+)		Media
	[≡?]/Info/[+]		Info
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	TTX/MIX		Text
	[≡o]/Dual I-II		Dual
	[≡♦]		Format
	[≡⏸]/Sleep		Sleep
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/P.Mode		Blue

FAQ

Q: Where can I find a replacement remote control for Samsung BN59-00403B?

A: You can find a replacement remote control for Samsung BN59-00403B at this link.

<https://all-remote-controls.co.uk/en/Samsung/1055619-24819-replacement-remote-control-for-Samsung-BN59-00403B.html>
[Samsung BN59-00403B](#)

Documents / Resources

	Mandis BN59-00403B Remote Control [pdf] Instructions BN59-00403B Remote Control, BN59-00403B, Remote Control, Control
	Mandis BN59-00403B Remote Control [pdf] Instructions BN59-00403B Remote Control, BN59-00403B, Remote Control, Control
	Mandis BN59-00403B Remote Control [pdf] Instructions BN59-00403B Remote Control, BN59-00403B, Remote Control, Control

References

- [M Replacement remote control for SAMSUNG BN59-00403B](#)
- [User Manual](#)