



Mandis BN59-01178B Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis BN59-01178B Remote Control Instructions 

Contents

- [1 Mandis BN59-01178B Remote Control](#)
- [2 Specifications](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)



Mandis BN59-01178B Remote Control

 


Specifications

- **Model:** Samsung BN59-01178B
- **Compatibility:** Original remote control for Samsung TVs
- **Power Source:** 2x AAA batteries (not included)
- **Color:** Black

Samsung BN59-01178B



Original	Replacement	Original	Replacement
 Tv Power	 Power	 Mute	 Mute
 STV Power	 Shift + Power	 CH List	 List
 Source	 AV	 PR+	 Ch +
 1	 1	 PR-	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Smart Hub	 Smart
 4	 4	 Guide	 Guide
 5	 5	 Tools	 Options
 6	 6	 Info	 Info
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 TTX/MIX	 Text	 Enter	 Ok
 PRE-CH	 Pre Ch	 Return	 Back
 Vol+	 Vol +	 Exit	 Exit
 Vol-	 Vol -	 Red/A	 Red





Original	Replacement	Original	Replacement
	Green/B		Green
	Yellow/C		Yellow
	Blue/D		Blue
	Search		TV/R
	Ball		Media
	Keypad		D. Menu
	E-Manual		Shift + D. Menu
	P.Size		Format
	AD/Subt		Subt
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop



<https://all-remote-controls.co.uk/en/Samsung/1038693-23859-replacement-remote-control-for-Samsung-TM1250A-BN59-01178B.html>

Documents / Resources

	Mandis BN59-01178B Remote Control [pdf] Instructions BN59-01178B, TM1250A, BN59-01178B Remote Control, BN59-01178B, Remote Control, Control
---	--

References

- [Replacement remote control for SAMSUNG TM1250A \(BN59-01178B\)](#)
- [User Manual](#)