



Mandis BOSE RC18T1-27 Remote Control Instruction Manual

[Home](#) » [Mandis](#) » Mandis BOSE RC18T1-27 Remote Control Instruction Manual 



Contents

- [1 BOSE RC18T1-27 Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

BOSE RC18T1-27 Remote Control

[BOSE RC18T1-27](#)



Original	Recharge
On / Off	Power
Mute All	Audio / Lang I/II
Mute	Mute / Dimmer
CD-DVD	Shift + 3
FM-AM	Shift + 6
AUX	Shift + 7
TV	Shift + 1
CBL-SAT	Shift + 0
VCR	Shift + 4
Up / Tune +	Up
DVD Menu	D.Menu / Top
Settings	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Guide	Guide / EPG / -/
System	Menu / Home

Original	Recharge
Down / Tune -	Down
Exit	Exit / Cancel / Clear
Track/Chap./CH +	CH+ / Page+
Volume +	Vol+
Track/Chap./CH -	CH- / Page-
Volume -	Vol-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
I<< / Seek -	I<< / Preset-
I<< / Seek -	<< / Tune-
>>I / Seek +	>> / Tune+
>>I / Seek +	>>I / Preset+
Shuffle / Presets	Red / Netflix / Search
Repeat / Presets	Blue / Prime Video / Random
1	1
2	2



Original	Recharge
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Info	Info / Angle

Original	Recharge
----------	----------



<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>

Documents / Resources



[Mandis BOSE RC18T1-27 Remote Control](#) [pdf] Instruction Manual
BOSE RC18T1-27 Remote Control, BOSE RC18T1-27, Remote Control, Control

References

- [M Télécommande qui remplace BOSE RC18T1-27](#)
- [User Manual](#)