



# Mandis BOSE RC18T1-27 Remote Control Replacement Instructions

[Home](#) » [Mandis](#) » Mandis BOSE RC18T1-27 Remote Control Replacement Instructions 

## Contents

- [1 Mandis BOSE RC18T1-27 Remote Control Replacement](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 INSTRUCTIONS](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)



**Mandis BOSE RC18T1-27 Remote Control Replacement**



## Product Information

The BOSE RC18T1-27 is a remote control designed for use with various BOSE audio and video devices. It features a compact and ergonomic design that allows for easy handling and navigation.

## Specifications

- **Model:** RC18T1-27
- **Compatibility:** BOSE audio and video devices
- **Design:** Compact and ergonomic

## Product Usage Instructions

- **Power On/Off**

To power on or off the device, press the “On/Off” button located at the top of the remote control.

- **Mute Control**

To mute or unmute the audio, use the “Mute” button located towards the center of the remote control. Pressing it once will mute the audio, and pressing it again will unmute it.

- **Source Selection**

To select different audio or video sources, use the corresponding buttons on the remote control. The available sources include CD/DVD, FM/AM, AUX, TV, CBL-SAT, and VCR.

- **Navigation and Menu Control**

The remote control features directional buttons (Up, Down, Left, Right) for navigating menus and settings. Use the directional buttons to move through menus and settings, and press the “Enter” button to make selections.

- **Volume Control**

To adjust the volume level, use the “Volume +” and “Volume -” buttons located towards the bottom of the remote control. Pressing the “Volume +” button will increase the volume, while pressing the “Volume -” button will decrease it.

- **Playback Control**

The remote control allows for easy control of playback functions such as play, pause, stop, and track/chapter selection. Use the corresponding buttons on the remote control to control playback according to your device's capabilities.

## Frequently Asked Questions (FAQ)

### 1. Q: What devices are compatible with the BOSE RC18T1-27 remote control?

A: The BOSE RC18T1-27 remote control is compatible with a range of BOSE audio and video devices.

### 2. Q: Where can I find a replacement for the BOSE RC18T1-27 remote control?

A: You can find a replacement for the BOSE RC18T1-27 remote control on the following website:

<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>

## BOSE RC18T1-27

## INSTRUCTIONS



Original	Rechange
On / Off	Power
Mute All	Audio / Lang I/II
Mute	Mute / Dimmer
CD-DVD	Shift + 3
FM-AM	Shift + 6
AUX	Shift + 7
TV	Shift + 1
CBL-SAT	Shift + 0
VCR	Shift + 4
Up / Tune +	Up
DVD Menu	D.Menu / Top
Settings	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Guide	Guide / EPG / -/-
System	Menu / Home

Original	Rechange
Down / Tune -	Down
Exit	Exit / Cancel / Clear
Track/Chap./CH +	CH+ / Page+
Volume +	Vol+
Track/Chap./CH -	CH- / Page-
Volume -	Vol-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
I<< / Seek -	I<< / Preset-
I<< / Seek -	<< / Tune-
>>I / Seek +	>> / Tune+
>>I / Seek +	>>I / Preset+
Shuffle / Presets <-	Red / Netflix / Search
Repeat / Presets ->	Blue / Prime Video / Random
1	1
2	2





	Original	Recharge		Original	Recharge
3	3	3			
4	4	4			
5	5	5			
6	6	6			
7	7	7			
8	8	8			
9	9	9			
0	0	0			
Info	Info	Info / Angle			



<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>

## Documents / Resources

	<a href="#">Mandis BOSE RC18T1-27 Remote Control Replacement</a> [pdf] Instructions BOSE RC18T1-27 Remote Control Replacement, BOSE RC18T1-27, Remote Control Replace ment, Control Replacement
---	---

## References

- [M Télécommande qui remplace BOSE RC18T1-27](#)
- [User Manual](#)