



Mandis BOSE RC18T1-27 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis BOSE RC18T1-27 Replacement Remote Control Instructions 

Mandis BOSE RC18T1-27 Replacement Remote Control



Contents

 
 
 
- [1 Remote Control Instructions](#)
- [2 Customer Support](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Remote Control Instructions



 
 
 
 
 
Original

 
 
Re change

	On / Off		Power
	Mute All		Audio / Lang I/II
	Mute		Mute / Dimmer
	CD-DVD		+  Shift + 3
	FM-AM		+  Shift + 6
	AUX		+  Shift + 7
	TV		+  Shift + 1
	CBL-SAT		+  Shift + 0
	VCR		+  Shift + 4

 Up / Tune +	 Up
 DVD Menu	 D.Menu / Top
 Settings	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Guide	 Guide / EPG / -/--
 System	 Menu / Home

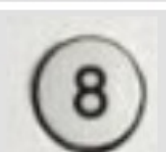 
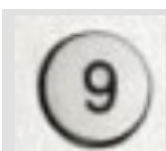 
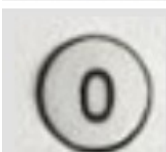 
Original	Re change
----------	-----------

 Down / Tune -	 Down
 Exit	 Exit / Cancel / Clear
 Track/Chap./CH +	 CH+ / Page+
 Volume +	 Vol+
 Track/Chap./CH -	 CH- / Page-
 Volume -	 Vol-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow

 Seek I<< / Seek -	 I<< / Preset-
 Seek I<< / Seek -	 << / Tune-
 Seek >>I / Seek +	 >> / Tune+
 Seek >>I / Seek +	 >>I / Preset+
 Shuffle / Presets <--	 Red / Netflix / Search
 Repeat / Presets -->	 Blue / Prime Video / Random
 1	 1
 2	 2





Original	Re change
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info / Angle



Customer Support

[BOSE RC18T1-27](https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html)

<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>



Documents / Resources



[Mandis BOSE RC18T1-27 Replacement Remote Control](#) [pdf] Instructions

BOSE RC18T1-27 Replacement Remote Control, BOSE RC18T1-27, Replacement Remote Control, Remote Control

References

- [M Télécommande qui remplace BOSE RC18T1-27](#)
- [User Manual](#)